



# Canon EOS Rebel T2i Hot Shoe Replacement

This guide will show you how to replace the hot shoe, which is used to mount an external flash.

Written By: Jacob Jaskolka



## INTRODUCTION

The hot shoe can become worn or dented, causing the external flash to become unstable. External flash devices are very expensive, and they would most likely break if they fell off of the hot shoe while the camera being used. Replacing a bad hot shoe is a quick and easy repair that ensures that the fancy and expensive external flash you own is securely attached to your camera.

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Hot Shoe



- Using the flat end of the spudger, carefully pry the rear part of the hot shoe baseplate upward.
- Pull the spudger backwards to remove the base plate.
- Removing this plate reveals the mounting screws for the hot shoe.

## Step 2



- To remove the hot shoe, unscrew the 4 mounting screws holding it in place.

## Step 3



- With the screws removed, the hot shoe can now be lifted out of place.

To reassemble your device, follow these instructions in reverse order. When tightening screws that hold the hot shoe in place, be very careful to not scratch the rail of the hot shoe. If the rail of the hot shoe has any scratches or dents, it can be more difficult to mount the external flash.