



Canon EOS Rebel T4i Flash Replacement

In this guide, users will be able to take apart the flash piece of the camera.

Written By: Jordan Rabold



INTRODUCTION

This guide details how to replace the flash bulb of this camera.



TOOLS:

- [Tweezers](#) (1)
 - [Flush Wire Cutters](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Battery



- Locate the battery cover at the bottom of the camera.
- Pull down on the black tab to open the cover.

Step 2



- Push the grey tab on the right side of the battery.
- Remove the battery from the slot.

Step 3 — Flash



- Using the Phillips screwdriver, unscrew the two 4.9mm Phillips head screws which are located underneath the flash.

Step 4



- Remove the covering.

Step 5



- Use the tweezers to remove the excess glue around the wiring. This will allow you to cut the wire and remove the light in the next step.

Step 6



- Use the wire cutters to cut the wiring connected to the flash.

To reassemble your device, follow these instructions in reverse order.