



Canon EOS Rebel T4i LCD Replacement

In this guide, users will learn how to repair the LCD screen in their camera.

Written By: Jordan Rabold



INTRODUCTION

Using these instructions, we'll make it easy and simple for you to replace the LCD in your Canon camera.

TOOLS:

- [Phillips #000 Screwdriver \(1\)](#)

Step 1 — Battery



- Locate the battery cover at the bottom of the camera.
- Pull down on the black tab to open the cover.

Step 2




- Push the grey tab on the right side of the battery.
- Remove the battery from the slot.

Step 3 — LCD





- Remove the six screws on the housing of the LCD.
 - Four 3.1mm Phillips screws on the side with the hinge.
 - Two 2.7mm Phillips screws

Step 4

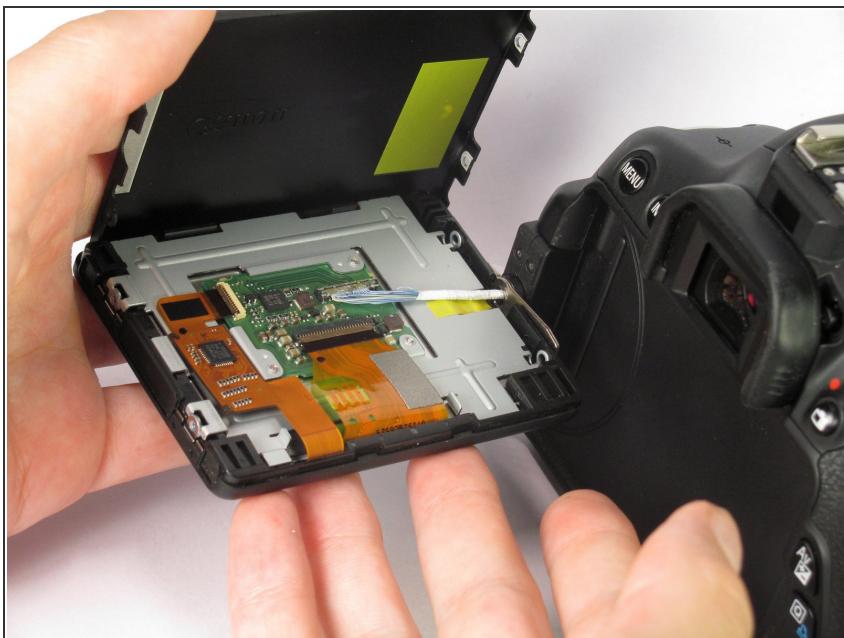

- Remove the plastic back of the LCD.

Step 5

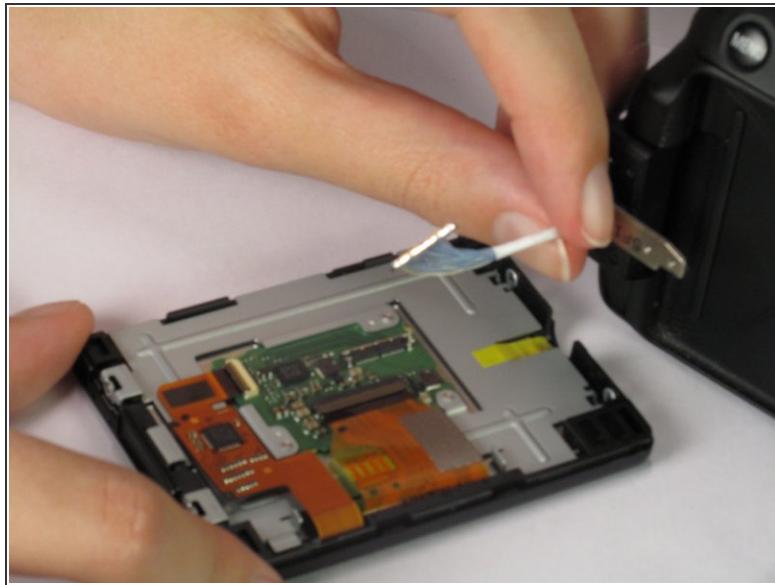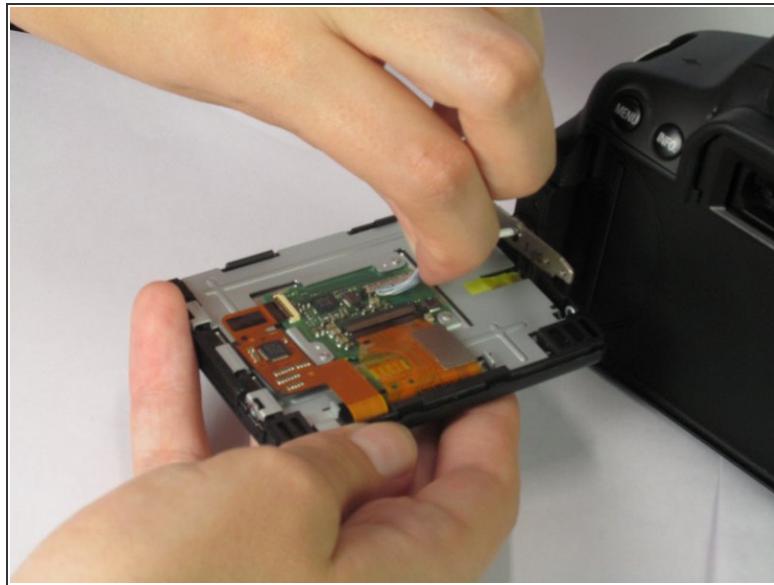

- Unplug the blue cable attached to the back of the LCD.

To reassemble your device, follow these instructions in reverse order.