



Canon EOS Rebel T5 Battery Replacement

This guide will show the reader how to remove and replace the battery for their Canon EOS Rebel T5 camera.

Written By: Austin Tucker



INTRODUCTION

Whether you have a faulty battery, or would simply like to carry around a few extra for an extended outing, this guide will show you how to switch them out.

TOOLS:

- Fingers (1)

Step 1 — Battery



- Lay the camera on its back so that the card/battery door is facing you.
- Using your fingernail, slide the tab on the battery door up to release the battery door latch.

Step 2



- Lift the now free card/battery door to reveal the battery compartment.
- Push the gray lever to the right side so that the battery can be removed and replaced with a new one.

To reassemble your device, follow these instructions in reverse order.