



Canon EOS Rebel XSi Back Panel Replacement

Remove and replace the back panel on the Rebel XSi

Written By: Erik Mork



INTRODUCTION

This replacement guide shows how to remove this device's back panel. This step is necessary to replace many internal components of the camera.

TOOLS:

- [Phillips #000 Screwdriver \(1\)](#)

Step 1 — Back Panel



- Squeeze the eyepiece between your index finger and thumb and lift up and off

Step 2



- Using the PH000 screwdriver head, remove the four 4 mm screws on the bottom of the camera

Step 3




- On the right side of the camera (from the LCD screen), use the PH000 screwdriver head to remove the two 3mm screws

Step 4



- Remove grip by slowly peeling off

Step 5

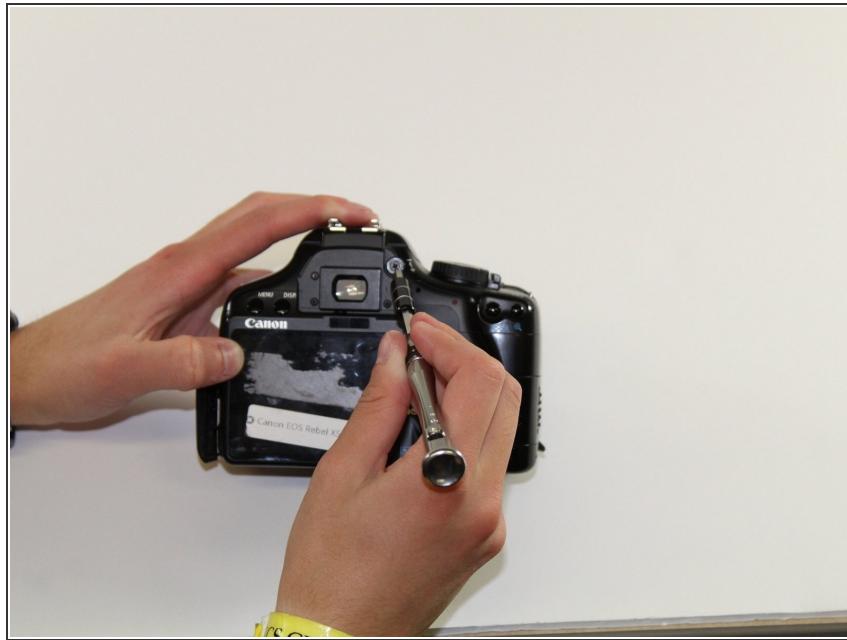

- Using the PH000 screwdriver, remove the four 4mm screws behind the eyepiece

Step 6




- On the left side of the camera (from the LCD screen), use the PH000 screwdriver head to remove one 4 mm screw

Step 7



- Remove side panel by lifting off with fingers

Step 8

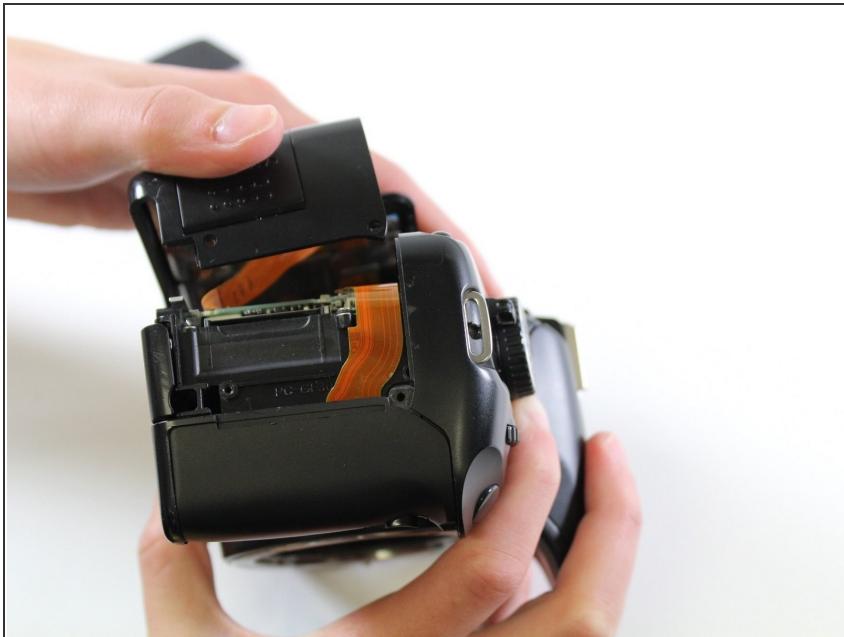

- Use hands to pry off the back panel

To reassemble your device, follow these instructions in reverse order.