



# Canon EOS Rebel XSi LCD Screen Replacement

Use this guide to replace a broken or faulty LCD screen.

Written By: Erik Mork



## INTRODUCTION

This replacement guide shows how to remove the camera's LCD screen. The back panel must be removed before hand.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Back Panel



- Squeeze the eyepiece between your index finger and thumb and lift up and off

## Step 2



- Using the PH000 screwdriver head, remove the four 4 mm screws on the bottom of the camera

## Step 3




- On the right side of the camera (from the LCD screen), use the PH000 screwdriver head to remove the two 3mm screws

## Step 4



- Remove grip by slowly peeling off

## Step 5

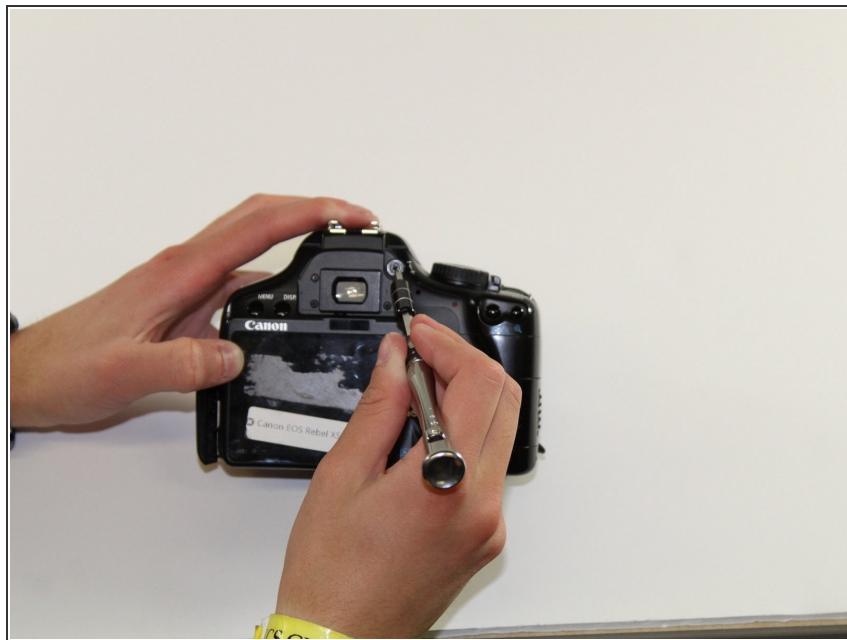

- Using the PH000 screwdriver, remove the four 4mm screws behind the eyepiece

## Step 6




- On the left side of the camera (from the LCD screen), use the PH000 screwdriver head to remove one 4 mm screw

## Step 7




- Remove side panel by lifting off with fingers

## Step 8

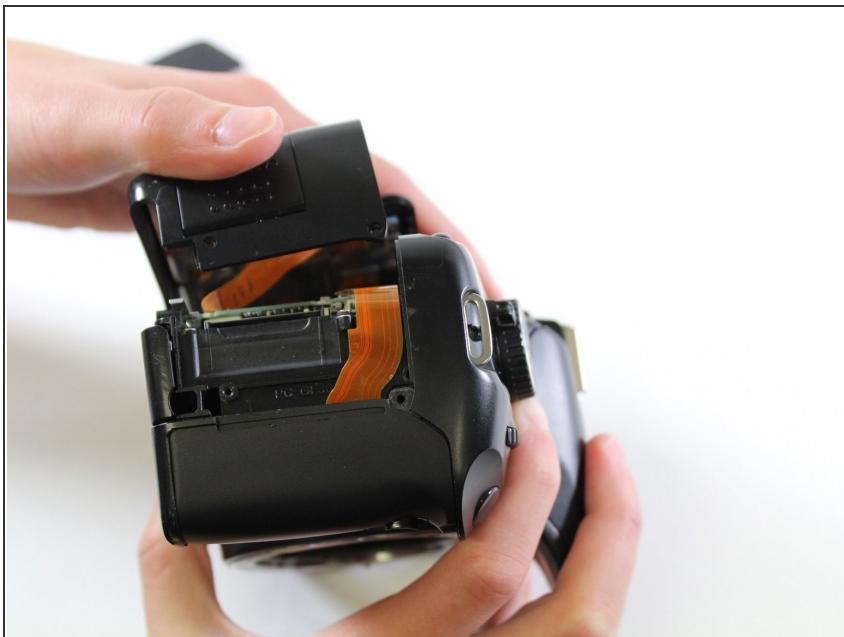


- Use hands to pry off the back panel

## Step 9 — LCD Screen

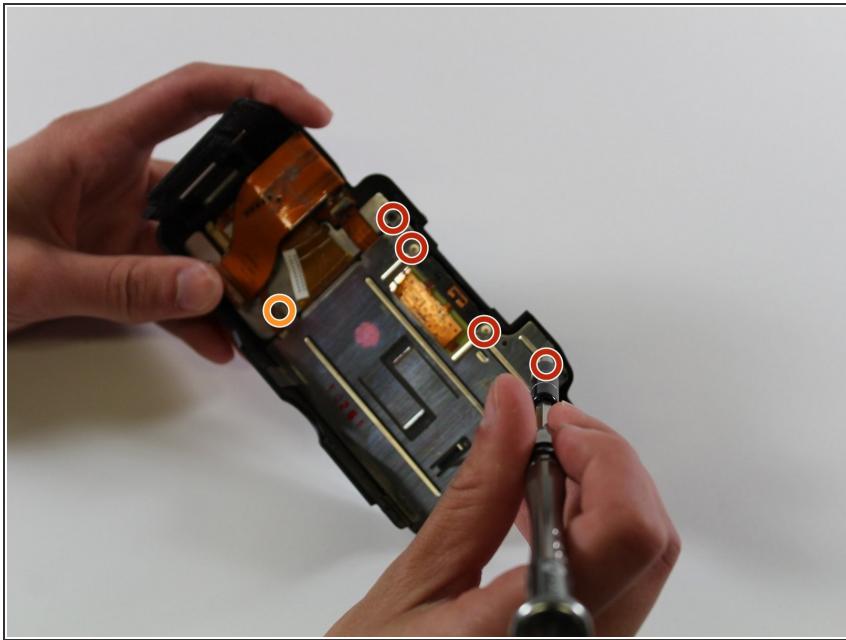


- Using the PH00 screwdriver head, unscrew four 4 mm screws and one 2 mm screw

## Step 10

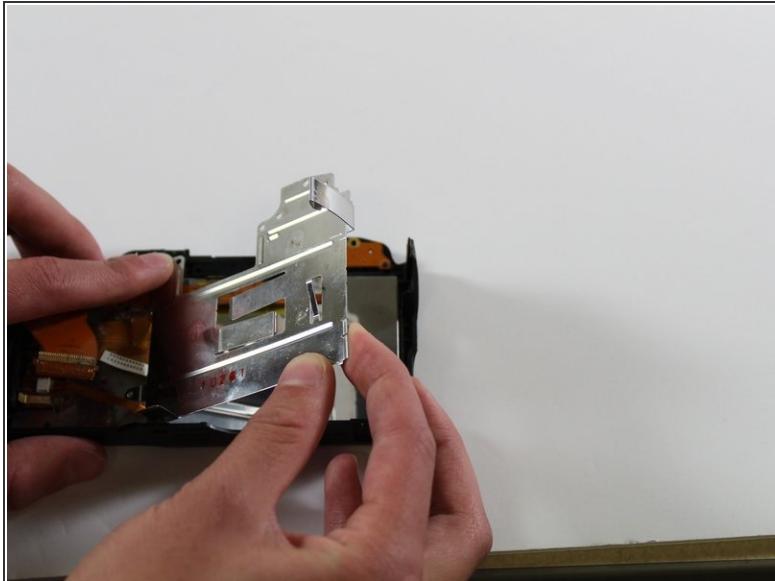


- Remove the metal plate covering inside of the LCD screen

## Step 11

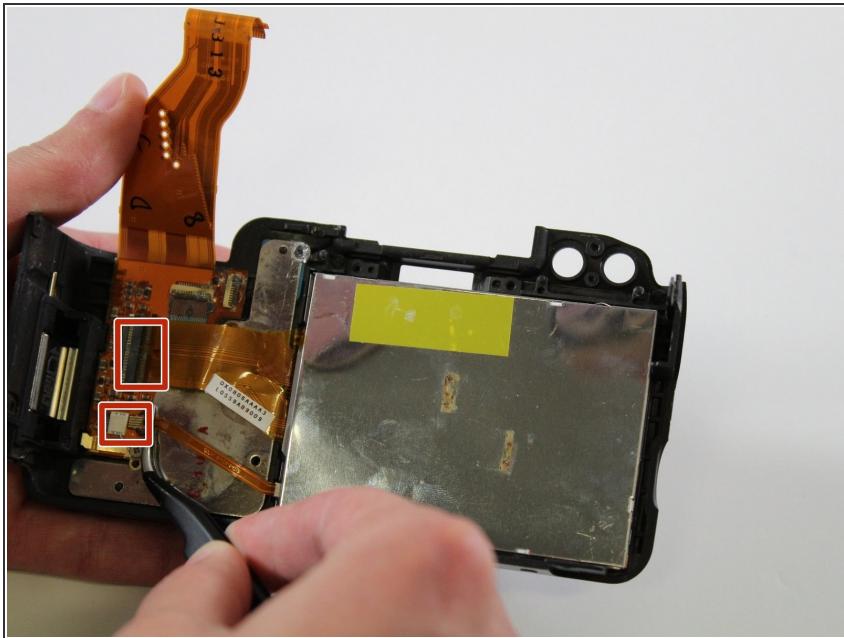

- Carefully disconnect the circuitry sheets from the white plastic bases

## Step 12

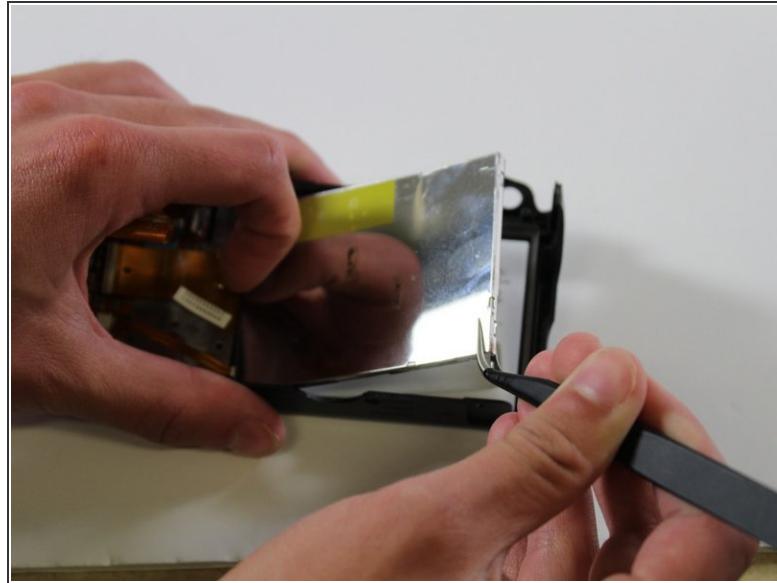

- Using the plastic spudger, carefully pry out the LCD screen from the back panel

To reassemble your device, follow these instructions in reverse order.