



Canon EOS Rebel XTi Battery Replacement

To avoid electric shock or a short circuit of the system, remove primary and secondary batteries.

Written By: Nicholas Abate



INTRODUCTION

The primary and secondary batteries should be removed prior to performing any maintenance or repairs on the camera. This will ensure safety to both the device and user.

Step 1 — Battery



- Place the camera upside down, and position it to where the back of the camera is visible.

Step 2



- Pull the orange tab to the right to release the primary battery.

Step 3



- To remove the secondary battery, reposition the camera to where the display screen is facing upwards.
- Place your finger inside the empty battery compartment and pull away from the camera on the ridged battery tab.

To reassemble your device, follow these instructions in reverse order.