



# Canon FS30 Memory Card Replacement

This guide will show the reader how to remove the memory card of a Canon FS30 camcorder using no tools.

Written By: Emanuel Keller



## INTRODUCTION

If your camcorder's memory card requires replacement, this guide will be easy to follow and will take no more than one minute to complete.

## Step 1 — Memory Card



- Locate battery compartment cover. Turn the device over and locate the battery compartment cover.
- Open Battery Compartment Cover. Place a finger or thumb on the textured section of the battery compartment cover and push forward until you hear a click. Then lift the battery compartment cover.

## Step 2



- Locate the memory card and press it until you hear a click.
- On removing your finger, the memory card should pop out.
- Remove the memory card.

To reassemble your device, follow these instructions in reverse order.