


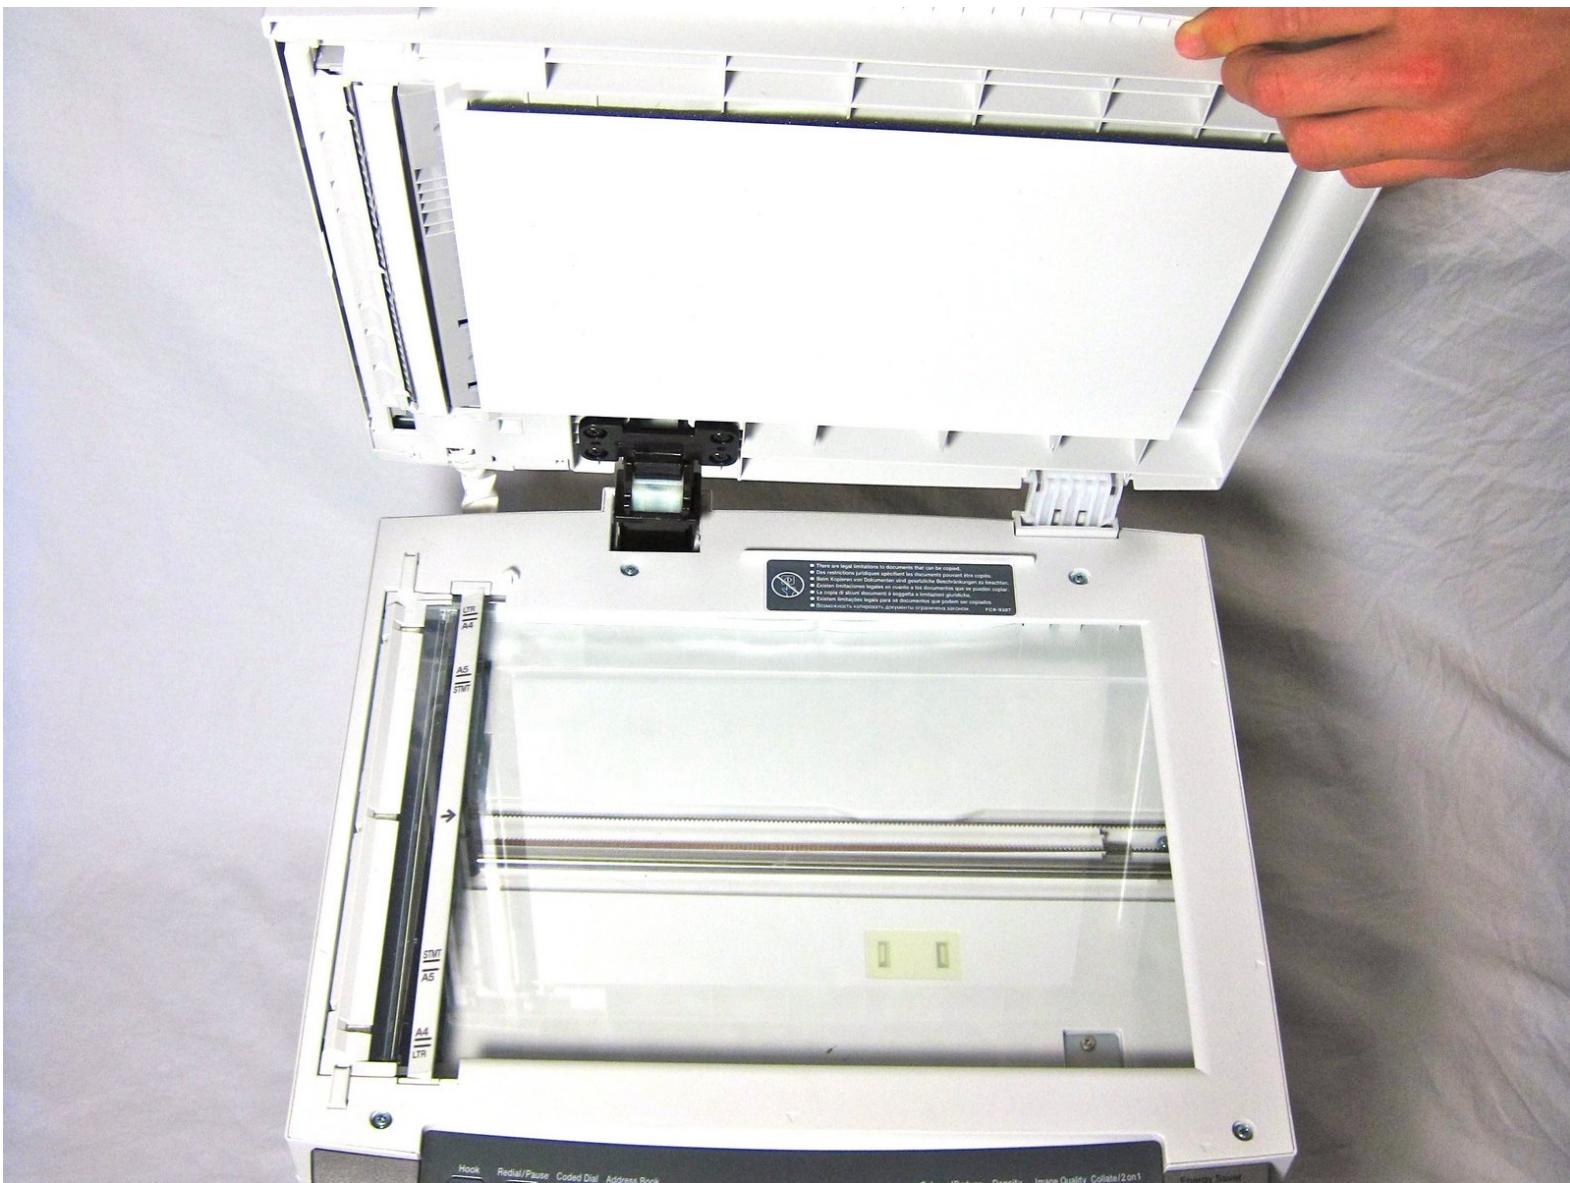

Canon ImageCLASS MF4350d Remove Front Paneling

The front paneling is the plastic that protects the inside of the printer. This guide will teach you how to effectively remove the paneling without cracking it.

Written By: Helena Yanez



This document was generated on 2020-03-30 05:02:55 PM (MST).

INTRODUCTION

This is a prerequisite to other guides that deal with the innards of the printer.

TOOLS:


- Phillips #2 Screwdriver (1)

Step 1 — Front Paneling




- Lift the printer lid up as shown in the photo.

Step 2

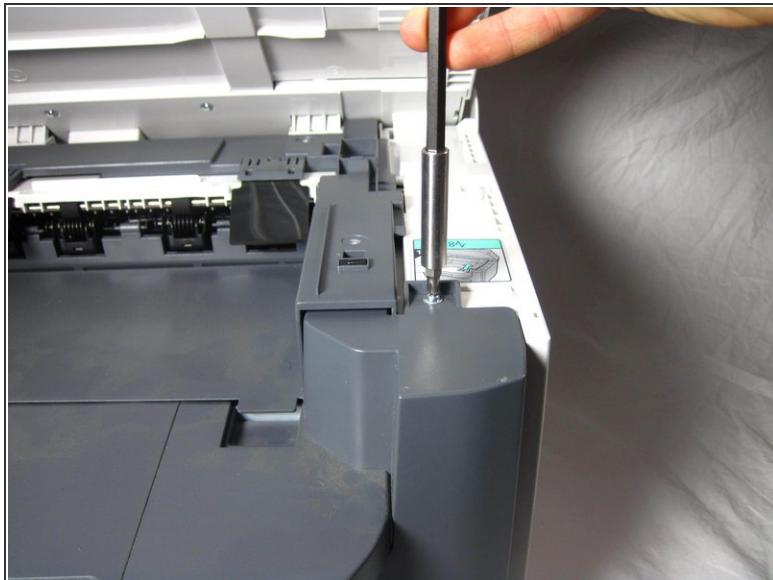

- Locate and remove the two 10mm side screws. There is one on each side.

Step 3

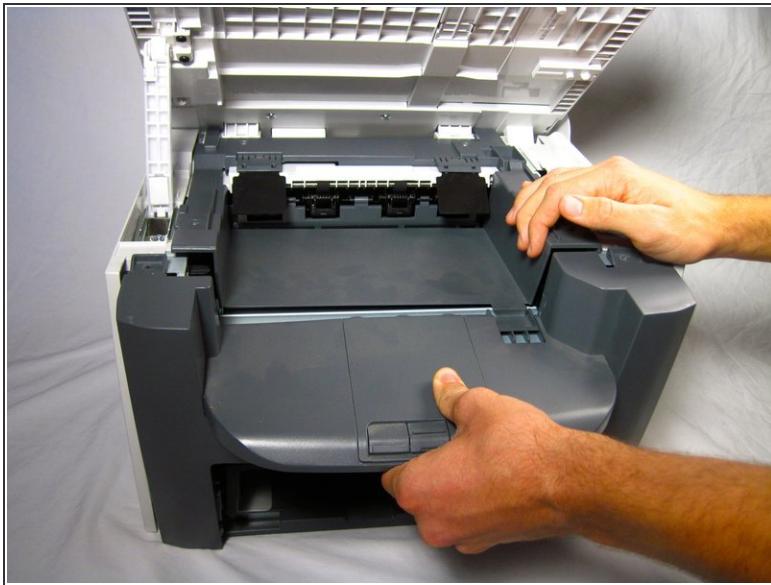

- Unhook the plastic panel from the printer starting from the top.
(i) You may need to wiggle the panel a bit to loosen it.
- To remove the bottom part of the paneling gently lay the printer on its back.
(i) The scanner lid needs to be supported when moving the printer

To reassemble your device, follow these instructions in reverse order.