




# Canon ImageCLASS MF4350d Speaker Replacement

Speaker on the right side of the printer (front facing).

Written By: Helena Yanez

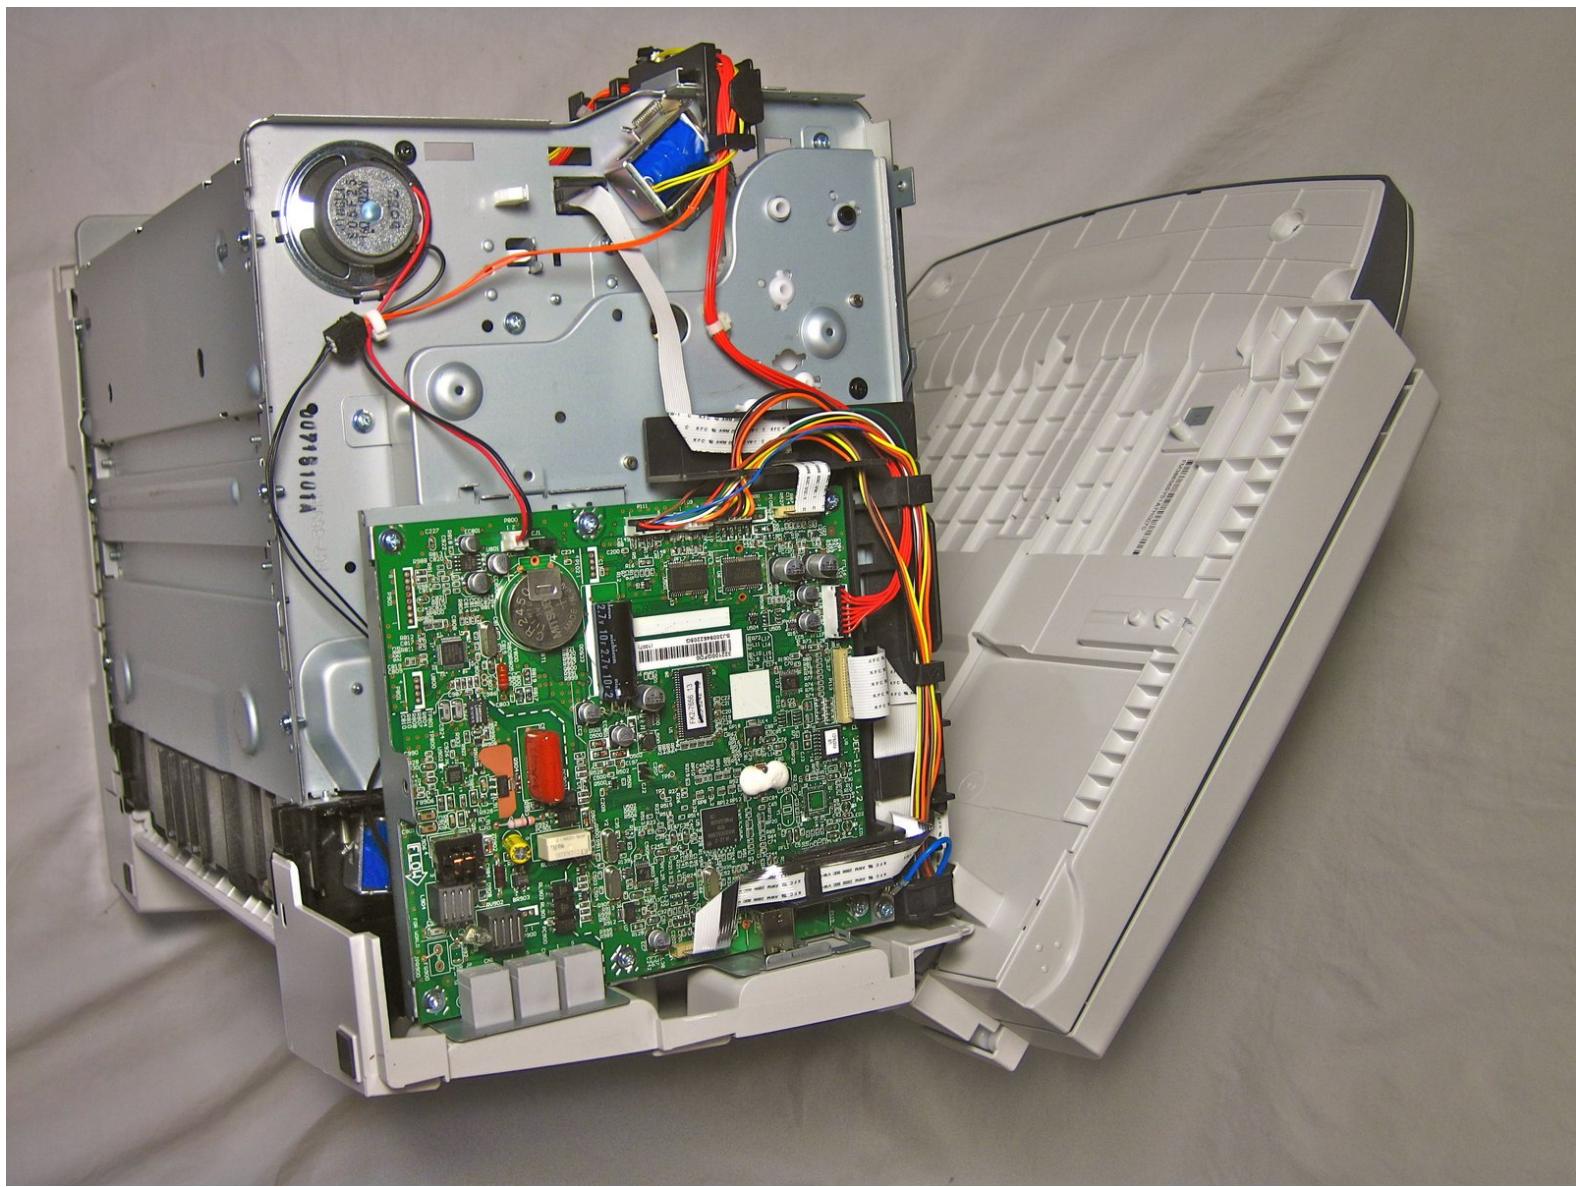

# INTRODUCTION

This guide will teach you how to replace a faulty speaker.

## TOOLS:

- Phillips #2 Screwdriver (1)

## PARTS:


- Speaker (1)

## Step 1 — Front Paneling



- Lift the printer lid up as shown in the photo.

## Step 2

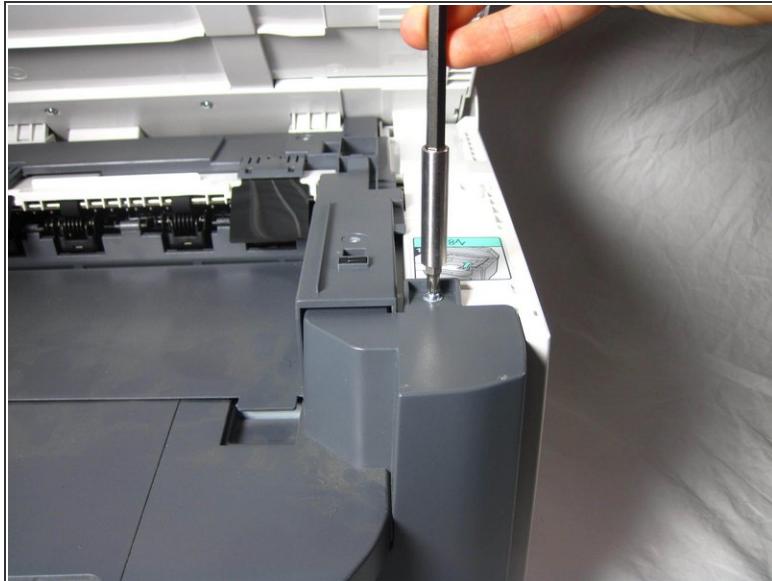


- Locate and remove the two 10mm side screws. There is one on each side.

## Step 3




- Unhook the plastic panel from the printer starting from the top.  
*(i)* You may need to wiggle the panel a bit to loosen it.
- To remove the bottom part of the paneling gently lay the printer on its back.  
*(i)* The scanner lid needs to be supported when moving the printer

## Step 4 — Right Side Paneling

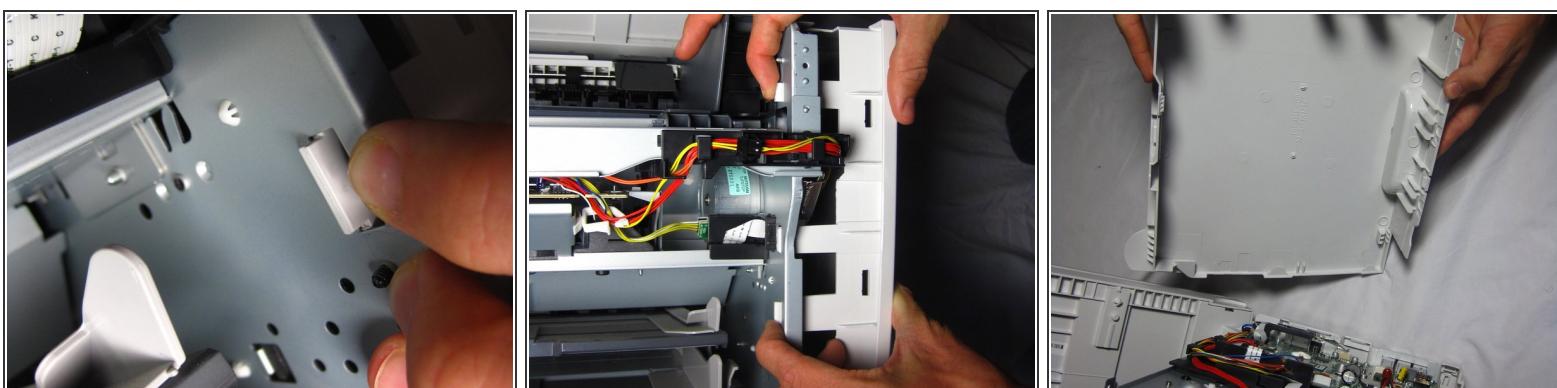

- Gently unhook the right side paneling (as looking at the printer's front face) from the printer.  
*(i)* Use a gentle back and forth motion to wiggle the hooks out.

## Step 5 — Speaker

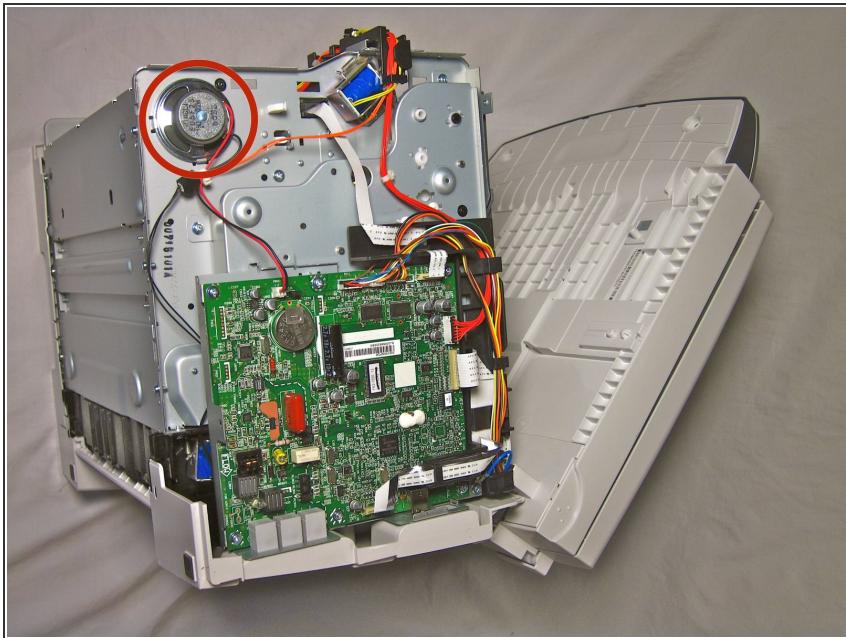

- Lay printer on its left side for better access to the speaker.




*i* Note: The scanner lid needs to be supported when moving the printer

## Step 6



- Locate the black 7mm screw holding the speaker in place.
- Using a Phillips head screw driver, unscrew the 7mm screw.

## Step 7

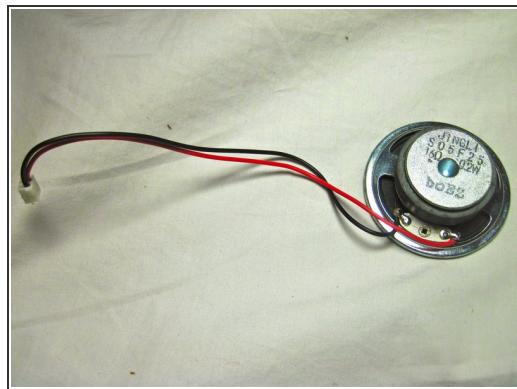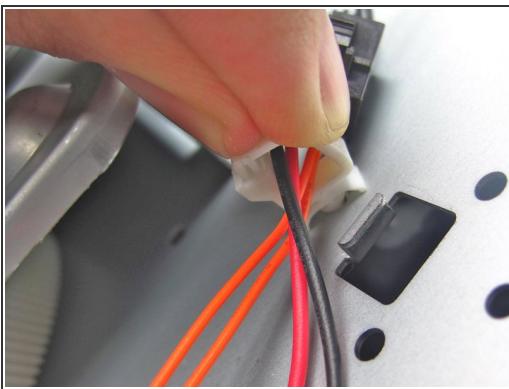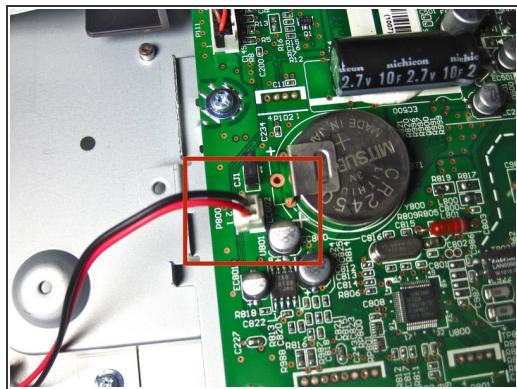

- Locate the red and black wires connected to the speaker.
- Undo the white clip holding the wires in place by pinching the tab on the top.
- Remove the red and black wires from the wire bundle.

**⚠** When replacing the old speaker, do not touch any part of the new speaker that is not metal other than the wires. Doing so could damage the speaker.

- Lift out the speaker

To reassemble your device, follow these instructions in reverse order.