



Canon PIXMA MP620B Paper Tray Replacement

If the bottom feed paper tray is broken, replacing it can be quick and painless with our replacement guide!

Written By: Val Fedorikhin



This document was generated on 2019-09-23 09:03:36 AM (MST).

INTRODUCTION

The paper tray can be removed by flipping the printer upside down and pulling the paper tray out as if you were going to fill it with paper.

Step 1 — Flip the Printer Upside-down



- Gently turn over the entire machine and set down carefully.

Step 2 — Pull out the Paper tray



- Firmly grasp the tray and remove from rest of the printer.

Step 3 — You're Done!



- Purchase a replacement paper tray.
And Slide it in place of the old tray!

To reassemble your device, follow these instructions in reverse order.