



Canon PIXMA iP3600 Cassette Replacement

Cassette replacement

Written By: Caitlyn



INTRODUCTION

If your cassette is broken it is easy to take out and replace. The cassette may also need to be removed if paper is jammed. Removal is simple and does not require tools.

Step 1 — Cassette



- Locate the cassette below the front paper output tray.

Step 2



- Reach underneath printer, fitting your fingers into the groove in the front of the cassette.

Step 3



- Pull the cassette toward you.
- You have successfully removed the tray.

To reassemble your device, follow these instructions in reverse order.