



Canon PIXMA iP3600 Ink Cartridges Replacement

How to replace ink cartridges.

Written By: Caitlyn



INTRODUCTION

If you are having difficulties printing due to being out of ink, then this guide will help you to replace the empty ink cartridges.

Step 1 — Ink Cartridges



- Press the power button to turn on the printer.

Step 2



- Pull down the front output tray cover.

Step 3



- Lift the printer lid.

Step 4



- Allow the belt, containing ink cartridges, to adjust and center so that the ink cartridges are visible.

Step 5



- Push in the white clip to release the ink cartridge from the printhead.
- Lift the ink cartridge from the printhead.
- Repeat this process for the remaining ink cartridges.
- You have successfully removed all ink cartridges.

To reassemble your device, follow these instructions in reverse order.