



Canon Pixma iP6000D Disassembly

Take apart iP6000D printer, and fix "inner cover closed" fault when printing CDs

Written By: Patrick Quick

INTRODUCTION

Take apart iP6000D printer, and fix "inner cover closed" fault when printing CDs.

See the attached PDF for step by step instructions.

Step 1 — Canon Pixma iP6000D Disassembly



- See the PDF

To reassemble your device, follow these instructions in reverse order.