



# Canon PowerShot A2300 SD Card/Battery Door Replacement

This guide will show you how to remove and replace the bottom card/battery latch.

Written By: Ashley Fincher



## INTRODUCTION

This guide walks the reader through the process of removing the card/battery latch in order to replace it. There are no prerequisite guides necessary to remove the latch.

## Step 1 — SD Card/Battery Door



- Open the Card/Battery latch by sliding the cover away from the camera in the direction indicated by the arrow.

## Step 2



- Move card/battery latch to 90 degrees.

## Step 3



- Gently rotate latch 90 degrees either clockwise or counterclockwise then remove it.

To reassemble your device, follow these instructions in reverse order.