



Canon PowerShot A3400 IS Battery Replacement

Easily replace the battery on your Canon PowerShot A3400 IS.

Written By: Emily Pretorius



INTRODUCTION

This guide will help you open up the battery case for the purpose of replacing the camera battery. Use this guide if you need to replace the battery due to power issues or a lack of charge.

TOOLS:

- [Phillips #000 Screwdriver \(1\)](#)

Step 1 — Battery



- Place thumb on area right next to where it says open and slide to the right to open.

Step 2



- Remove the battery by pushing the orange object outwards; the battery will spring up and out.

To reassemble your device, follow these instructions in reverse order.