




Canon PowerShot A3400 IS Plastic Case Replacement

This guide will help you remove the plastic case of the camera for replacement or to get to other components of the camera

Written By: Emily Pretorius

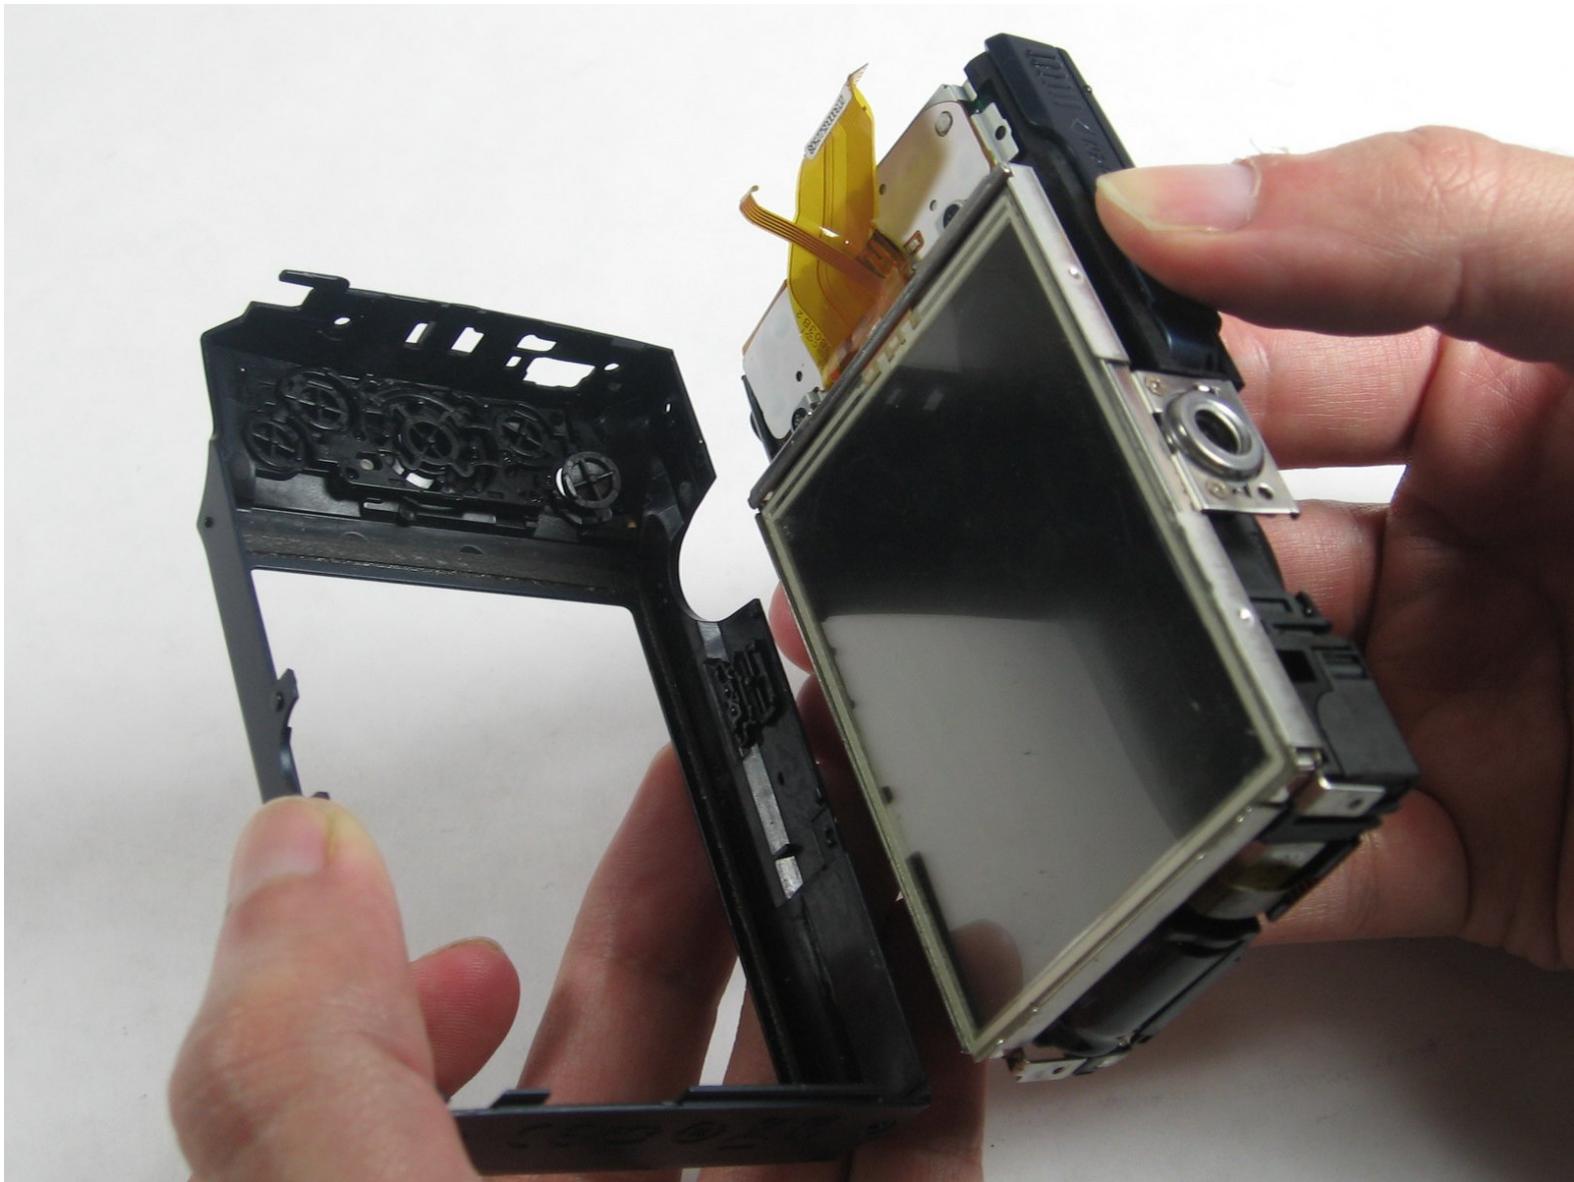

This document was generated on 2019-09-24 02:54:57 PM (MST).

INTRODUCTION

This guide is important since it will allow you to access the internal components of the camera. It will also allow you to replace the plastic case if the case has been damaged or warped in any fashion.

TOOLS:

- [Spudger \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)

Step 1 — Battery



- Place thumb on area right next to where it says open and slide to the right to open.

Step 2



- Remove the battery by pushing the orange object outwards; the battery will spring up and out.

Step 3 — Plastic Case



- Remove the two 5.00 mm screws in the bottom of the casing with a Philips #000 screwdriver

Step 4



- Place the camera on to the side that has the image stabilizer label.
- Remove the 5.00 mm screws that are on this side using the screwdriver.

Step 5



- Place camera on to the side with the A/V Out Digital Cover facing up.
- Remove this visible 5.00 mm screw.
- Pull the A/V Out Digital cover back to uncover the next step.

Step 6



- Remove the 5.00 mm screw from behind the cover.

Step 7




- Make sure the battery cover is open.

Step 8




- Turn the camera onto the side with the A/V out Digital cover.
- Use your finger to pull this tab to the right.

Step 9

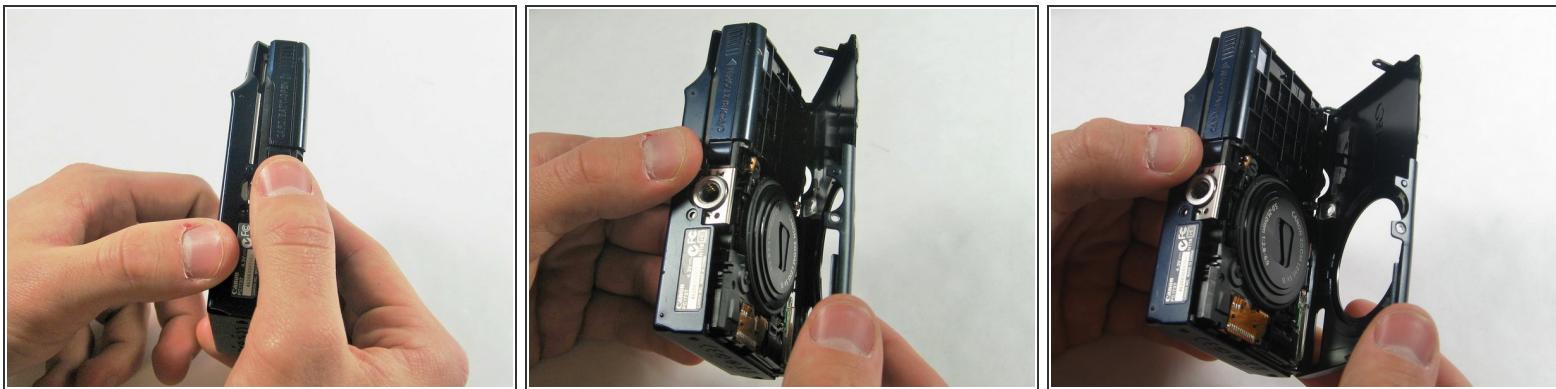

- Remove the lens side by using your fingers or a spudger to pry it gently open.
- Try to pry it loose all around that side so that it is easier to pull off.

Step 10

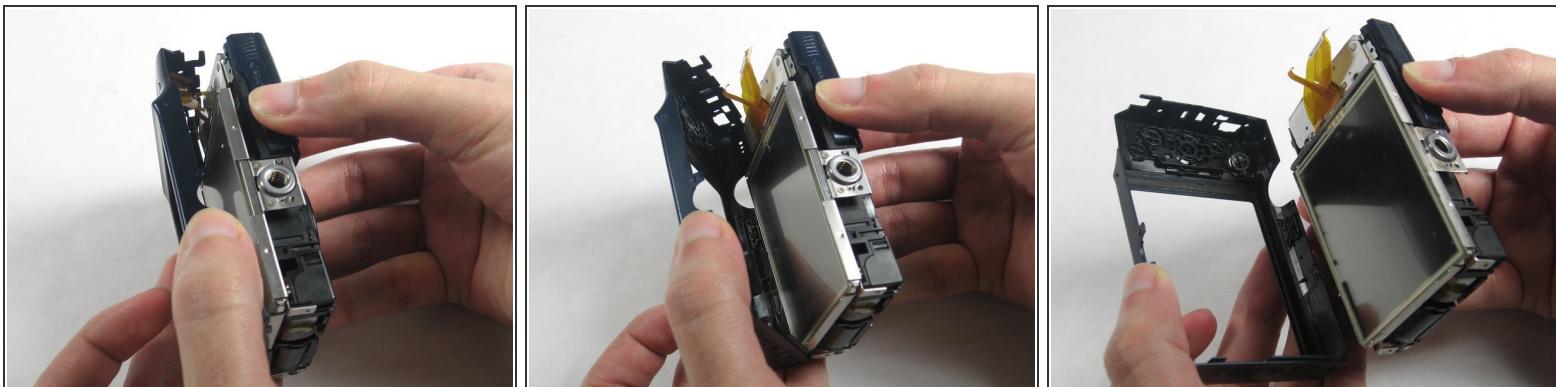

- Using your fingers, pull the screen side gently off.
- Try to loosen it all around that side so that it is easier to try and pull it off.

To reassemble your device, follow these instructions in reverse order.