



# Canon PowerShot A4000 IS Display Replacement

This guide demonstrates how to remove the LCD screen of your PowerShot camera.

Written By: Ansley Gardner



 **TOOLS:**

- [Phillips #000 Screwdriver \(1\)](#)
- [Spudger \(1\)](#)

## Step 1 — Removing the Screws




- First remove the batteries and memory card.
- Remove the screws for the back cover (circled in red) with a Phillips head screwdriver (PH000) .

## Step 2 — Removing the Back Cover



- The back cover can be gently pried off after the screws are removed.

## Step 3 — Disconnecting the Screen Frame from the Camera

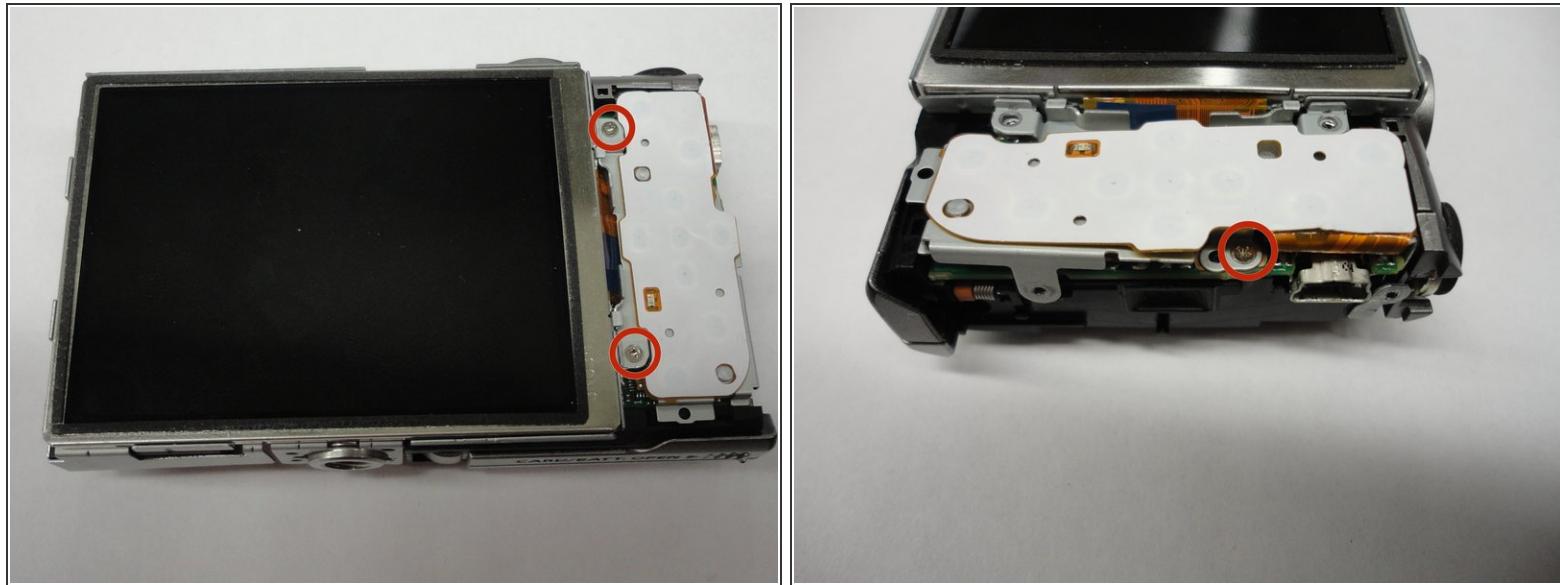


- Remove the three screws outlined in the pictures.

## Step 4



- The ribbon for the screen is folded under the plate. Carefully unfold the ribbon by flipping the screen face down next to the camera.
- Underneath the plate the connection between the camera and the ribbon can be viewed.

## Step 5 — Disconnecting the Ribbon and Removing the Screen

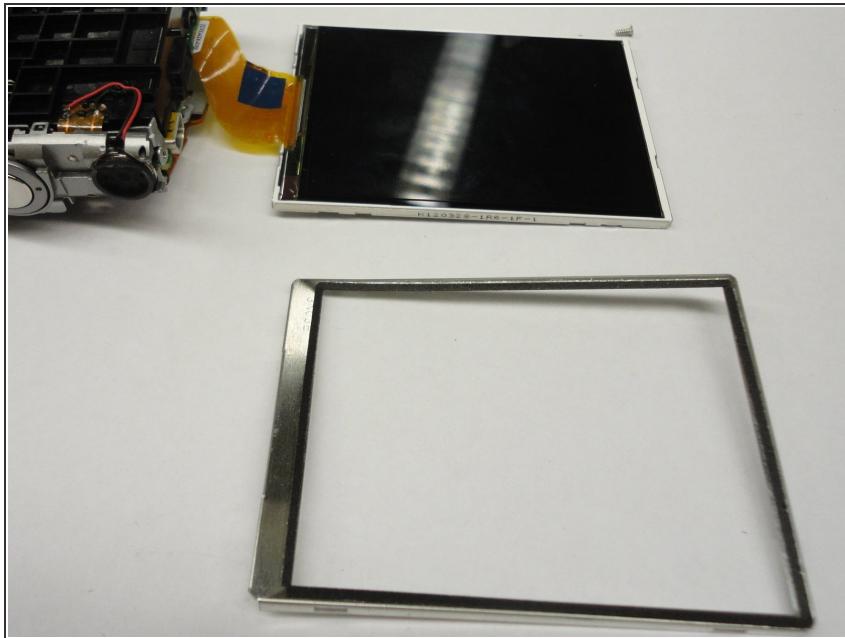

- The metal frame of the screen can be removed using a thin spatula or spudger. After the frame is removed the part of the ribbon connected to the screen is accessible.

To reassemble your device, follow these instructions in reverse order.