




Canon PowerShot A4000 IS Flash Replacement

This is a guide to demonstrate how to remove the flash from your PowerShot camera.

Written By: Ansley Gardner

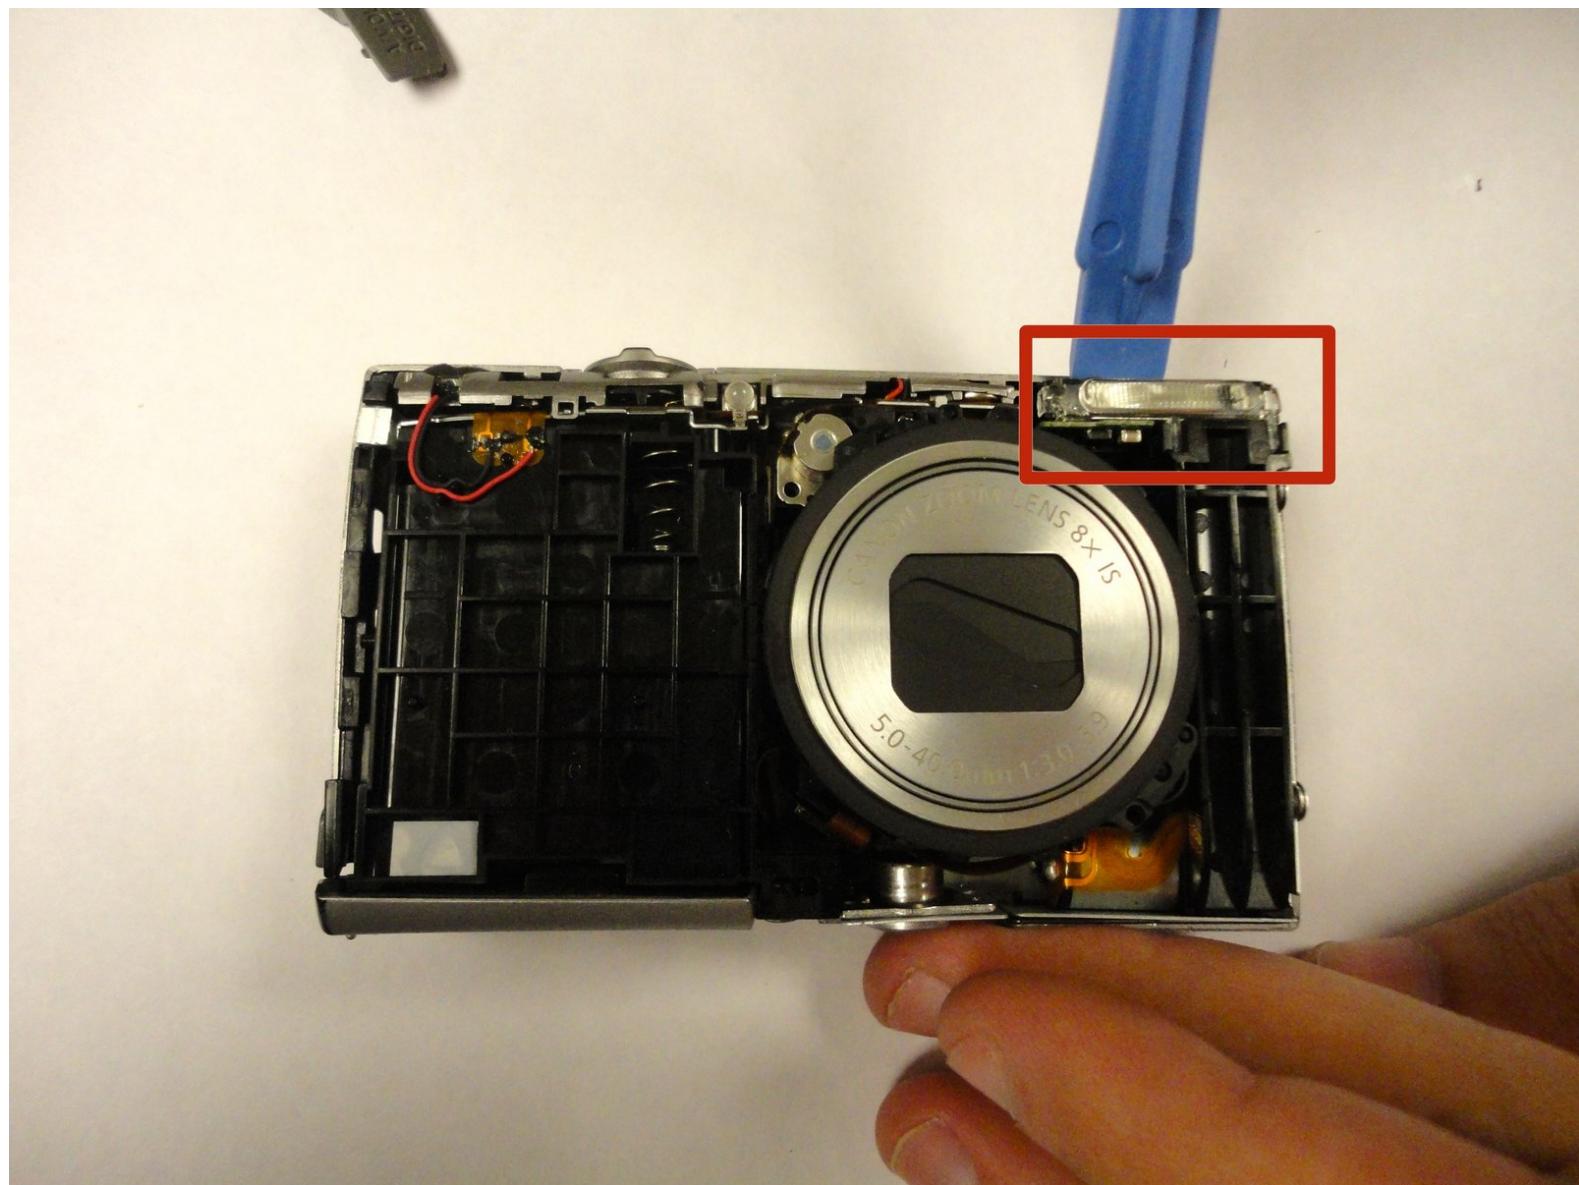

 **TOOLS:**


- [Phillips #000 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Removing the Screws Anchoring the Front Cover




- Remove the battery and data card. Refer to the [Battery Removal](#) and [Memory Card Removal](#) guides.
- Use a Philips head screwdriver (PH000) to remove the screws circled in the picture. Screw Sizes: 4 millimeters.

Step 2

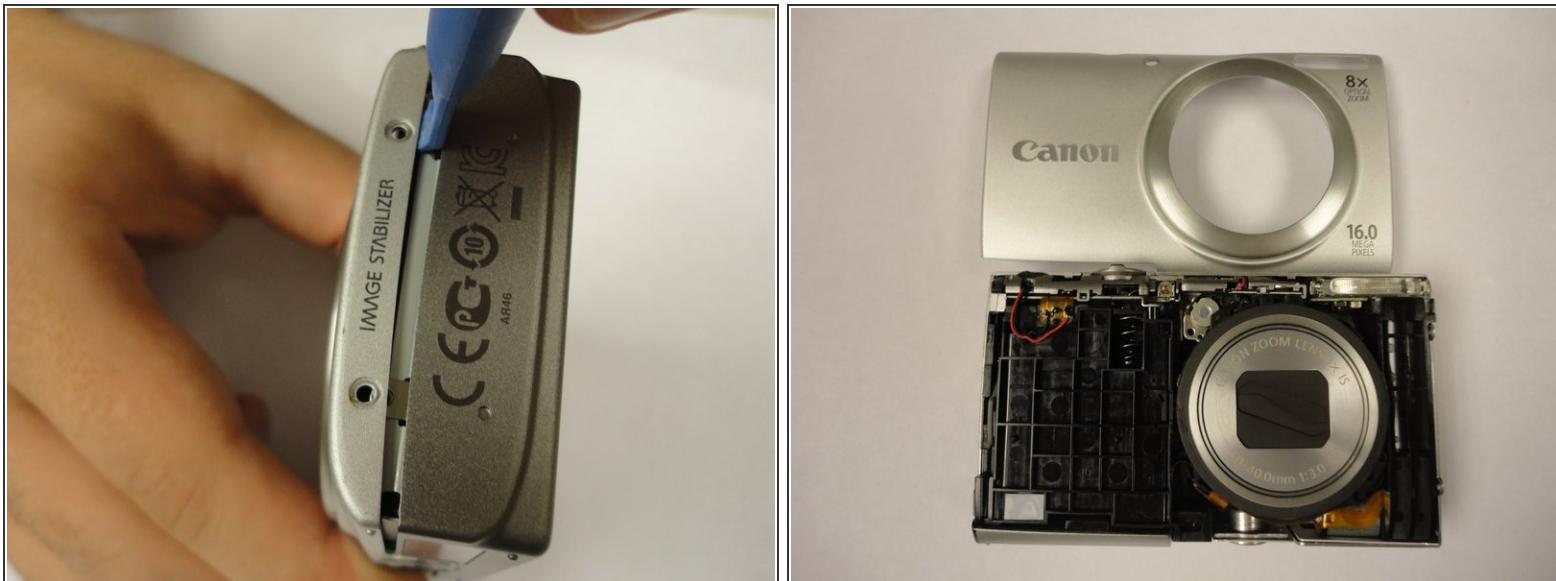

- Use the spudger tool to gently lever the front cover off.

Step 3 — Removing the Flash

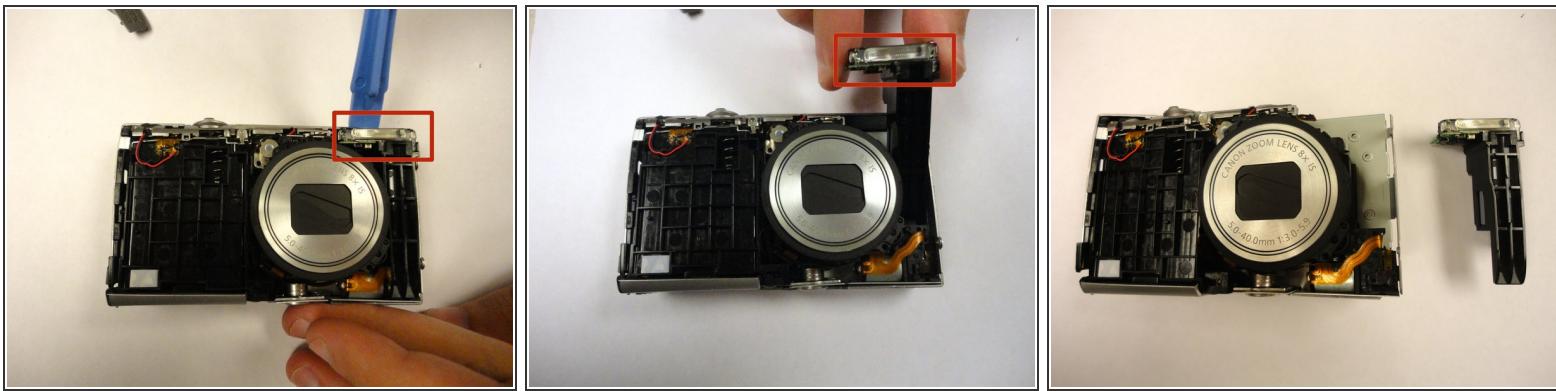

⚠ The flash is not held very securely in the camera so be careful. Make sure someone is holding onto it so it does not fall out.

- Your flash should come out very easily if you use your spudger to lever it out carefully.
- Once the bulb piece of the flash is clear of the camera body, simply use your fingers to lift the flash clear of the camera.

To reassemble your device, follow these instructions in reverse order.