



Canon PowerShot A4000 IS Front Cover Replacement

A guide for removing the front cover of the camera for replacement or repairs.

Written By: Ashley Heslip



 **TOOLS:**


- [Phillips #000 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Removing the Screws Anchoring the Front Cover



- Remove the battery and data card. Refer to the [Battery Removal](#) and [Memory Card Removal](#) guides.
- Use a Philips head screwdriver (PH000) to remove the screws circled in the picture. Screw Sizes: 4 millimeters.

Step 2

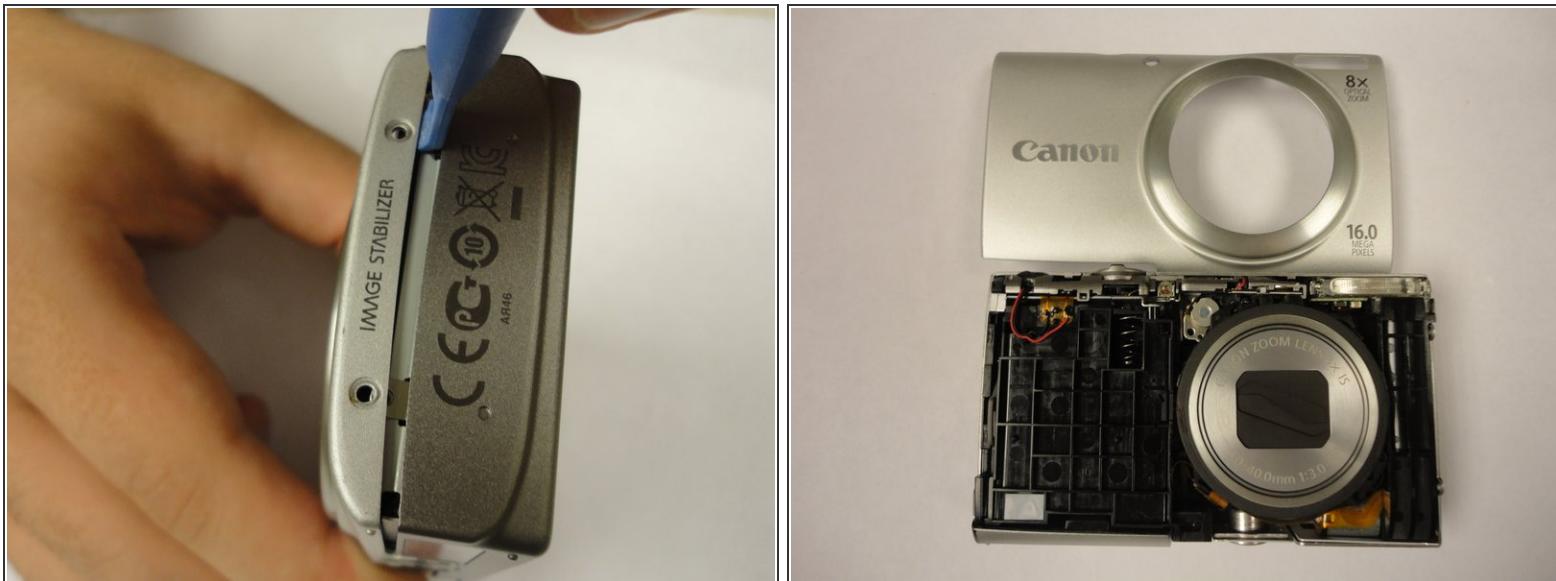

- Use the spudger tool to gently lever the front cover off.

To reassemble your device, follow these instructions in reverse order.