


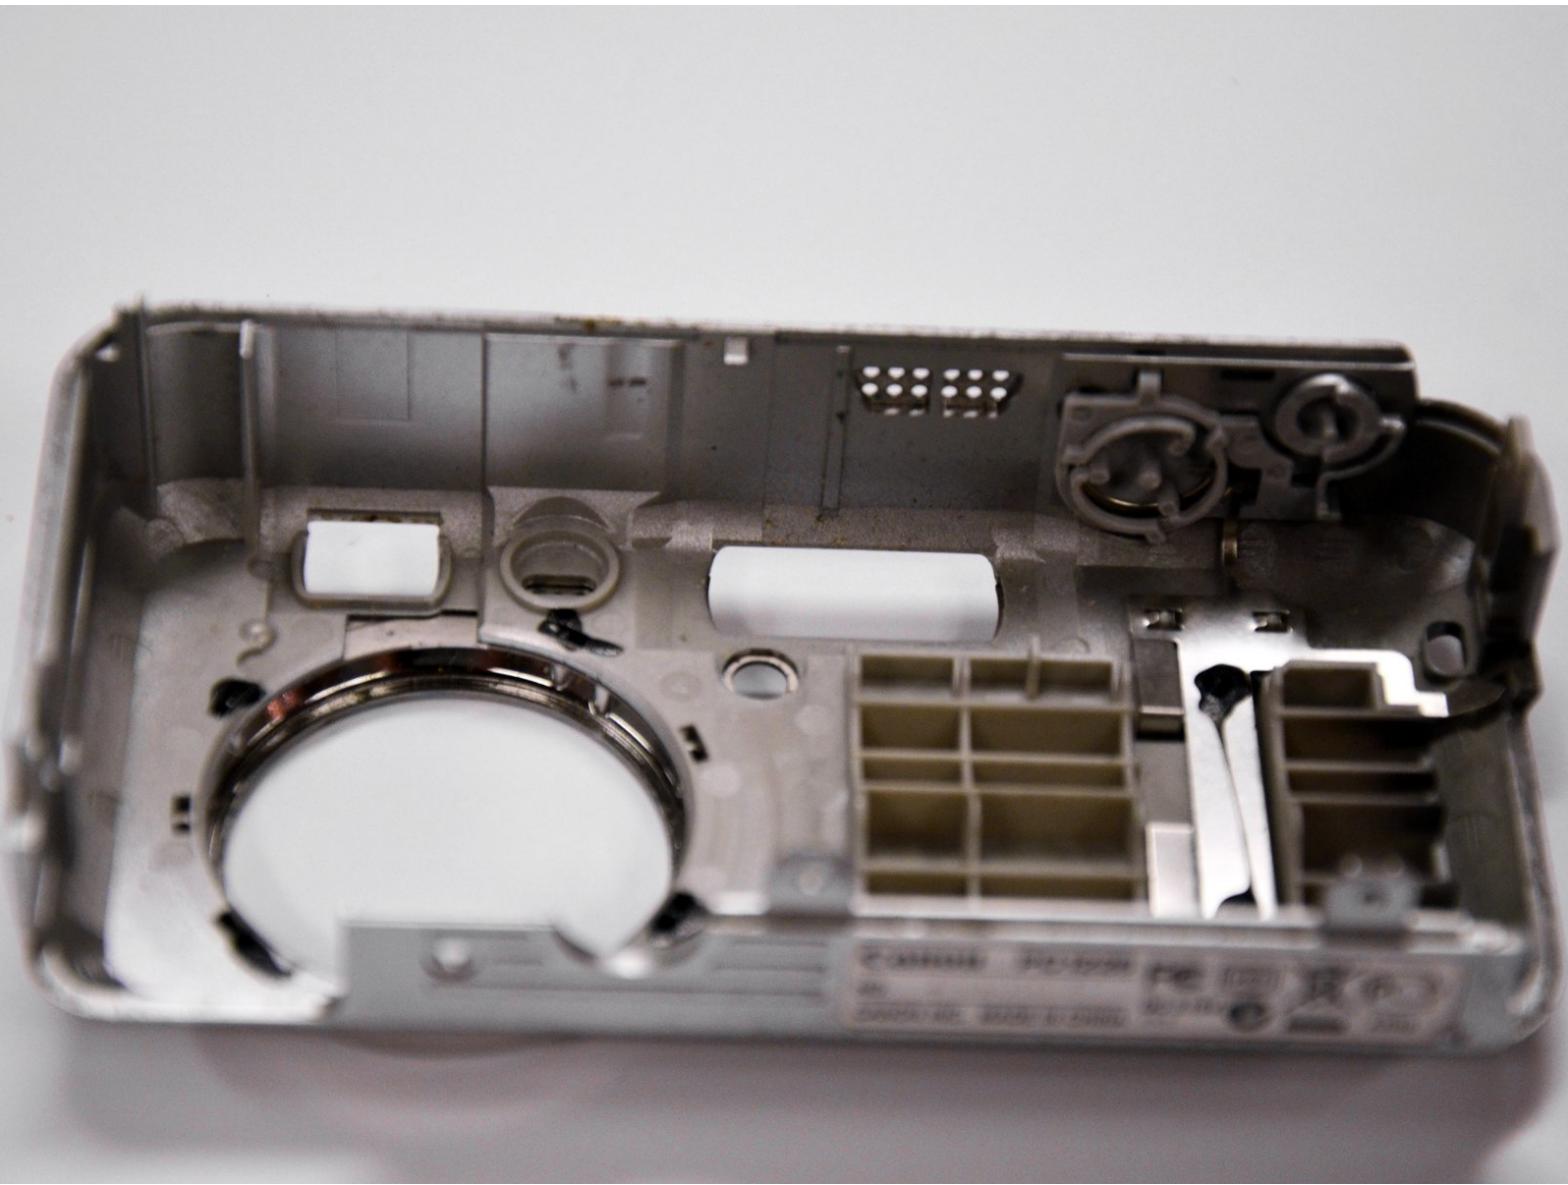

Canon PowerShot A460 Front Casing Replacement

This guide will help the user begin to disassemble his or her camera by taking off the front casing.

Written By: Alex



INTRODUCTION

This guide will guide the user towards removing the front casing and preparing the camera for future repairs.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Battery



- Slide the switch on the battery cover labeled "CARD/BATT. OPEN." to the right.
- While still holding the switch, pull the cover down, allowing it to release and open.

Step 2



- Tilt the camera slightly to allow the batteries to fall out.

Step 3



- Press on and release the memory card to eject it.

Step 4 — Front Casing



- Unscrew the 5mm Phillips #00 screw from the bottom of the camera.
- ➡ Make sure to keep the different size screws organized to make reassembling the camera simpler.

Step 5



- Unscrew the three 2mm Phillips #00 screws that are located on the bottom of the camera.

Step 6




- Remove the 4mm Phillips #00 screw that is located on the left side of the camera, if the display screen is facing you.

Step 7




- Take out the 4mm Phillips #00 screw under the rubber flap on the right end of the camera.

Step 8

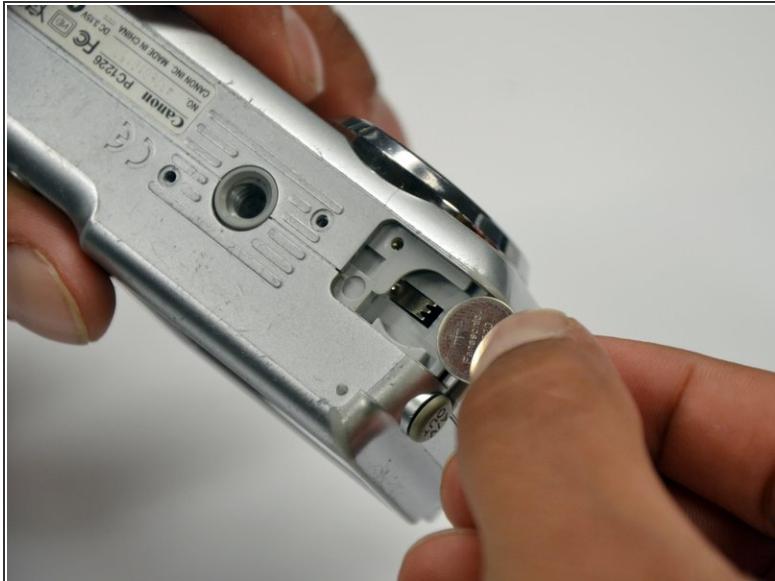

- Remove the second battery cover on the bottom of camera.
- Take the silver battery out of the camera.

Step 9

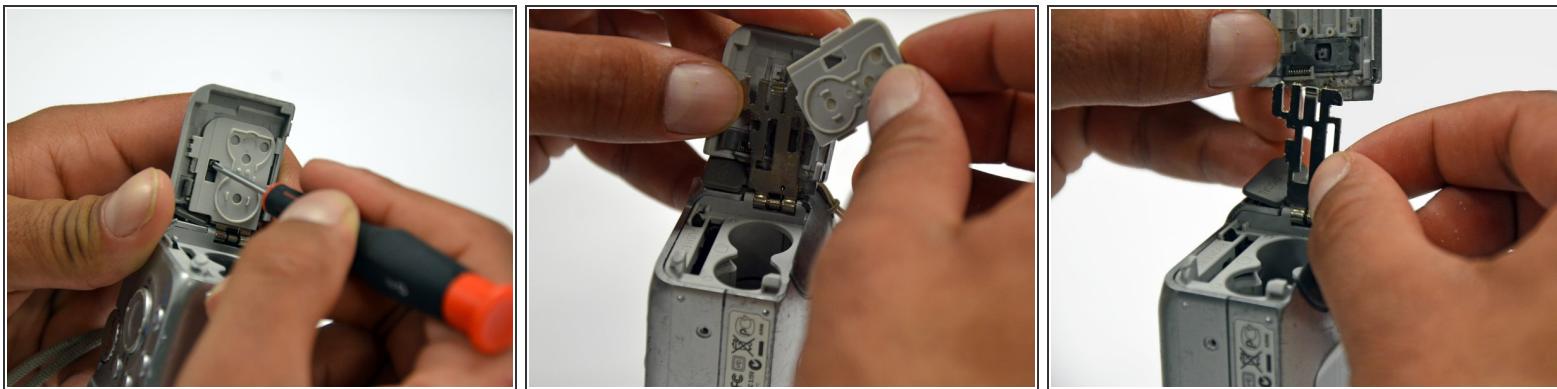

- Remove the 4mm Phillips #00 screw on the inside of the flap that hides the battery and memory card slots.
- Remove the light grey, plastic piece.
- Remove the plastic portion of the battery flap cover. The metal piece will remain attached.

Step 10



- Slightly pull on each side of the camera. It should loosen up and come apart.
- If it does not pull apart right away, use a little more force.
- Do not give up!

To reassemble your device, follow these instructions in reverse order.