



Canon PowerShot A480 Battery Replacement

This will show how to replace the battery in a Canon PowerShot A480 camera.

Written By: Kenneth Robertson



INTRODUCTION

For this model, the use of tools to get access to the batteries should not be necessary. The PowerShot A480 makes the use of two AA batteries for its power source. There are rechargeable AA batteries available. So the first thing to check if it is not receiving a charge from the adapter, is whether the batteries installed are the type that are rechargeable. Replacing the batteries is a necessary task in order for the camera to power up and operate correctly.



PARTS:

- [AA Batteries \(2\)](#)

Step 1 — Battery



- ⓘ Make sure to fully power off the camera before starting the replacement process.
- Locate the battery door at the underside of your camera and orient it so that the door points to the right.
 - Gently apply downward pressure to the right edge of the door and slide to the right.
 - Once you hear an audible click, lift up the bay door in the opposite direction till the batteries are fully exposed.

Step 2



- Ensure that the contacts for the batteries are free of any corrosion.
- Gently tip the body of the camera towards your body to slide the batteries out.
- Slide the batteries out enough to where you are able to grasp both of them for removal.

After obtaining two replacement AA batteries. To reassemble your device, follow these instructions in reverse order.