


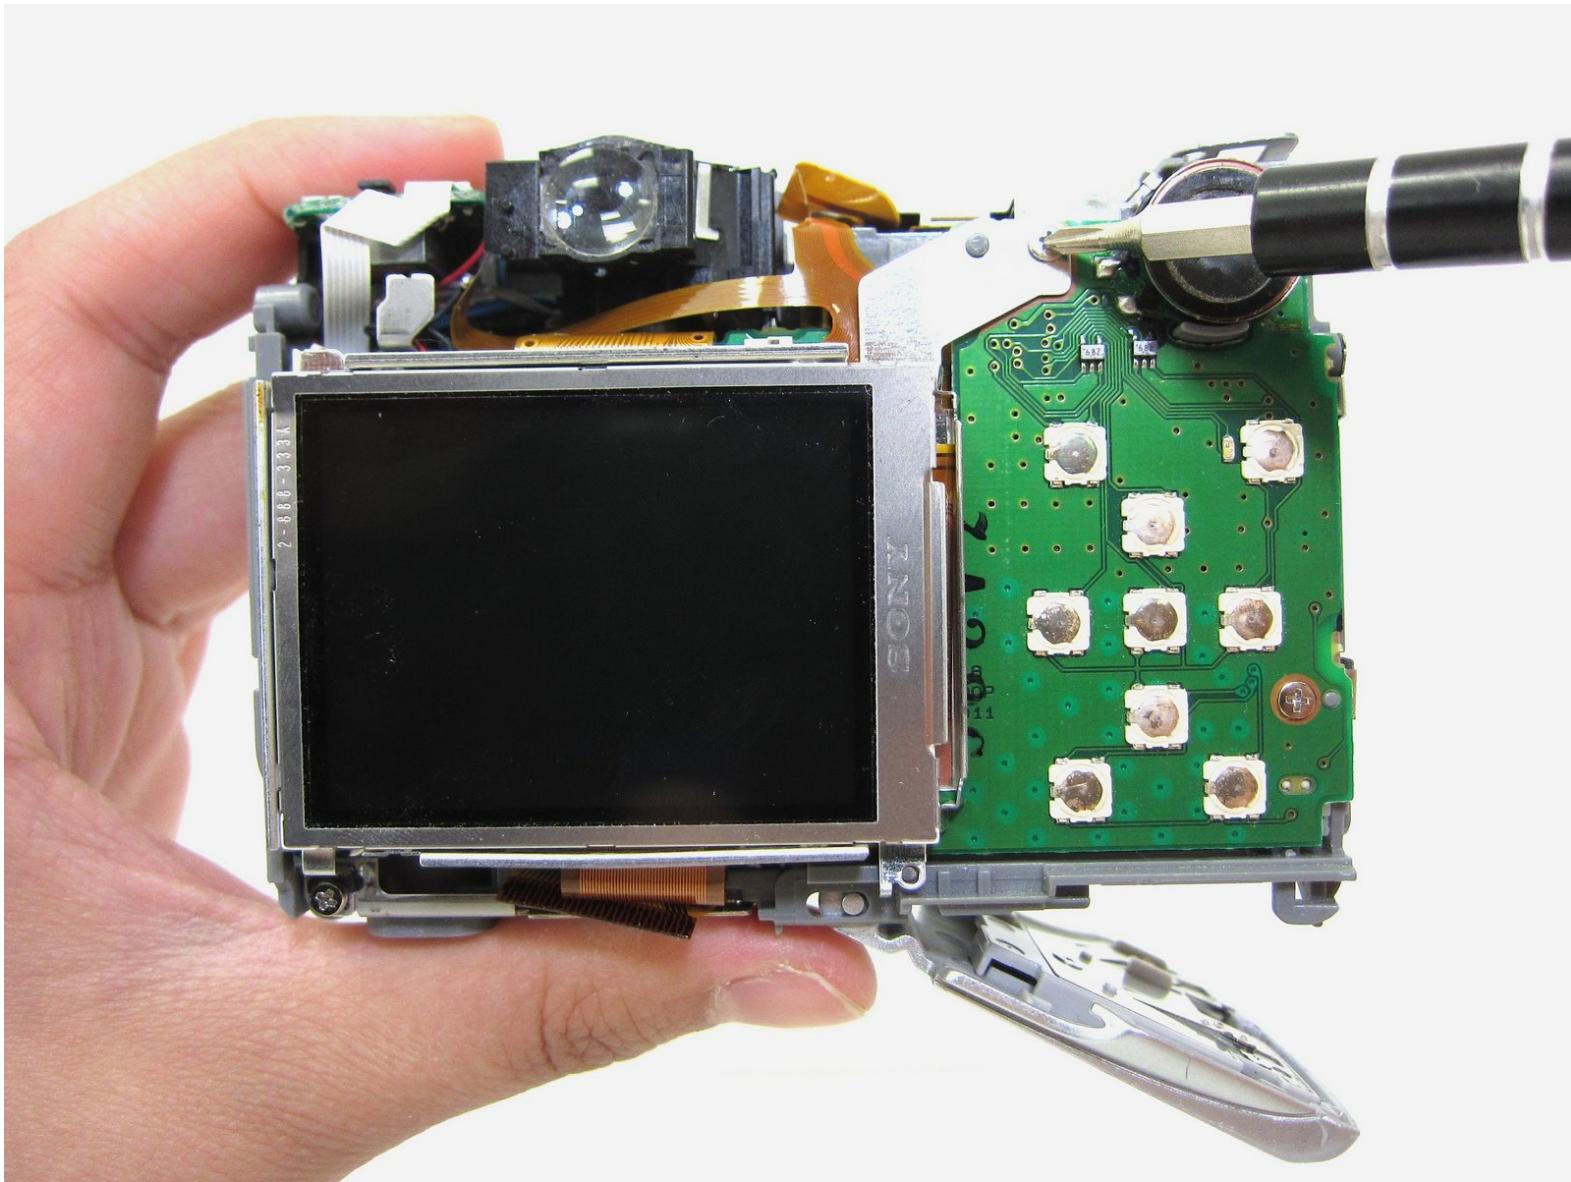

Canon PowerShot A550 LCD Screen Replacement

This repair guide will teach you how to replace a broken LCD Screen in your Canon PowerShot A550.

Written By: Precilla Tang



This document was generated on 2019-09-17 06:39:28 PM (MST).

INTRODUCTION

The Canon PowerShot A550 features a 2.0 inch low-temperature polycrystalline silicon TFT color LCD screen with 86,000 megapixels. This component is necessary for photographing and viewing your pictures. This guide will teach you how to replace your LCD screen if it becomes broken or cracked.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Front and Back Covers



- Unscrew a total of 6 4.45 mm phillips head screws using a #00 phillips head screwdriver.
- There are 2 screws on the left side (when looking at the front of the camera).
- There are 3 screws on the bottom
- There is 1 screw on the right side

Step 2

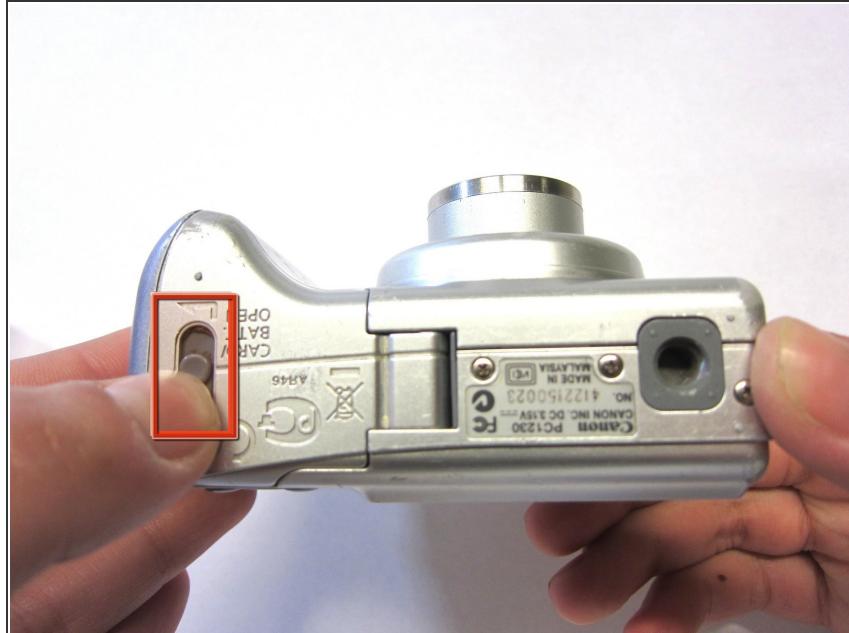


- Turn to the bottom of the camera.
- Open the memory card cover by sliding the "CARD/BATT." button up, and then pulling the cover to the left.

Step 3



- This is what the SD card/battery compartment looks like when opened.
- Remove one 4.45mm phillips head screw from the SD card/battery compartment using a #00 phillips head screwdriver.

Step 4

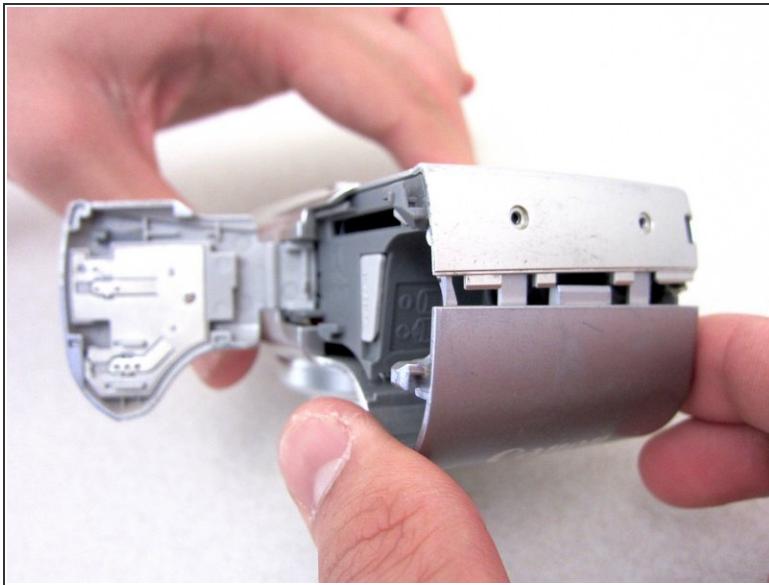

- Gently remove the front cover away from the camera body.


★ Tip: Start by loosening the teeth on the left side of the camera next to the battery compartment.

Step 5



- The camera should look like this once the front cover is removed.

Step 6

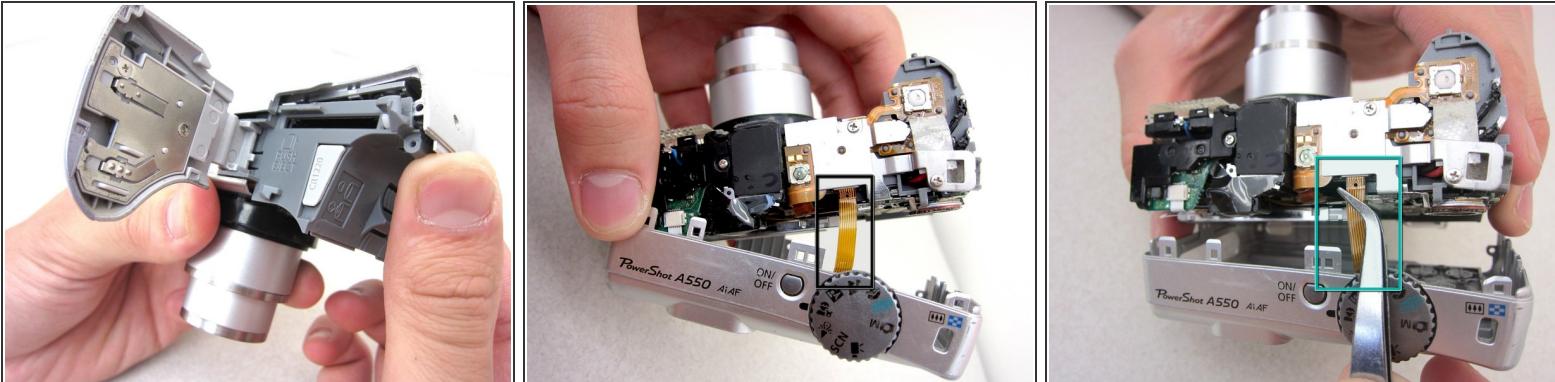


- Start from the battery compartment and remove the back cover.

⚠ Caution: Do not tug on the back cover after it is removed. This could tear the ribbon attaching the back cover to the camera body.


- Remove the connecting ribbon from the body of the camera using a pair of tweezers.

Step 7

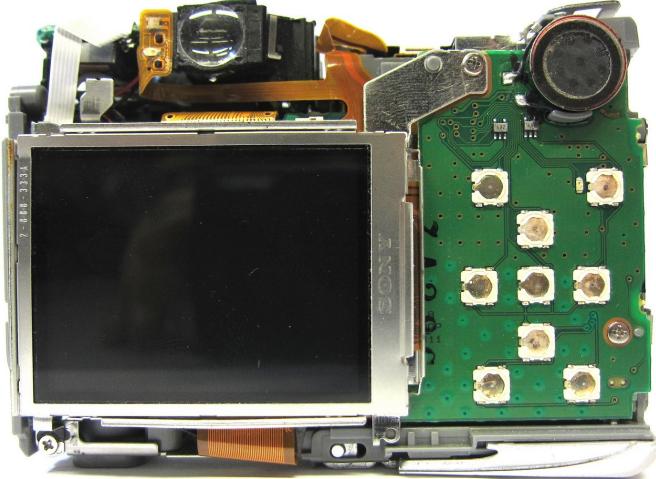


- Once the ribbon connecting the back cover is removed, the back of the camera body should look like this.

Step 8 — LCD Screen

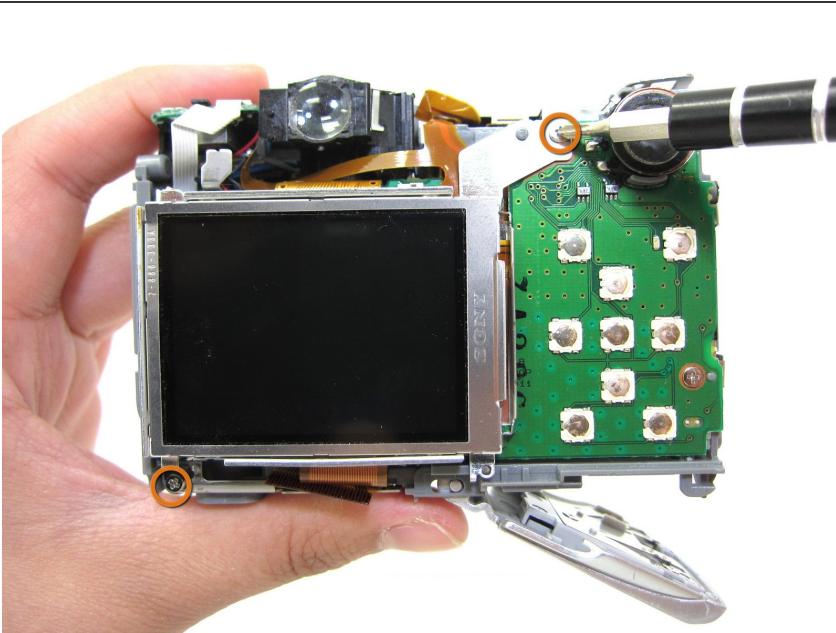

- Use a #00 phillips head screwdriver to remove 2 3.34mm phillips screws holding the LCD screen in place.

Step 9

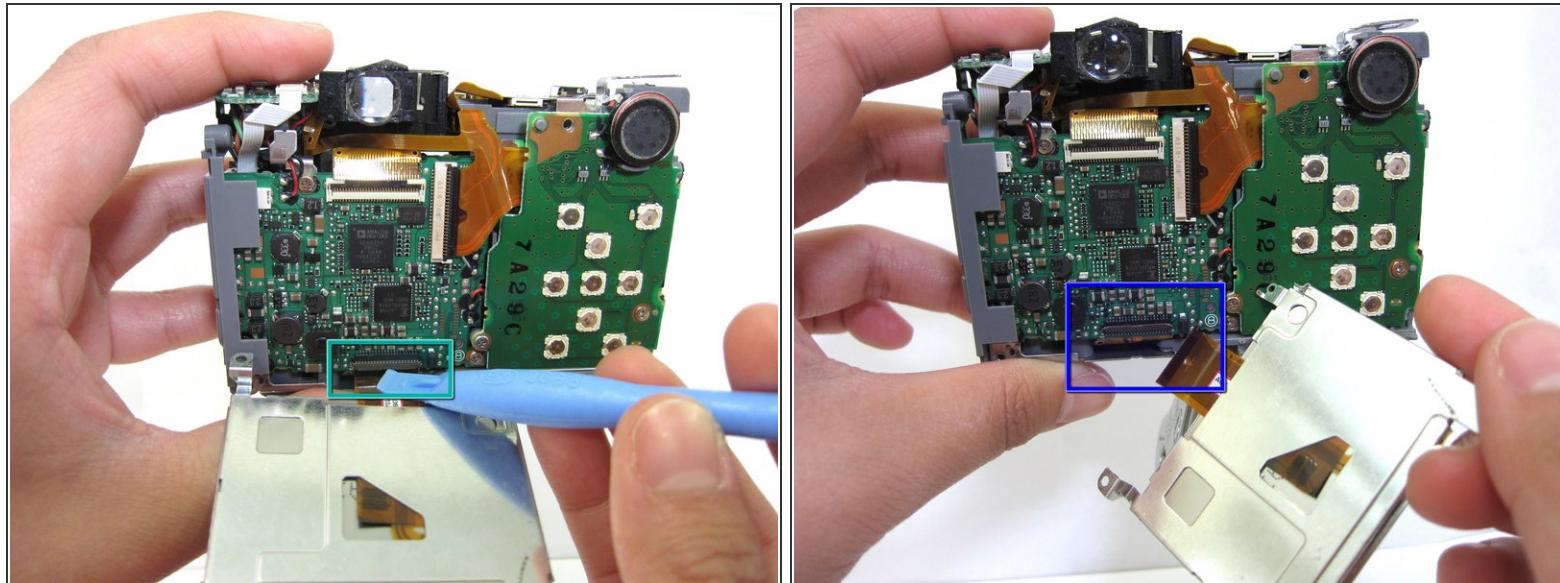

- Use an iPod Opening Tool to lift the brown portion of the connector to unlock it.
- Slide the data cable out of the connector.

⚠ Caution: Do not force the data cable out of the connector. It may rip!

Step 10



- The LCD screen can now be removed to be fixed/replaced.

To reassemble your device, follow these instructions in reverse order.