


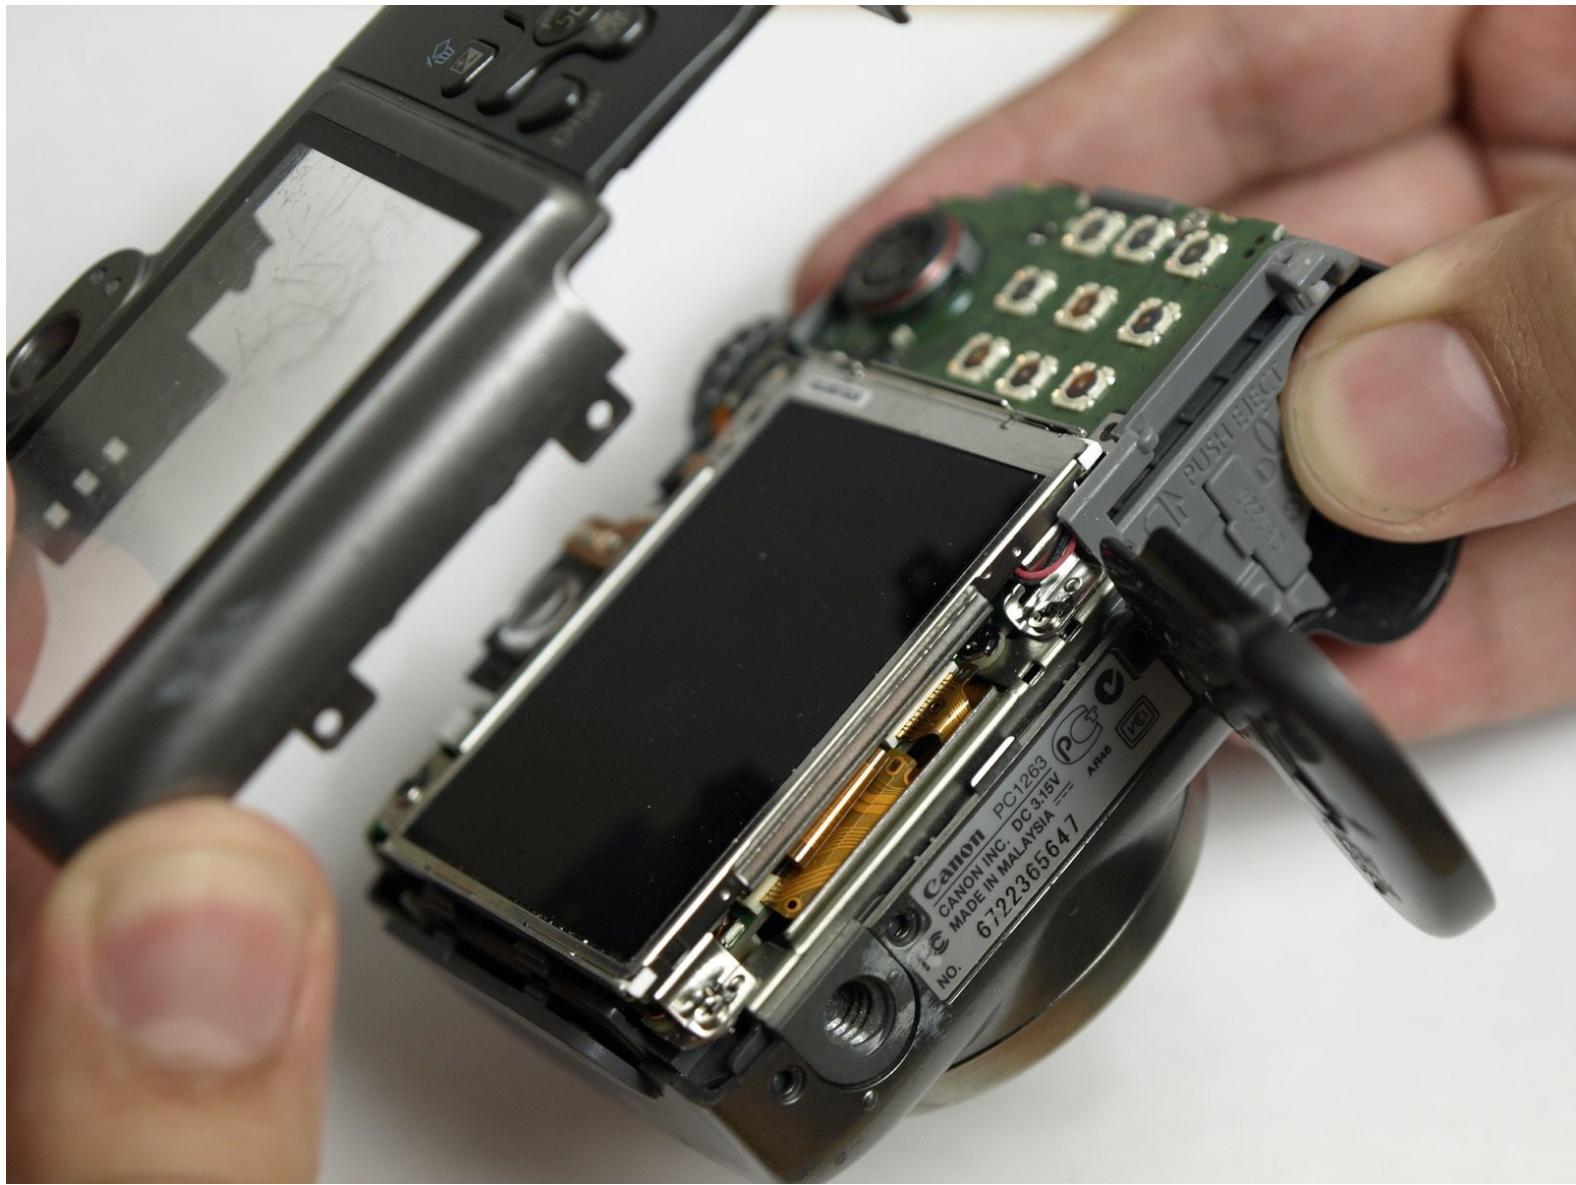

Canon PowerShot A590 IS Back Cover Replacement

This guide will instruct the user on how to remove the back cover of the Canon A590 IS.

Written By: Zach



INTRODUCTION

You will remove screws from the bottom and sides of the camera in order to remove the cameras back cover.

TOOLS:


- electric magnetic screwdriver - helpful (1)
- Phillips #00 Screwdriver (1)
- iFixit Opening Tools (1)

Step 1 — Locate and Open Battery Hatch




- The battery hatch is on the bottom of the camera.
- ⚠ CAUTION: Locate the switch to open the hatch and push gently toward the front of the camera. Too much force can break the hatch.
- While the switch is pushed forward, pull the cover away from the camera.

Step 2 — Locate and Remove Camera Batteries

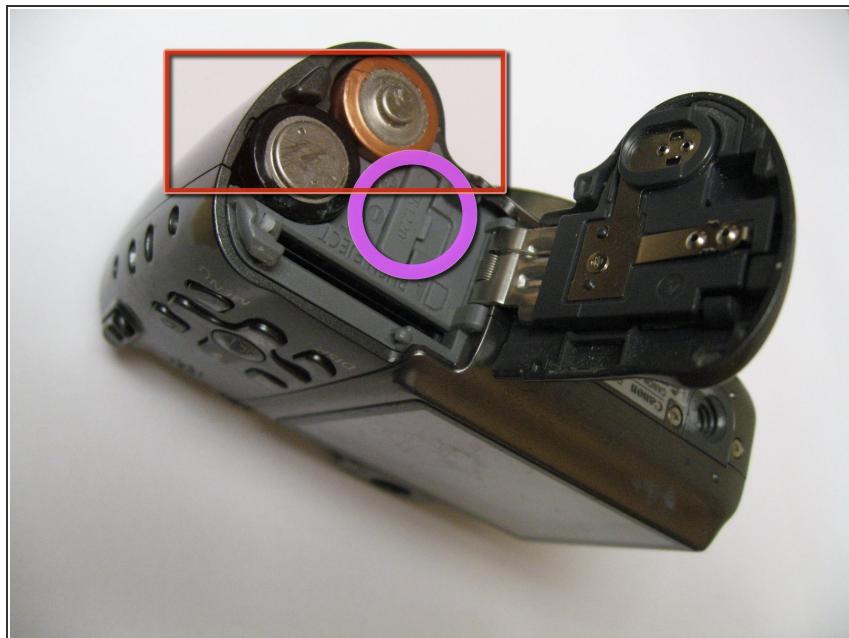

- This camera requires AA batteries. To remove batteries, simply allow them to fall out of the camera.
- The clock battery cover is shown here in the purple circle. Use a fingernail to lift the battery out of the camera.

Step 3 — Replacing Camera Batteries

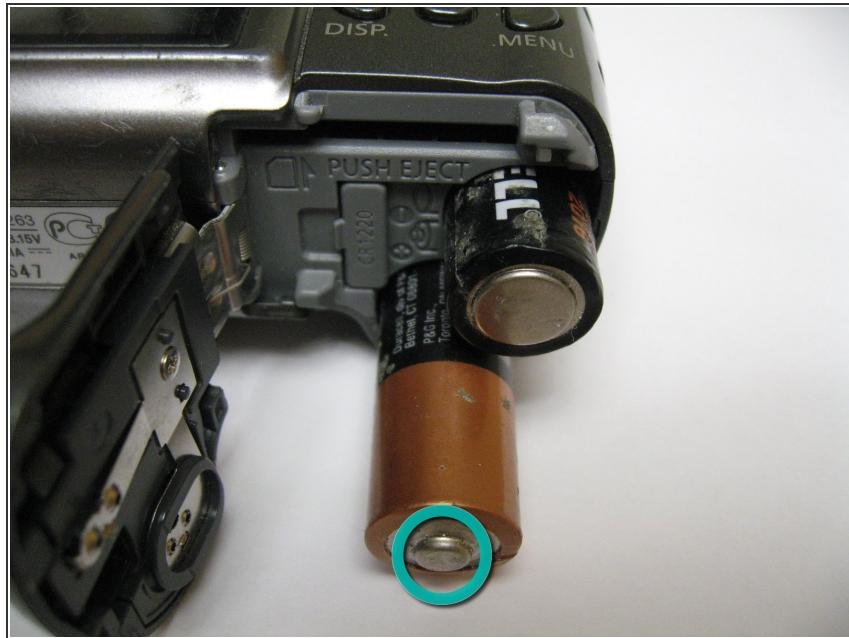

- When replacing the AA batteries, verify they are oriented correctly by following the (+) and (-) signs on the camera.

Step 4 — Remove Screw Near AV Port



- Remove the screw located under the rubber flap on the left side of the camera using a magnetic screwdriver.

Step 5 — Remove Side Screws



- Remove the two screws located on the other side of the camera using a magnetic screwdriver

Step 6 — Remove Bottom Screws



- Remove the three screws located at the bottom of the camera using a magnetic screwdriver.

Step 7 — Remove Back Cover



- Open the battery cover.
- Using the iPod tool, push up gently around all edges of the camera.

To reassemble your device, follow these instructions in reverse order.