



# Canon PowerShot A590 IS Batteries Replacement

This guide will instruct the user on what to do when the "low battery" message appears on the Canon A590 IS.

Written By: Zach



This document was generated on 2019-09-20 07:39:28 PM (MST).

## INTRODUCTION

First, we will locate the battery/memory card hatch. Second, we will change the main batteries and orient them properly. Third, we will change the clock battery.

### TOOLS:

- [iFixit Opening Tools](#) (1)

### PARTS:


- [AA Batteries](#) (2)
- [CR1220 watch battery](#) (1)

## Step 1 — Locate and Open Battery Hatch



- The battery hatch is on the bottom of the camera.
- ⚠ CAUTION: Locate the switch to open the hatch and push gently toward the front of the camera. Too much force can break the hatch.
- While the switch is pushed forward, pull the cover away from the camera.

## Step 2 — Locate and Remove Camera Batteries

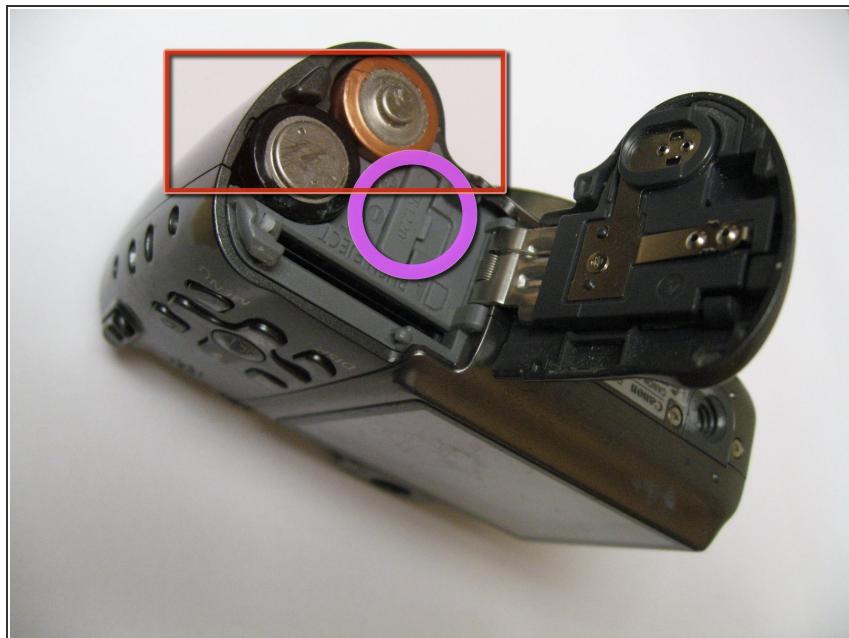

- This camera requires AA batteries. To remove batteries, simply allow them to fall out of the camera.
- The clock battery cover is shown here in the purple circle. Use a fingernail to lift the battery out of the camera.

## Step 3 — Replacing Camera Batteries



- When replacing the AA batteries, verify they are oriented correctly by following the (+) and (-) signs on the camera.

To install new batteries and reassemble your device, follow these instructions in reverse order.