



Canon PowerShot A590 IS Clock Battery Replacement

Replace the clock battery of your camera.

Written By: Matt Wolfe



INTRODUCTION

Locate and remove the clock battery from the camera.

TOOLS:

- [Phillips #00 Screwdriver \(1\)](#)

PARTS:


- [AA Batteries \(1\)](#)
- [CR1220 watch battery \(1\)](#)

Step 1 — Locate and Open Battery Hatch



- The battery hatch is on the bottom of the camera.
- ⚠ CAUTION: Locate the switch to open the hatch and push gently toward the front of the camera. Too much force can break the hatch.
- While the switch is pushed forward, pull the cover away from the camera.

Step 2 — Locate and Remove Camera Batteries

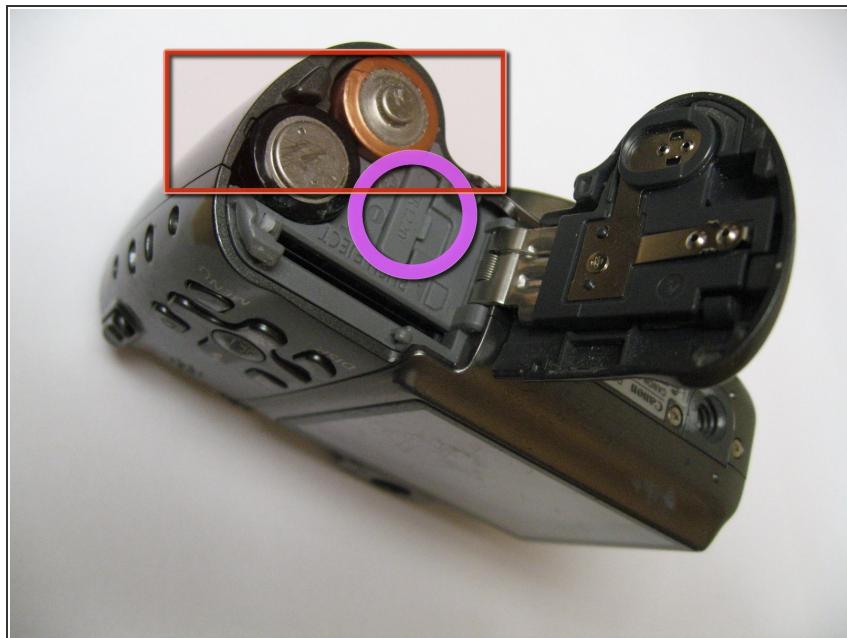


- This camera requires AA batteries. To remove batteries, simply allow them to fall out of the camera.
- The clock battery cover is shown here in the purple circle. Use a fingernail to lift the battery out of the camera.

Step 3 — Replacing Camera Batteries



- When replacing the AA batteries, verify they are oriented correctly by following the (+) and (-) signs on the camera.

Step 4 — Locate Clock Battery

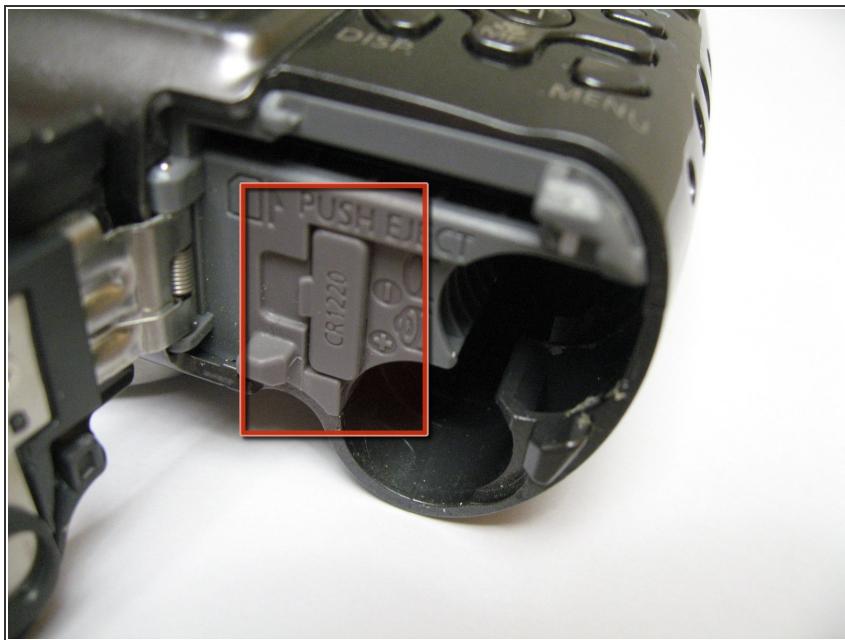


- To access the clock battery, find the clock battery cover, shown here in the red square.

Step 5 — Remove Battery Tab



- When accessing the clock battery, use a fingernail or similar small instrument to gently pull the tab out.

Step 6 — Remove Battery from Tab

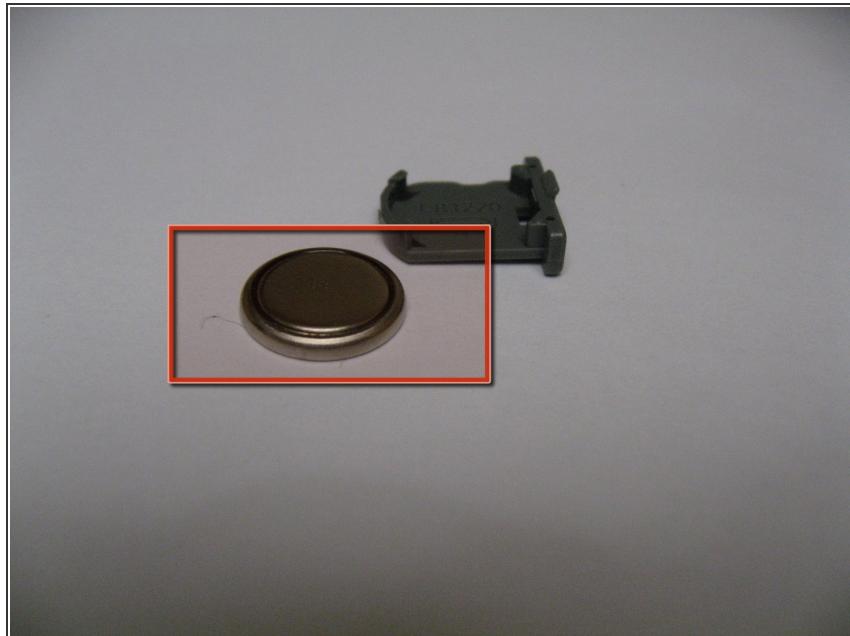

- Now that you have the tab and battery removed, use a fingernail or other small tool to remove the battery from the tab.
- This battery is a CR1220 type watch battery.

Step 7 — Replacing Clock Battery



 When replacing the clock battery, be sure to have the battery oriented properly, as shown in the picture.

 Remember, the tab goes in with the exposed side of the battery facing towards the lens.

To reassemble your device, follow these instructions in reverse order.