



# Canon PowerShot A630 LCD Screen Replacement

If your LCD screen is not properly displaying it may be damaged or broken and need to be replaced. This guide will show you how to replace the LCD screen on your camera.

Written By: Kady Rose



 **TOOLS:**


- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)
- [Spudger](#) (1)

## Step 1 — LCD Screen



- Open the LCD screen of the camera

## Step 2

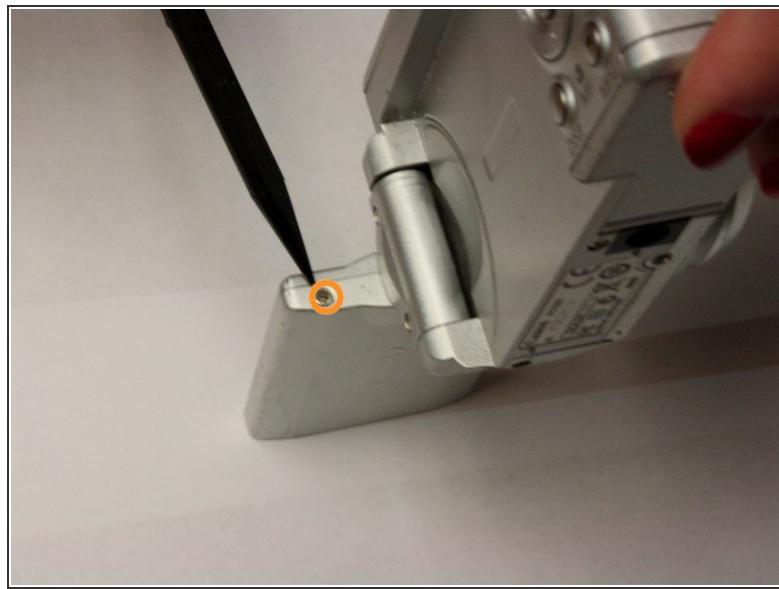


- Rotate the screen so that it is perpendicular to the body of the camera
- Remove the .2mm screw using a Phillips #00 screwdriver
- Rotate screen 180 degrees and remove second .2mm screw

## Step 3



- Gently remove the back panel of the LCD screen

## Step 4

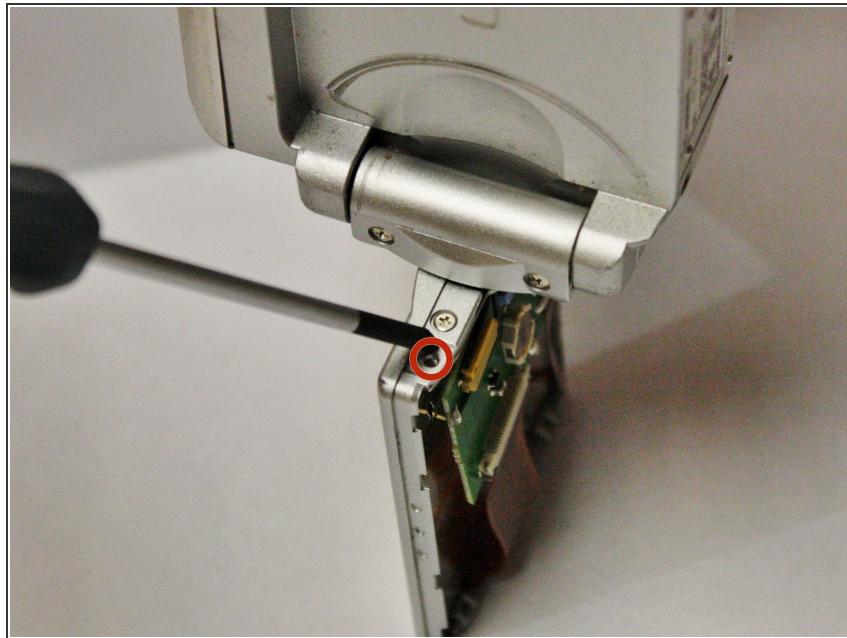



- Once the back panel is removed another .2mm screw will be revealed, remove this screw to remove the front panel of the LCD screen

## Step 5





- Gently remove front panel of the LCD screen

## Step 6

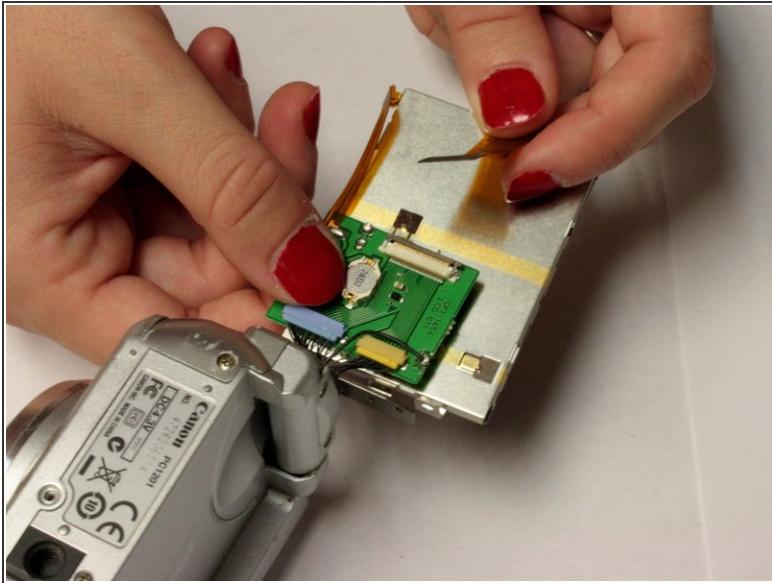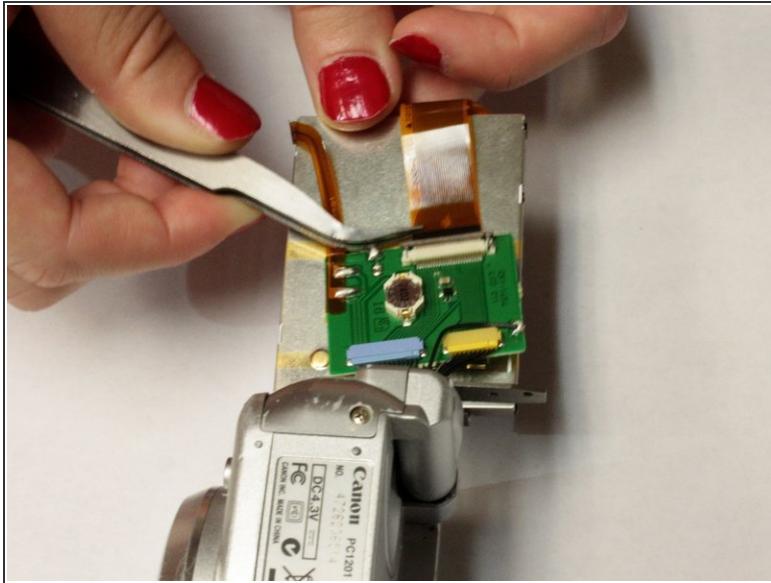

- Locate the ribbon (orange) and using tweezers gently pull back the retaining clip and pull the ribbon out

## Step 7

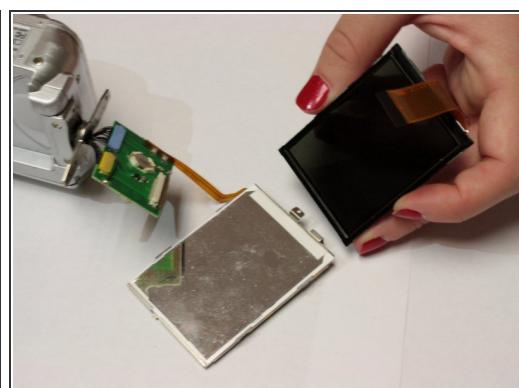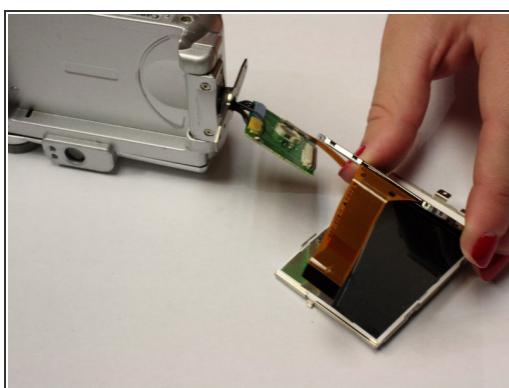

- Use a spudger to gently remove the LCD screen from the metal backing plate

To reassemble your device, follow these instructions in reverse order.