



Canon PowerShot A630 Memory Memory Card Replacement

This guide will show you how to replace your Canon PowerShot A630's memory card

Written By: Kelly Duggan



INTRODUCTION

Replacing the memory card in the Canon PowerShot A630 is simple and doesn't require any tools.

Step 1 — Open Battery Door



- Locate battery door latch to open it.

Step 2



- Slide the tab on the battery door while pushing the battery door away from the camera.
- Battery door should pop open.

Step 3



- Press down on memory card and release so that the memory card pops up.
- Remove memory card.

Step 4



- Insert new memory card into the proper slot.

To reassemble your device, follow these instructions in reverse order.