



Canon PowerShot A75 Batteries Replacement

This guide shows you how to remove the camera's batteries

Written By: Henry Braden Fisk



INTRODUCTION

Use this guide to replace the Canon PowerShot A75's batteries.

Step 1 — Batteries




- Turn the camera over and locate the "BATT OPEN" sliding switch.

Step 2



- Slide the switch to the right.
- *(i)* The battery cover should slide down and spring open.

Step 3

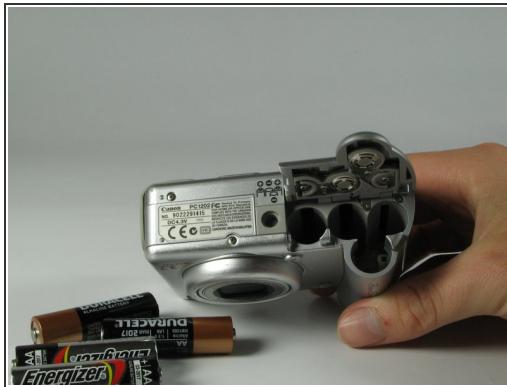

- Remove the 4 AA batteries.
 - ⓘ Watch for the orientation of the batteries as they slide out.
 - ⚡ The battery orientation is shown under the battery flap itself and on a sticker next to the battery flap.

Put in fresh batteries. Gently shut the flap and slide it forward until you hear a click.