


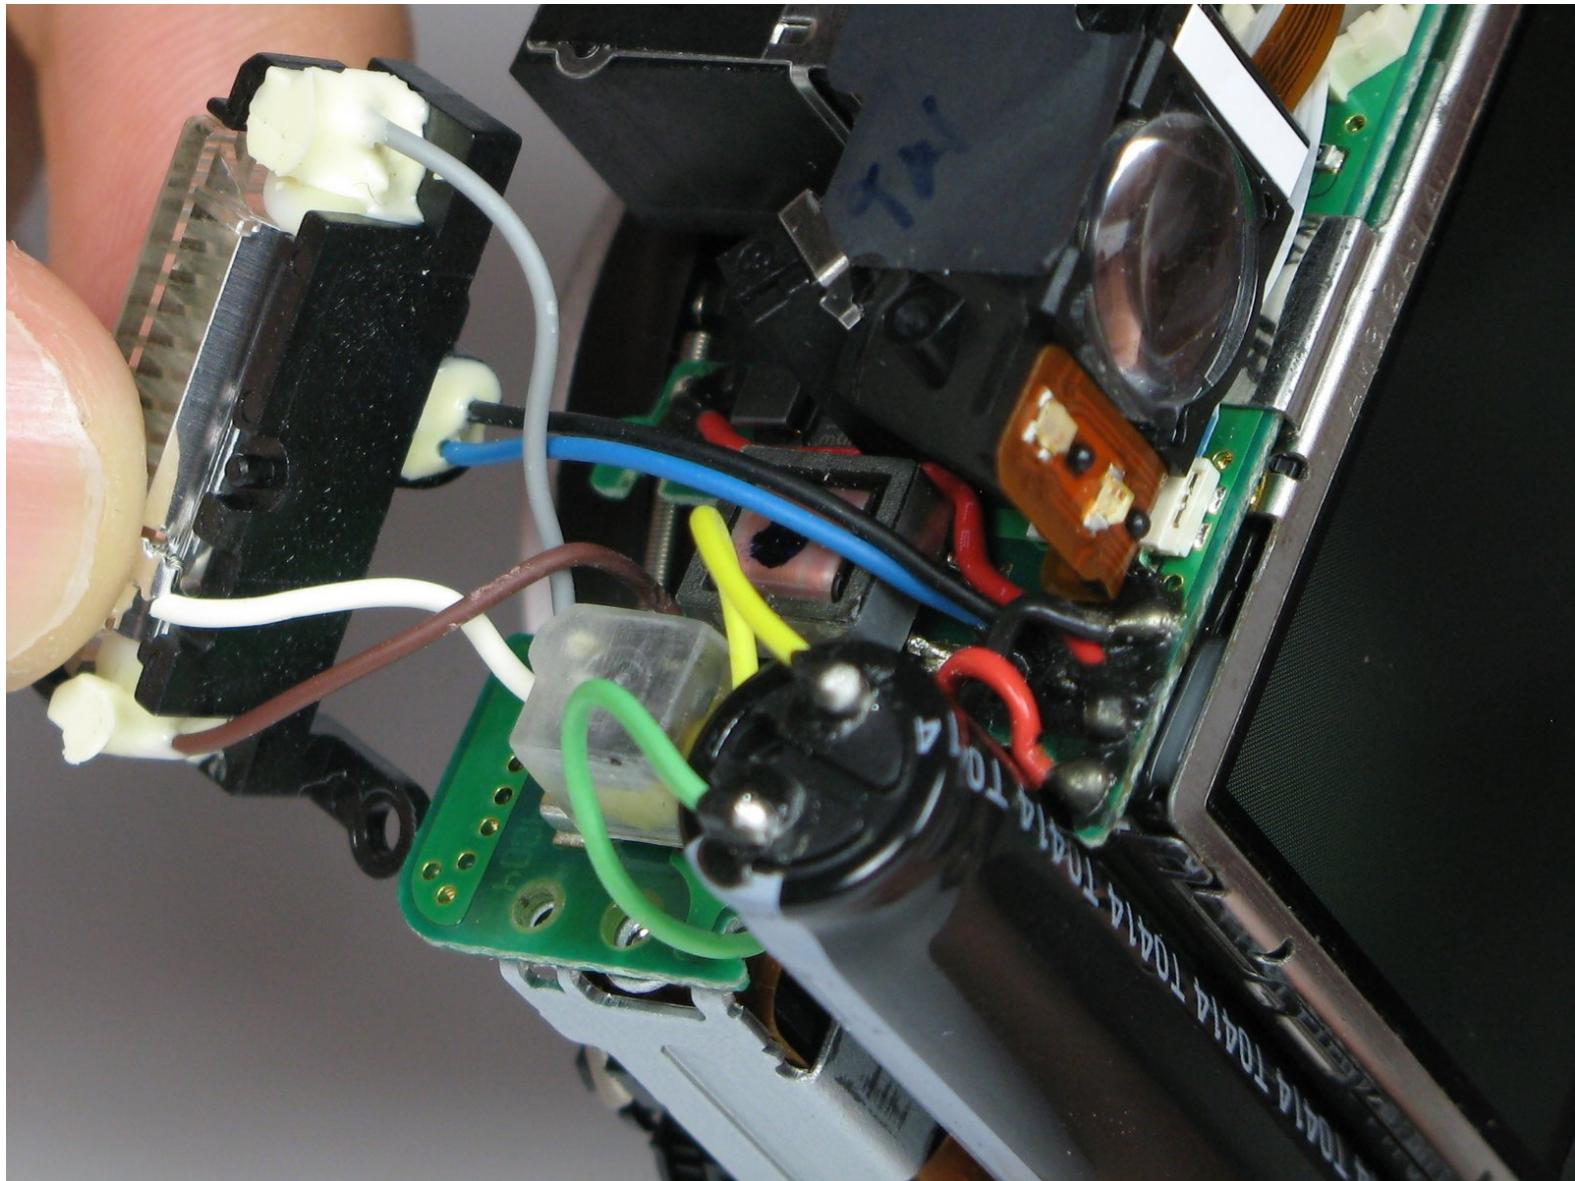

# Canon PowerShot A75 Flash Unit Replacement

This guide shows you how to replace the flash unit of the Canon PowerShot A75.

Written By: Chris Miyahira



## INTRODUCTION

Use this guide to replace the Canon PowerShot A75's flash unit.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Soldering Iron](#) (1)
- [Tweezers](#) (1)

## Step 1 — Batteries




- Turn the camera over and locate the "BATT OPEN" sliding switch.

## Step 2



- Slide the switch to the right.
- *(i)* The battery cover should slide down and spring open.

## Step 3

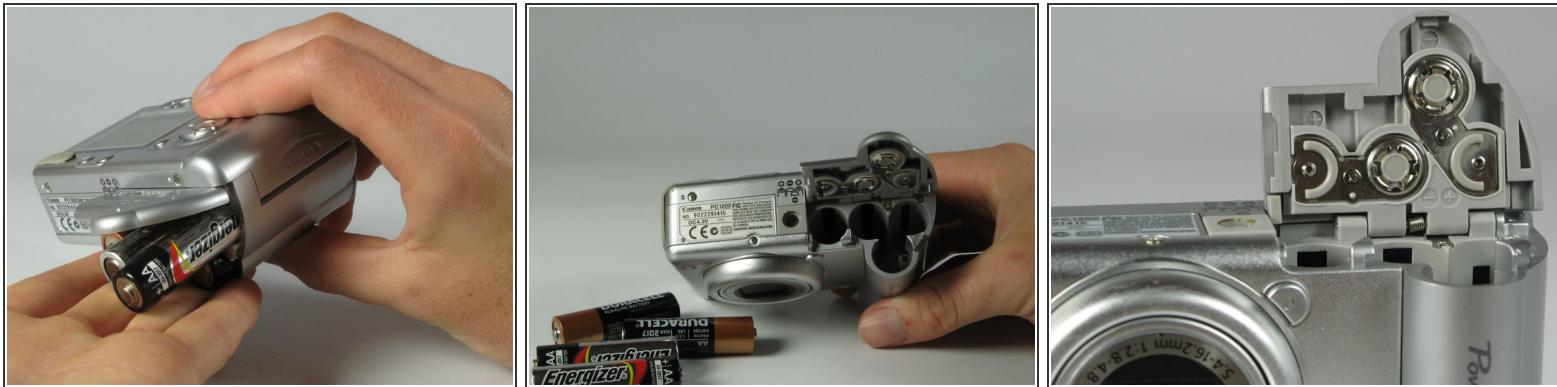

- Remove the 4 AA batteries.
  - ⓘ Watch for the orientation of the batteries as they slide out.
  - ⚡ The battery orientation is shown under the battery flap itself and on a sticker next to the battery flap.

## Step 4 — Casing




- Remove the three 2.5mm screws on the bottom of the camera.

## Step 5




- Remove the 3.8mm screw underneath the flap that covers the A/V port.

## Step 6

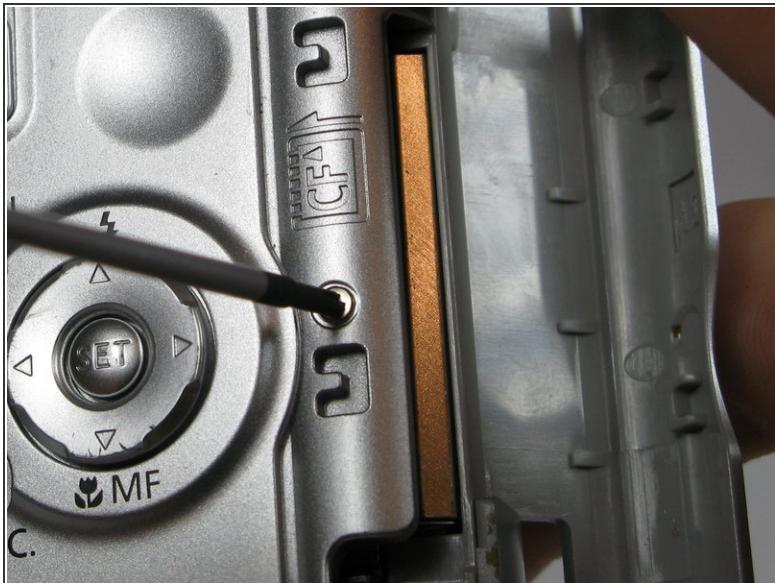


- Remove the 2.4mm screw located underneath the cover of the memory card slot.

## Step 7

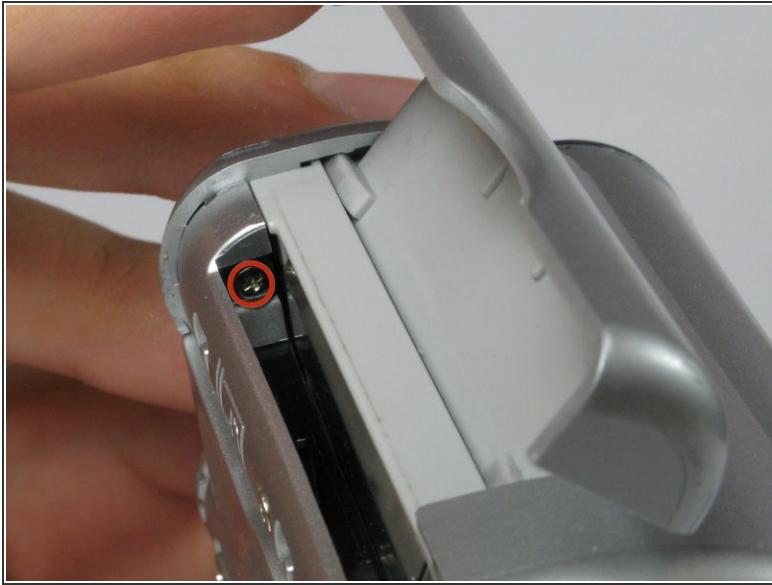

- Open the memory card slot by sliding it laterally until you hear a click.
- Remove the 5.9mm screw in the upper corner of the memory card slot.

## Step 8

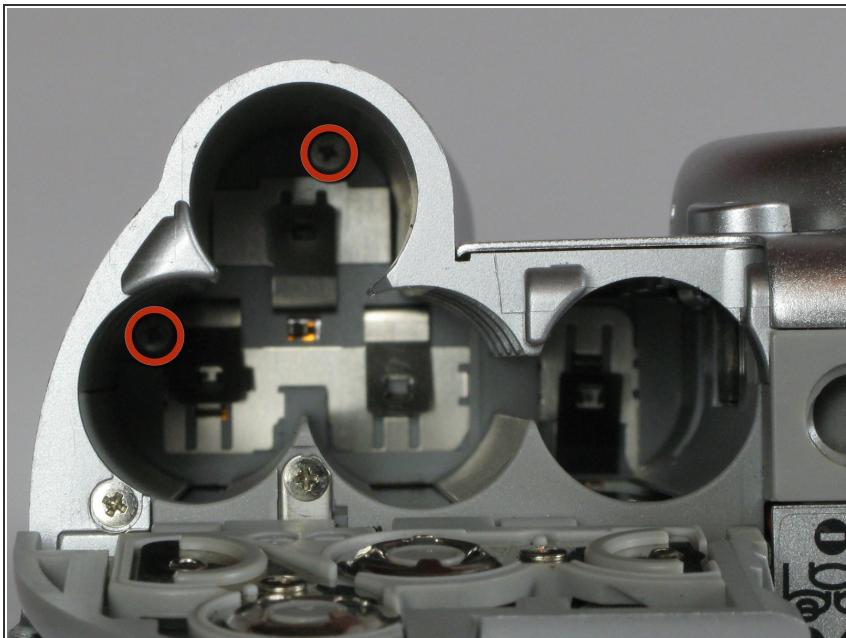

- Remove the two 4.1mm screws at the bottom of the battery flap.

## Step 9



- Lift the shutter button and speaker part from the top of the camera.


 **DO NOT** pull the part too hard because there is a plug connecting the speaker to the camera.

## Step 10



- Using a pair of tweezers, grab the plug that connects the speaker to the camera and gently pull it out.

## Step 11

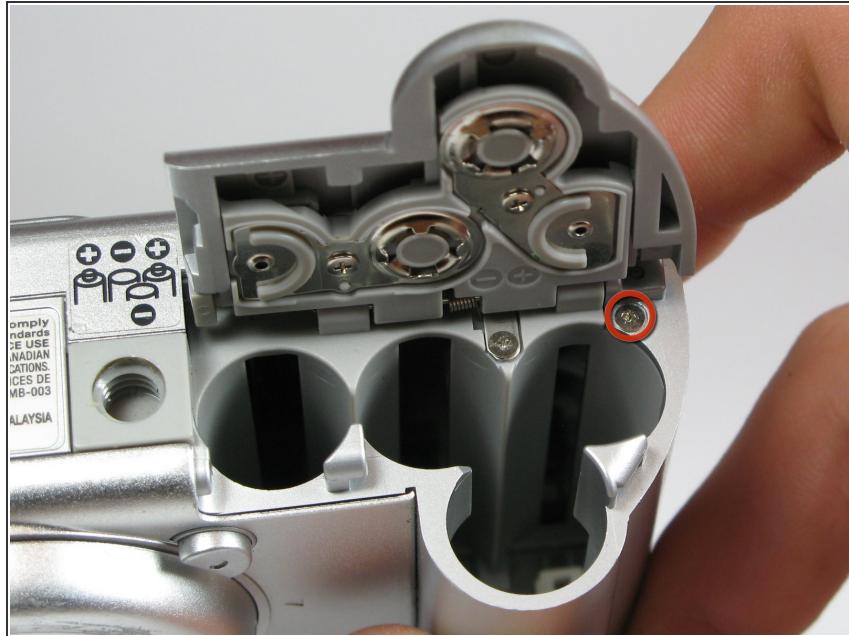

- Remove the rightmost 4.2mm screw underneath the battery cover, not the center screw.

## Step 12



- Separate the back casing and front casing of the camera using your hands.
- (i)* Pulling the two halves apart can be difficult, especially at the top. Use a moderate amount of force.

## Step 13



- On the front of the camera, press the button on the lower left of the lens.
- Twist the outer lens casing counter-clockwise and slide it out.


## Step 14



- Take off the front casing.


There is a black rubber washer around the lens that comes out after you take the casing off. Make sure to replace it when putting the camera back together.

## Step 15 — Flash Unit

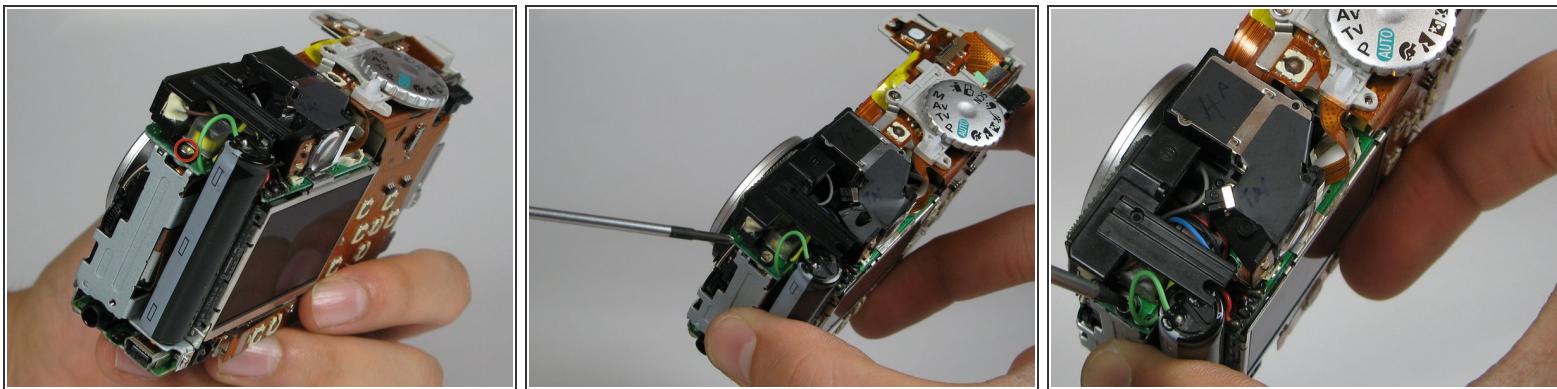

- Rotate the camera such that the flash unit and capacitor are facing you.
- ⚠ **DO NOT** touch the capacitor because it may shock you.
- Remove the 3.5mm screw located between the flash unit and the capacitor.

## Step 16

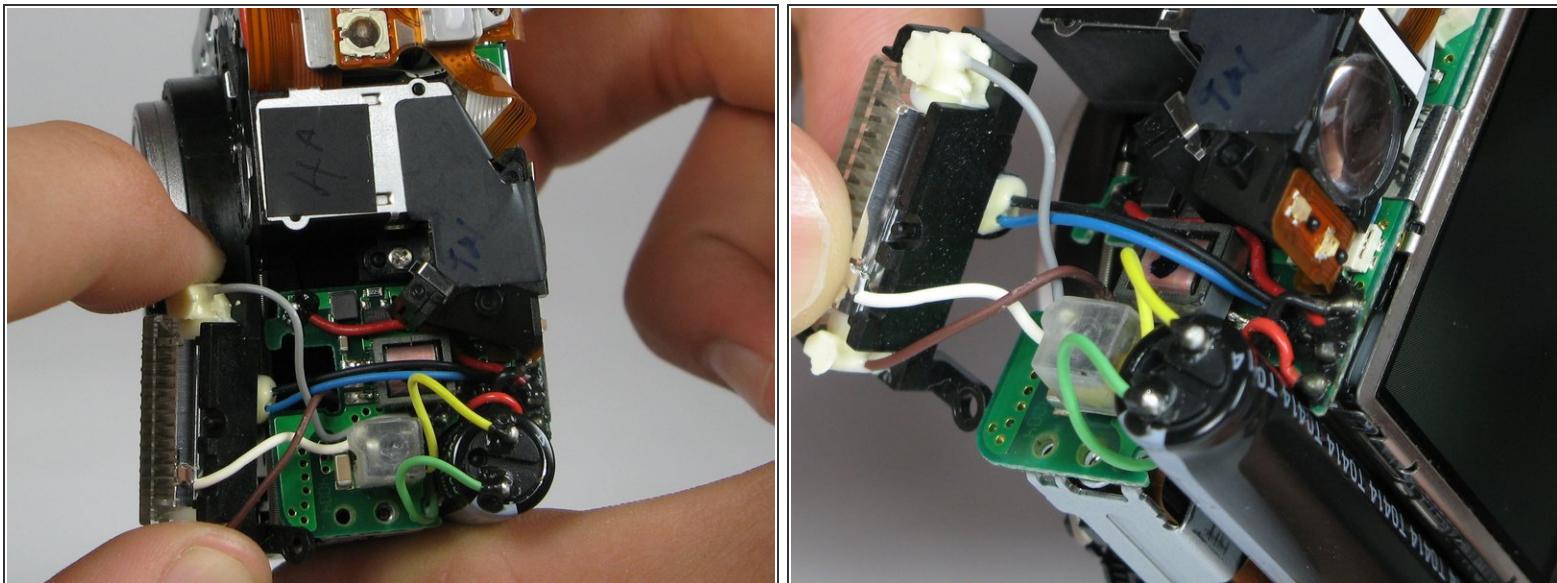

- Snap flash unit out of place with your fingers.
- ⚠ Do not proceed to the next step unless you have previous soldering experience because you can damage the flash unit if you are not careful.
- Unsolder the five wires connected to the flash unit in order to remove it.

To reassemble your device, follow these instructions in reverse order.