



Canon PowerShot ELPH 150 IS Face Plate Replacement

Replace the face plate/front panel of your Canon PowerShot ELPH 150 IS with these easy steps.

Written By: Alex Larrimore



INTRODUCTION

This guide will help users of all abilities to replace the faceplate/front panel of their camera.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Back Plate/Menu Buttons



- Locate the ON/Off button on the top of the camera and hold it down until the screen and all lights on the camera go dark.

Step 2



- Locate the back plate of the camera (contains the LCD screen and menu buttons).

Step 3



- To remove the back plate you will need to unscrew the 6 support screws securing it to the camera.
- The first 2 screws are located on the bottom of the camera.
- Remove the screws using a Phillips #00 screwdriver.

Step 4



- Remove the next 2 screws located behind the AV port using the same Phillips #00 screwdriver.

Step 5



- Use a Phillips #00 screwdriver to remove the final 2 screws from the blue side panel.

Step 6



- Once screws are removed, gently pry the front plate and backplate apart along the seems on the bottom of the camera.
- Completely remove the back plate.

To reassemble your device, follow these instructions in reverse order.