



Canon PowerShot ELPH 150 IS Battery Replacement

Replace the battery in a Canon PowerShot ELPH 150 IS.

Written By: Morgan Forester



INTRODUCTION

This guide will teach you how to replace the battery for your camera.

Step 1 — Battery



- Safety First: Power off your device. Locate the On/Off button.

Step 2



- Hold button down firmly until the screen goes dark and the camera is powered off.

Step 3



- Locate the Battery door which is marked, "CARD/BATT OPEN"

Step 4



- Press the door down with your thumb and slide to the right until you hear a click. This means the door has unlocked and will open.

Step 5



- With the door open, locate the orange clip near the edge of the camera. This clip is holding the battery in place.

Step 6



- Press the orange clip back towards the back plate to release the battery.

Step 7



- The battery should pop out easily and you can simply remove the battery from its housing.

To reassemble your device, follow these instructions in reverse order.