




# Canon PowerShot ELPH330 HS Camera Repair

## LCD Screen Replacement

Use this guide to replace the LCD screen in your Canon PowerShot ELPH330 HS Camera.

Written By: Michelle Ngo

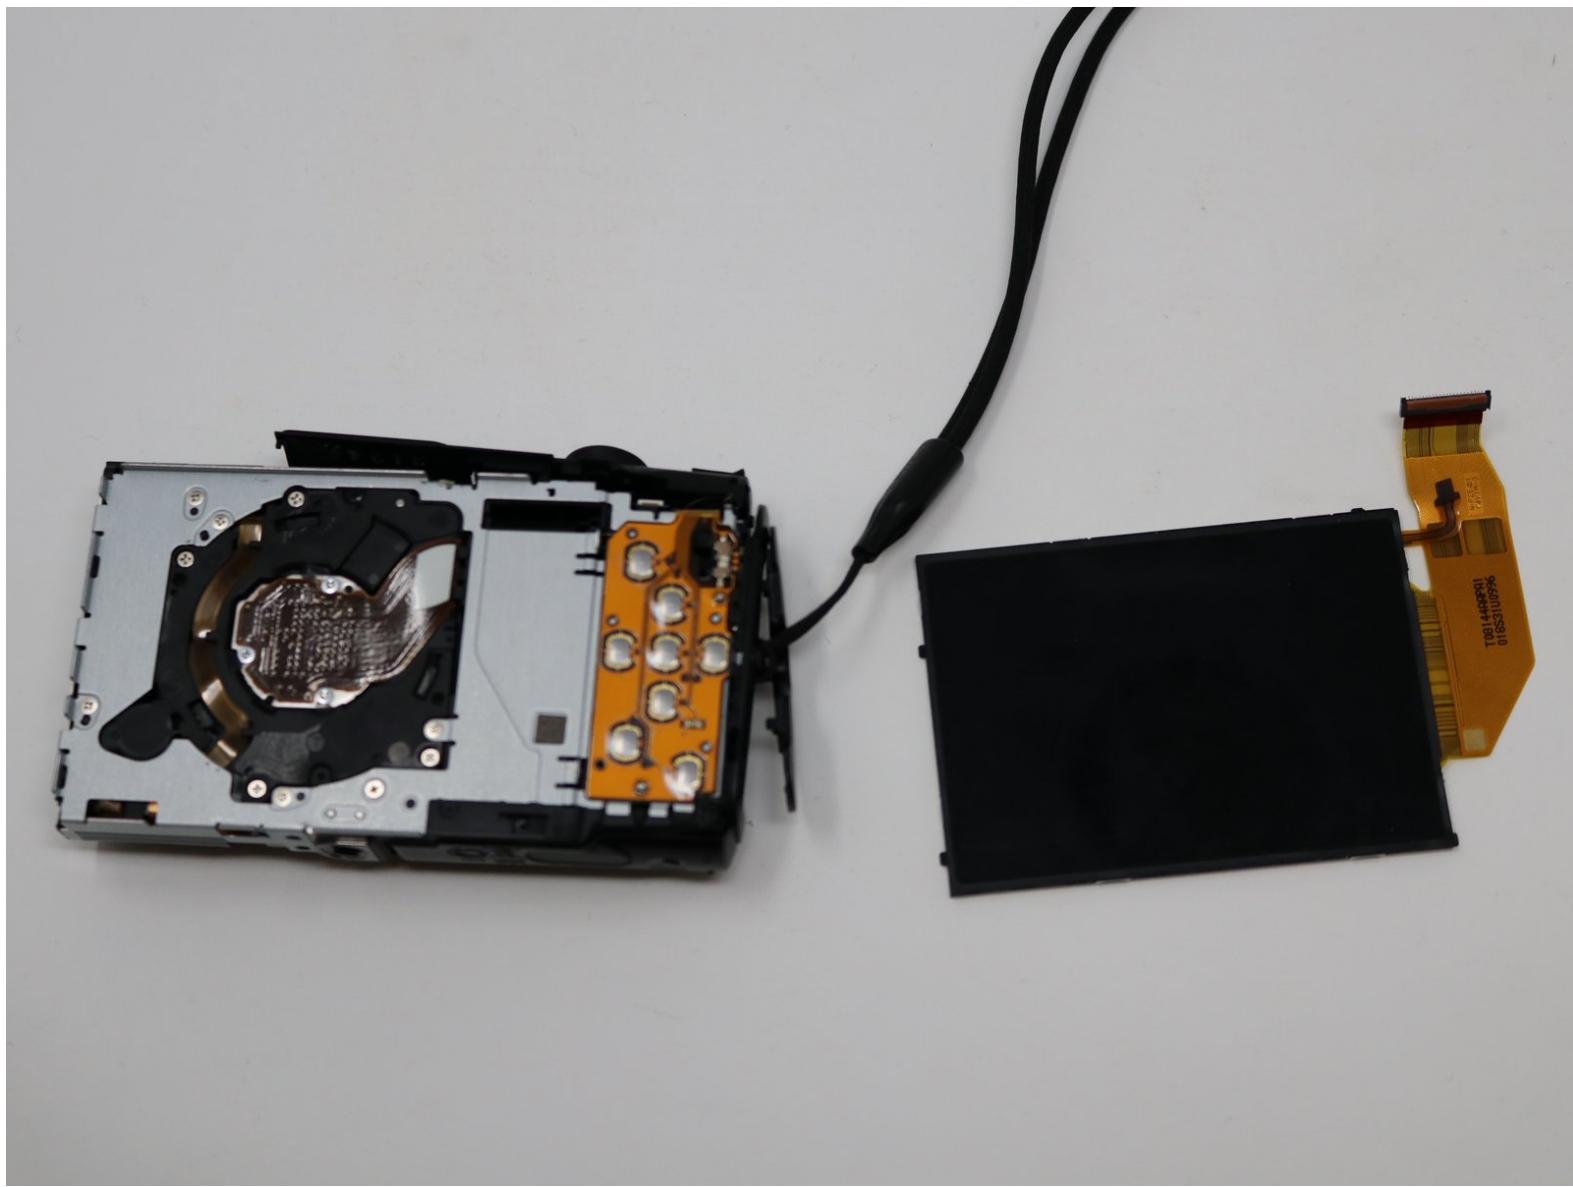

## INTRODUCTION

If you're experiencing problems with your screen, consider reading this guide. This guide will show you how to replace the LCD screen in your Canon PowerShot ELPH 330 HS.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [Spudger](#) (1)

### PARTS:

- [Canon Replacement LCD for PowerShot ELPH 330 HS](#) (1)

## Step 1 — LCD Screen



- Turn off your camera.
- Remove the battery.
  - Slide the battery door open with the rubber pad on the bottom right side of the camera.
  - Remove the battery by pushing down on the release button.

## Step 2




- Remove the two screws on the left side with a Phillips #00 screwdriver.

## Step 3




- Remove the two screws on the bottom of the camera with a Phillips #00 screwdriver.

## Step 4

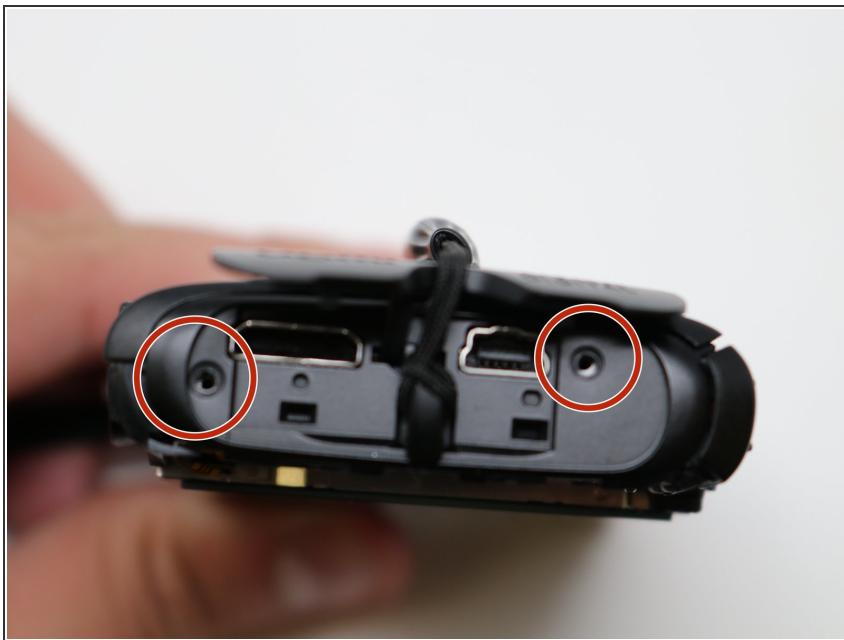


- Remove the two screws on the right side with a Phillips #00 screwdriver.

## Step 5

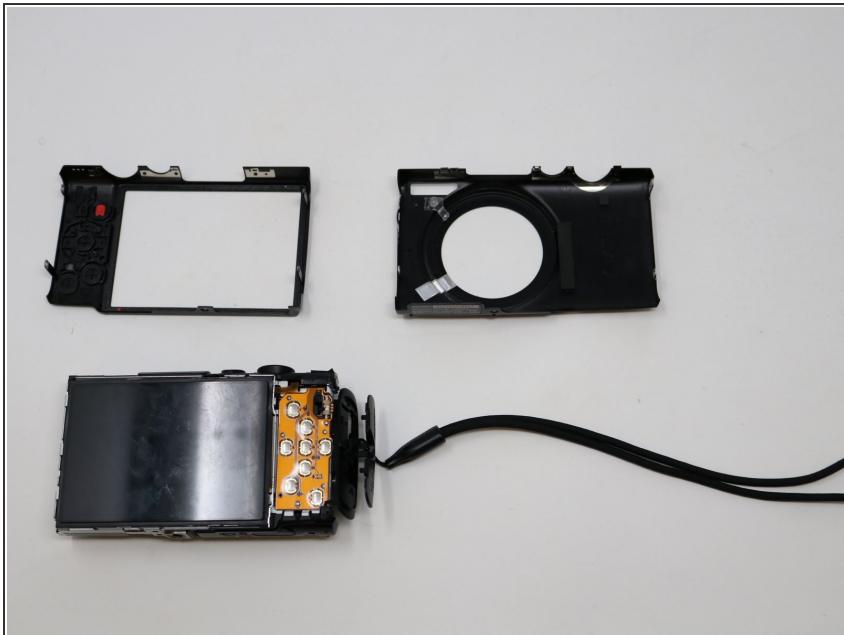


- Using your fingers, carefully pry the case apart at the seam.

## Step 6

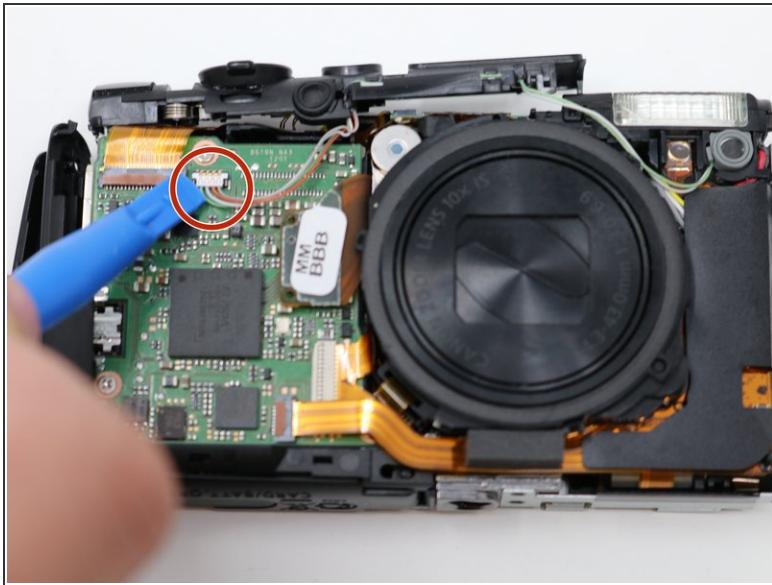


- Flip the camera over so that the lens is facing you.
- Disconnect the highlighted port from the motherboard.

## Step 7

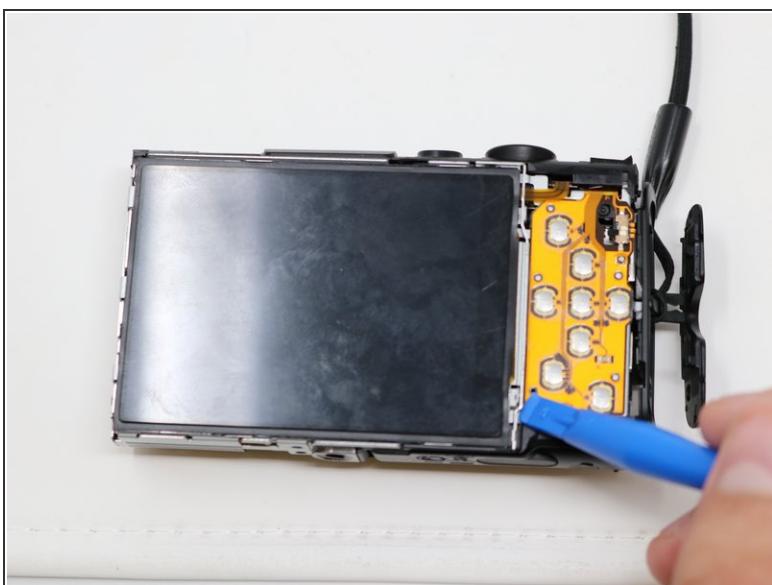

- Remove the bracket around the LCD screen.

## Step 8

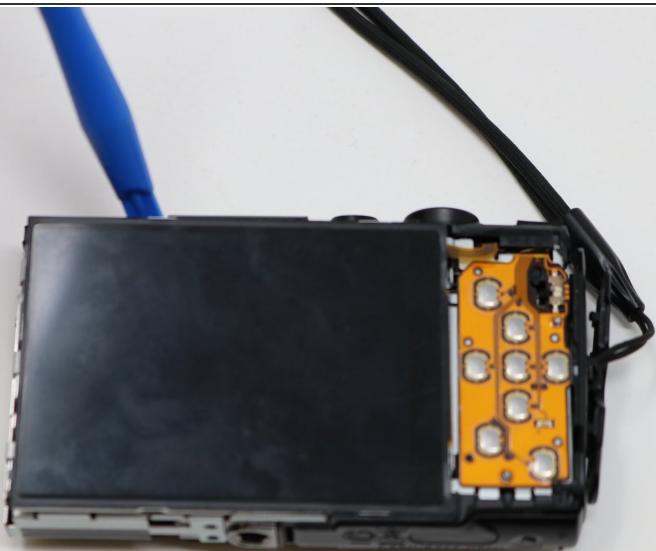

- Using the spudger, carefully pry the top to remove the LCD screen.

To reassemble your device, follow these instructions in reverse order.