



Canon PowerShot G11 Rear Cover Replacement

This will be the first step in getting to any of the guides that require access to the main section of the camera. The guide will begin with removing the outer most screws for the rear cover.

Written By: Dustin Brinegar



This document was generated on 2019-09-17 09:17:56 PM (MST).

INTRODUCTION

Turning off the camera, removing the battery, and removing the memory card. Unplugging the camera from any device it is hooked up to.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)

Step 1 — Rear Cover



- Remove the three screws on the bottom of the camera using the 00 sized phillips head screw driver.

Step 2



- Remove the four screws on the left side of the camera.

Step 3



- Remove the screw on the right side of the camera.

Step 4



- Open up the HDMI port on the right side of the camera. Then remove the screw in the HDMI port.

Step 5



- Remove the screw to the right of the view finder on the rear of the camera.

Step 6



- Use the spudger to crack open the case.

Step 7



⚠ The rear case is still attached to the camera with a ribbon cable. The socket has a flip up lid that must be flipped up before the cable can be removed. Use the tweezers to flip the cable attachment up.

Step 8



- The rear cover is now unattached from the camera.

To reassemble your device, follow these instructions in reverse order.