



Canon PowerShot G7X Battery Replacement

How to quickly and easily replace the battery in your Canon PowerShot G7X.

Written By: Paul Grove



INTRODUCTION

This guide will assist you in replacing your battery.



PARTS:

- [Canon NB-13L Battery \(1\)](#)

Step 1 — Battery



- Flip the camera over to reveal the battery cover.

Step 2



- Slide the cover latch towards the center of the camera using your finger.

Step 3



- Slide the Light Brown latch with finger towards the screen.
- Remove the battery from the device.

To reassemble your device, follow these instructions in reverse order.