



# Canon PowerShot S120 Display Replacement

Show how the display of a Canon S120 can be replaced if it's cracked.

Written By: Dave Hakkens



## INTRODUCTION

The display of my canon s120 broke. Ordered a new display somewhere on Ebay and installed it. It's super easy!

### TOOLS:

- Small Cross Screwdriver (1)

## Step 1 — Get your camera



- So that's the problem: a cracked screen. The rest still works fine.

## Step 2 — Get a new part

NEW LCD Display Screen for Canon PowerShot S120 Digital Camera Repair Part+Touch

Item condition: New

Quantity: 1 More than 10 available / 15 sold

Price: GBP 20.00 Approximately US \$26.46

Buy another

8 watching

A seller you've bought from

New condition

Shipping: GBP 2.99 (approx. US \$4.11) Economy Int'l Postage | See details

See details about international shipping here

From: Shenzhen, China

Ships to: Worldwide

Delivery: Estimated between Wed, Jan 20 and Thu, Feb 4

Payments: PayPal VISA MasterCard processed by PayPal

Returns: 14 days, buyer pays return shipping | See details

Guarantee: eBay MONEY BACK GUARANTEE | See details

Get the item you ordered or get your money back. Covers your purchase price and original shipping.

Have one to sell? Sell now

People who viewed this item also viewed

- NEW LCD Display Screen for Canon... \$19.99
- NEW LCD Display Screen for CANON... \$29.99
- NEW LCD Display Screen for Canon... \$35.99
- NEW LCD Display Screen for Canon... \$15.00
- NEW LCD Display Screen for Canon... \$35.99

- First step is finding a replacement part. Canon support isn't very good here. So I've been searching the


web and found some good results on Ebay. Order one of these, all you need.

### Step 3 — Open the camera




- You only need one small cross screw head screwdriver to open up the camera. It takes 9 screws to take out the display.

### Step 4 — Disconnect the connectors

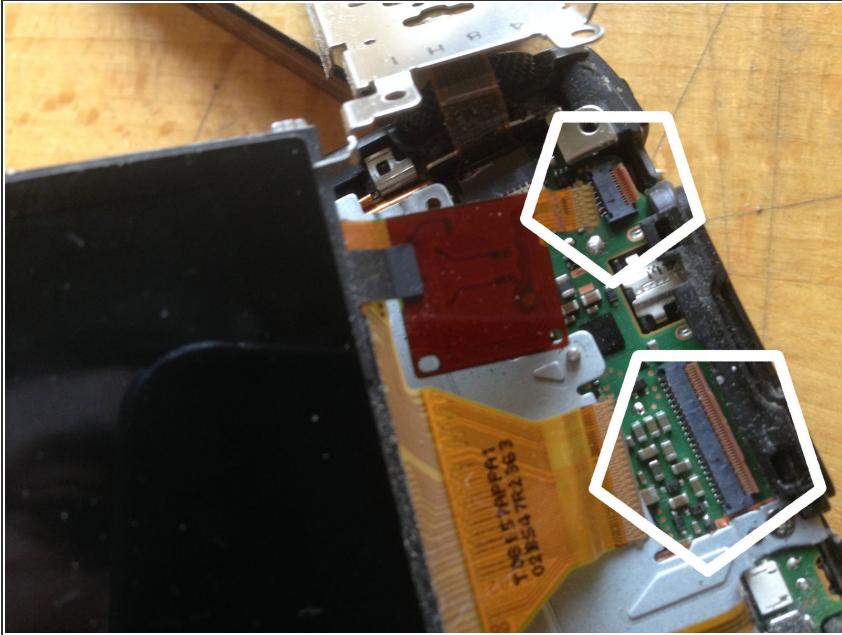

- The display is plugged in the camera with 3 little connectors. Carefully click the hinge open and you can pull out the connector.

## Step 5 — Overview of all the components

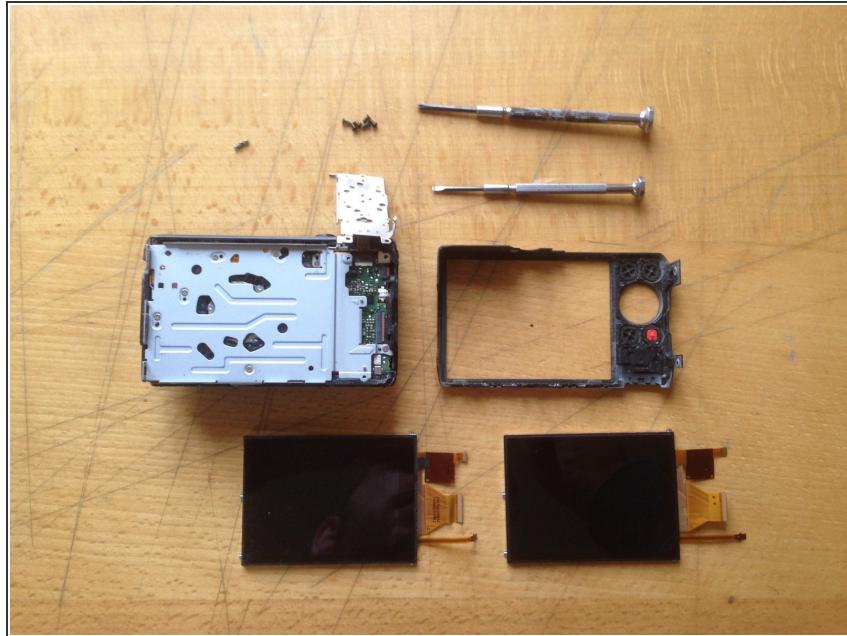

- this is what it should look like when everything is disassembled.

## Step 6 — Put it back together



- replace the display, plugin the connectors, and screw it back together. It should work again right after you turn it on

To reassemble your device, follow these instructions in reverse order.