



Canon PowerShot S230 Memory Card Replacement

The Canon PowerShot S230 uses a CompactFlash memory card. Removing the memory card from the camera.

Written By: Alyssa Osberg



This document was generated on 2019-09-23 09:28:13 AM (MST).

INTRODUCTION

This guide will show you how to remove the CompactFlash memory card.

Step 1 — Memory Card



- Locate the sliding button labeled "CF open" on the back of the camera.
- Press and slide down the button labeled "CF open". The memory card cover will pop open.

Step 2



- Push down on the black square button next to the memory card slot. This will release the memory card from the slot.

Step 3



- Pull the memory card out of the memory card slot.

To reassemble your device, follow these instructions in reverse order.