



Canon PowerShot S410 Back Cover Replacement

Removing and replacing a damaged or worn back cover.

Written By: Randy Lormand



INTRODUCTION

This guide demonstrates how to remove the cameras back panel for cleaning or replacement.

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — Battery



(i) Turn the camera with the bottom side facing up.

- Locate the panel labeled "Batt. Open"
- Place your finger on the panel and slide it in the direction of the arrow.
- The slot will swing open revealing the battery pack.

Step 2



i Rotate the camera so that the slot is horizontal.

- Pull the orange lever and the battery will spring out slightly.

Step 3



- Grasp battery and fully pull out of slot

i When placing the new battery back in the slot, the arrow on the battery must align with the arrow on the camera.

Step 4 — Back Cover




- ❶ Start by laying the camera flat with the LCD screen facing up.
- Remove the 3.8mm screw in the upper right corner.

Step 5



- ❷ Position the camera with the bottom facing up.
- Remove the 4.8mm screw.
- Remove the two 2.3mm screws.

Step 6

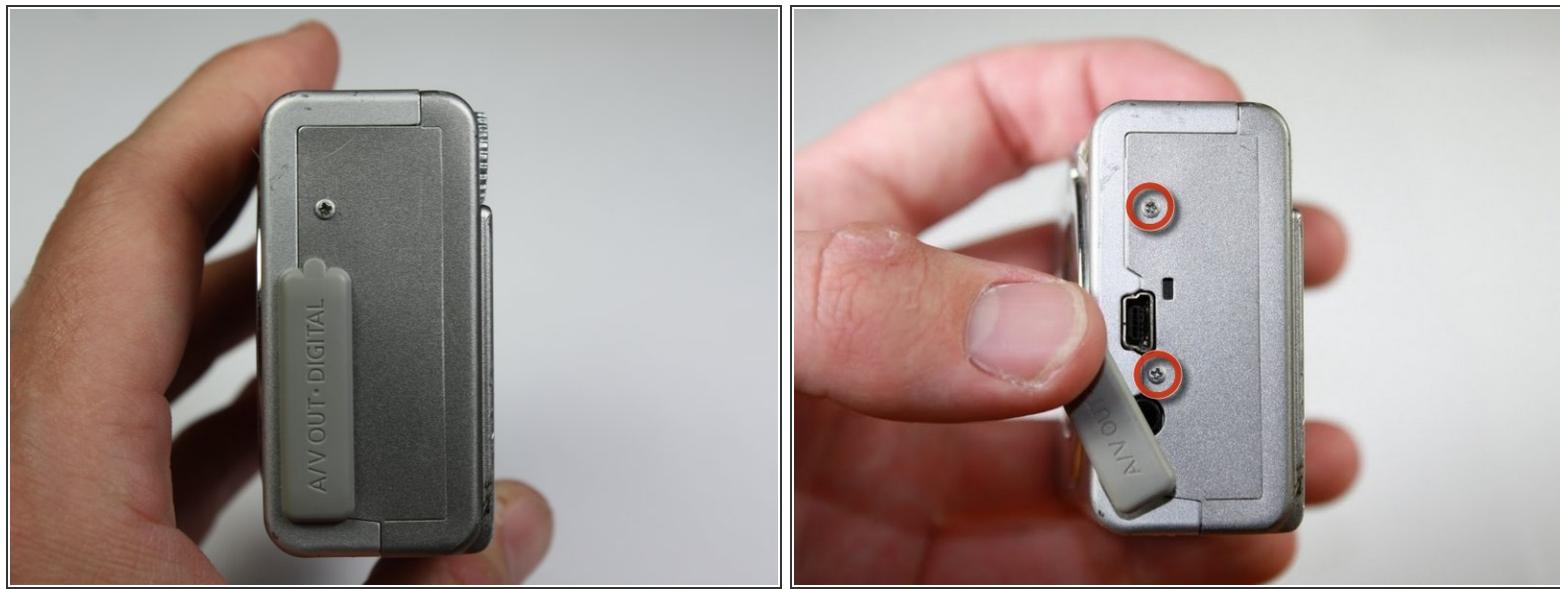

(i) Position the camera so that the rubber "AV Out Digital" tab is facing upward.

- Slide this rubber tab out of the way to reveal the bottom screw.
- Remove the two 3.7mm screws.

Step 7



(i) Turn the camera with the back side facing you.

- Grip the edges of the back plate, and carefully slide it off.

! If there is any resistance in movement, double check there are no screws left in the chassis.

To reassemble your device, follow these instructions in reverse order.