



# Canon PowerShot S410 Battery Replacement

Replacing dead batteries.


Written By: Randy Lormand



## INTRODUCTION

This guide demonstrates how to remove and replace the battery pack.

## Step 1 — Battery

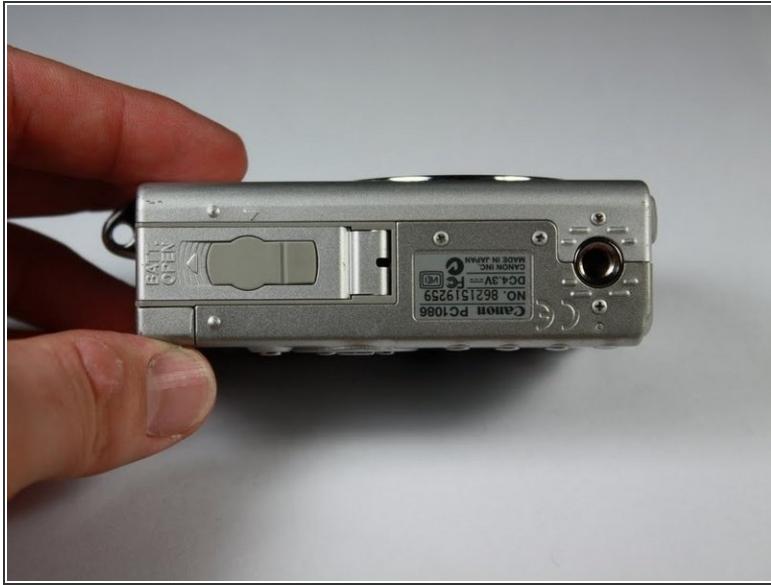

*(i)* Turn the camera with the bottom side facing up.

- Locate the panel labeled "Batt. Open"
- Place your finger on the panel and slide it in the direction of the arrow.
- The slot will swing open revealing the battery pack.

## Step 2



*i* Rotate the camera so that the slot is horizontal.

- Pull the orange lever and the battery will spring out slightly.

## Step 3



- Grasp battery and fully pull out of slot

*i* When placing the new battery back in the slot, the arrow on the battery must align with the arrow on the camera.

After a new battery has been inserted, close the swinging door and you're done.