


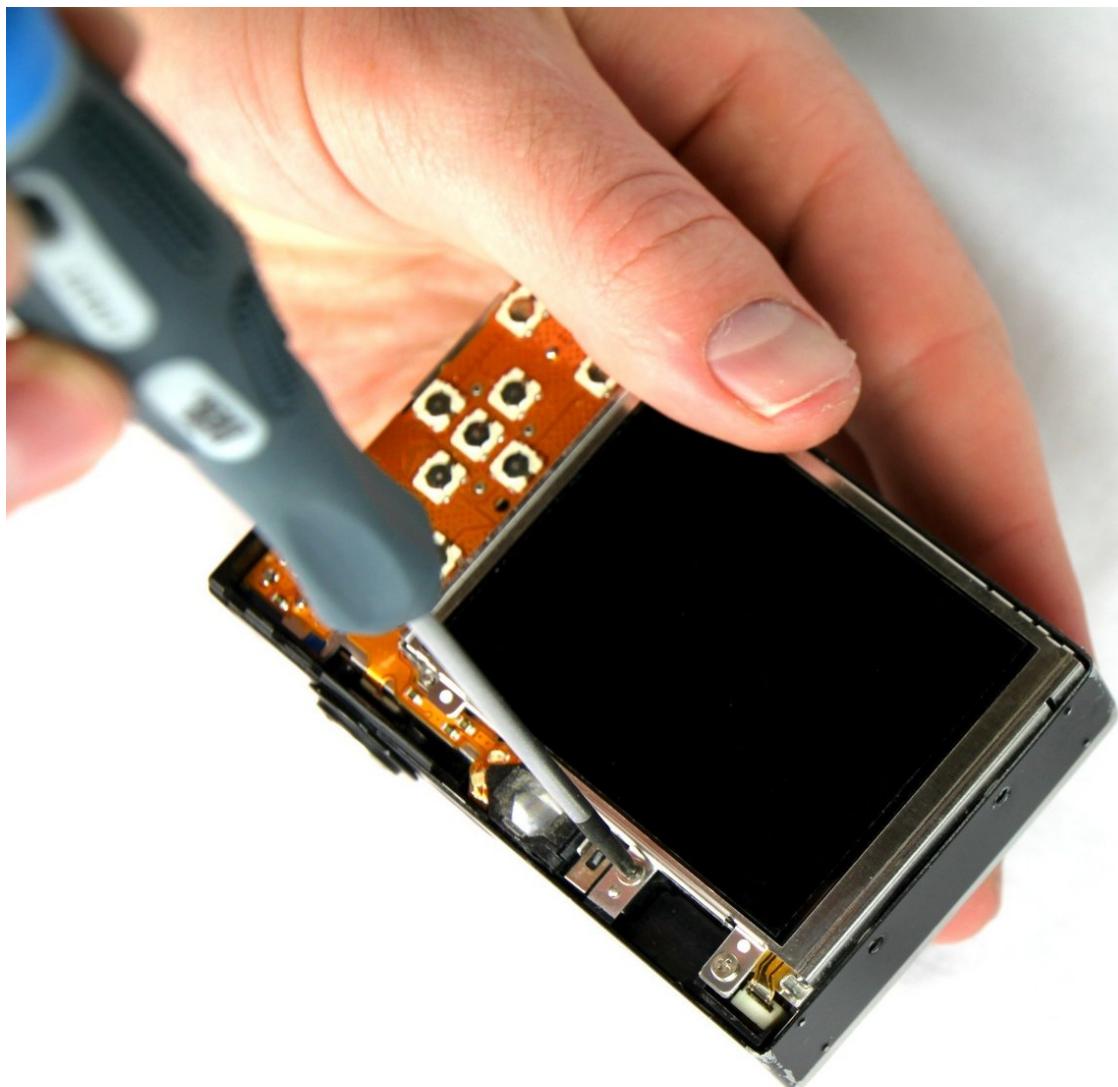

Canon PowerShot SD1000 LCD Screen Replacement

This is the removal of the LCD screen in order to clean or replace it.


Written By: Phillip Phung



 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Back Panel

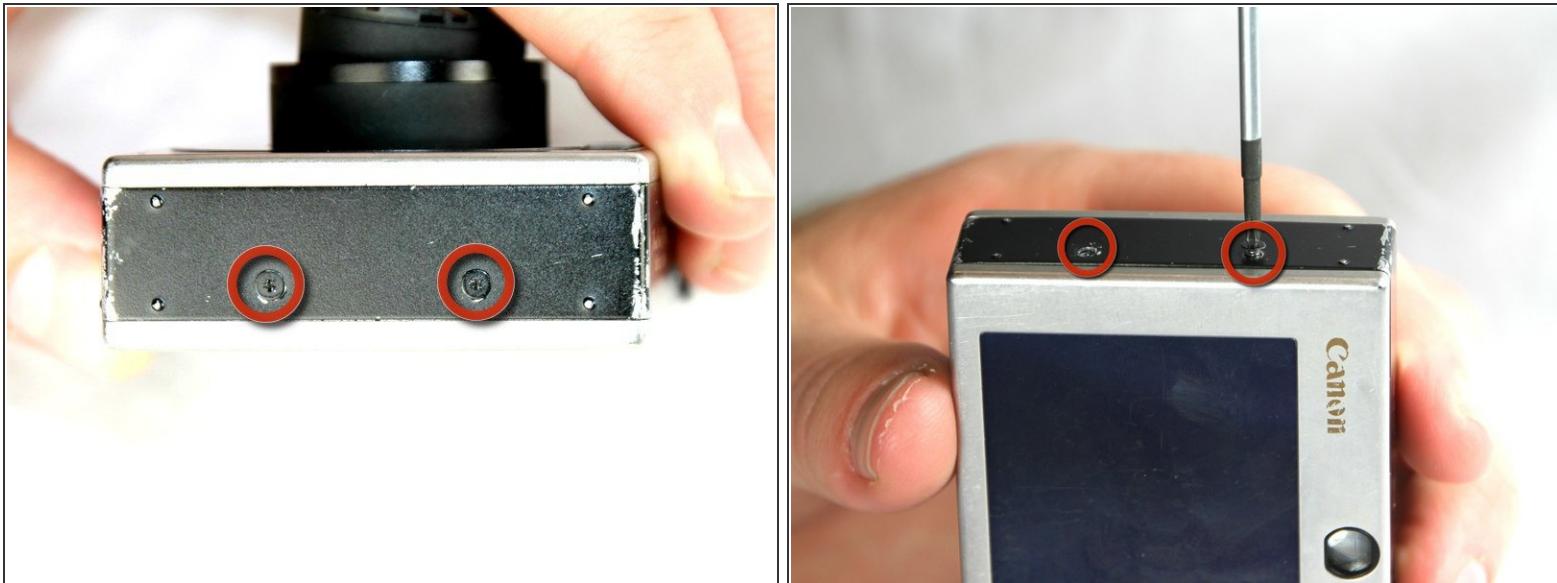

- Remove the two screws from the side panel closest to the camera lens.

(i) Note: These screws are 2.9 mm long.

Step 2



- Remove the two screws from the camera bottom panel.

(i) Note: These screws are 2.9 mm long.


Step 3



- Remove the 2 screws from the side panel farthest from the lens.


(i) Note: These screws are 2.9 mm long.

Step 4

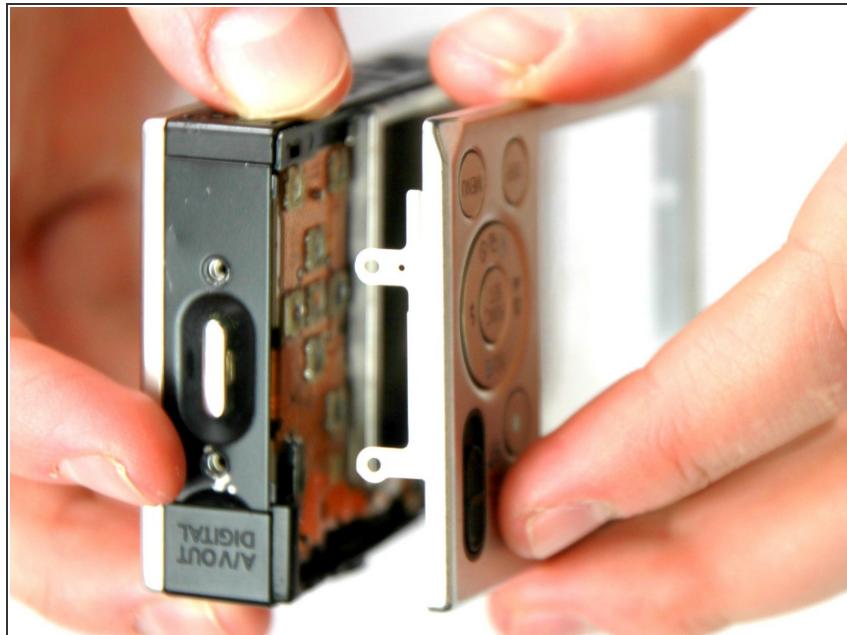


- Pull the back panel away from the camera body, starting at the end with the function buttons.

Step 5

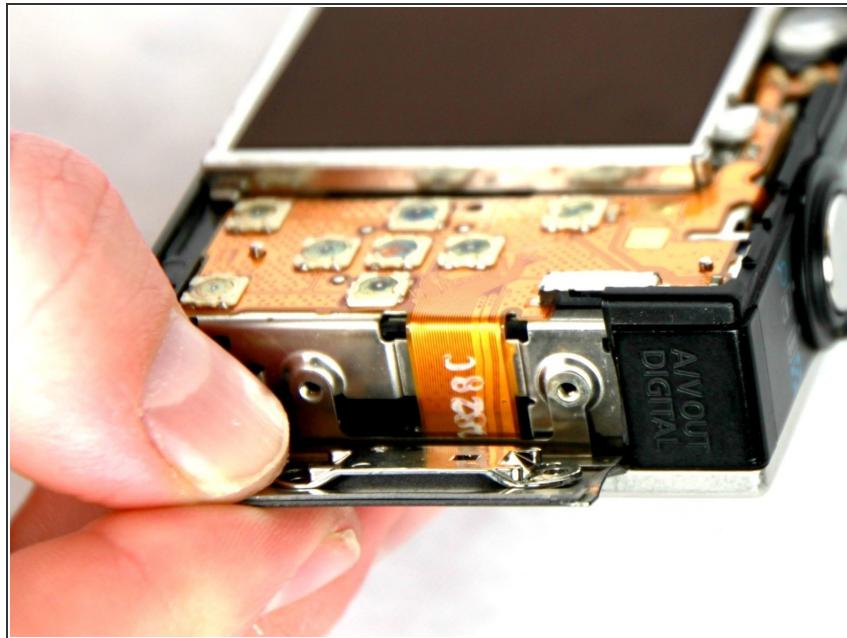

- Remove the small cover panel and attached wrist strap mount.

Step 6 — Front Case of Camera

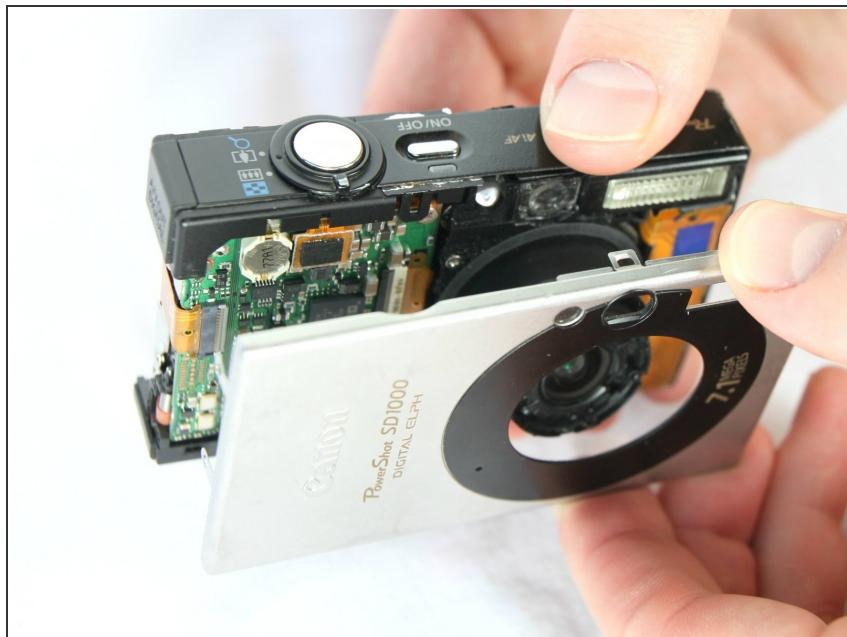


- Remove the front cover by gently pulling it away from the camera body.

Step 7



- Place the front cover, back cover, and wrist strap mount in a safe place until you are ready for reassembly.


Step 8 — LCD Screen

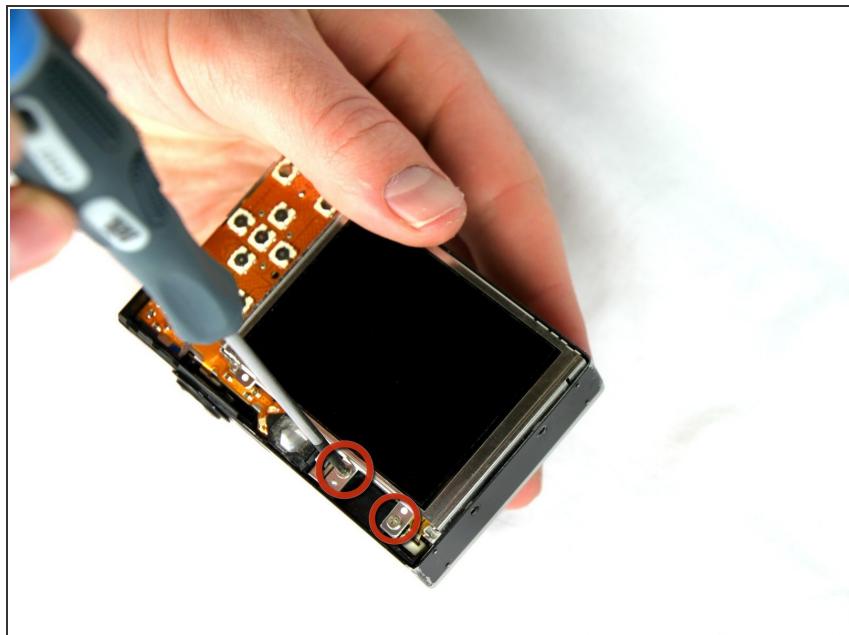

- Remove the 2 screws located at the top of the LCD panel.


i Note: These screws are 2.4 mm long.

Step 9

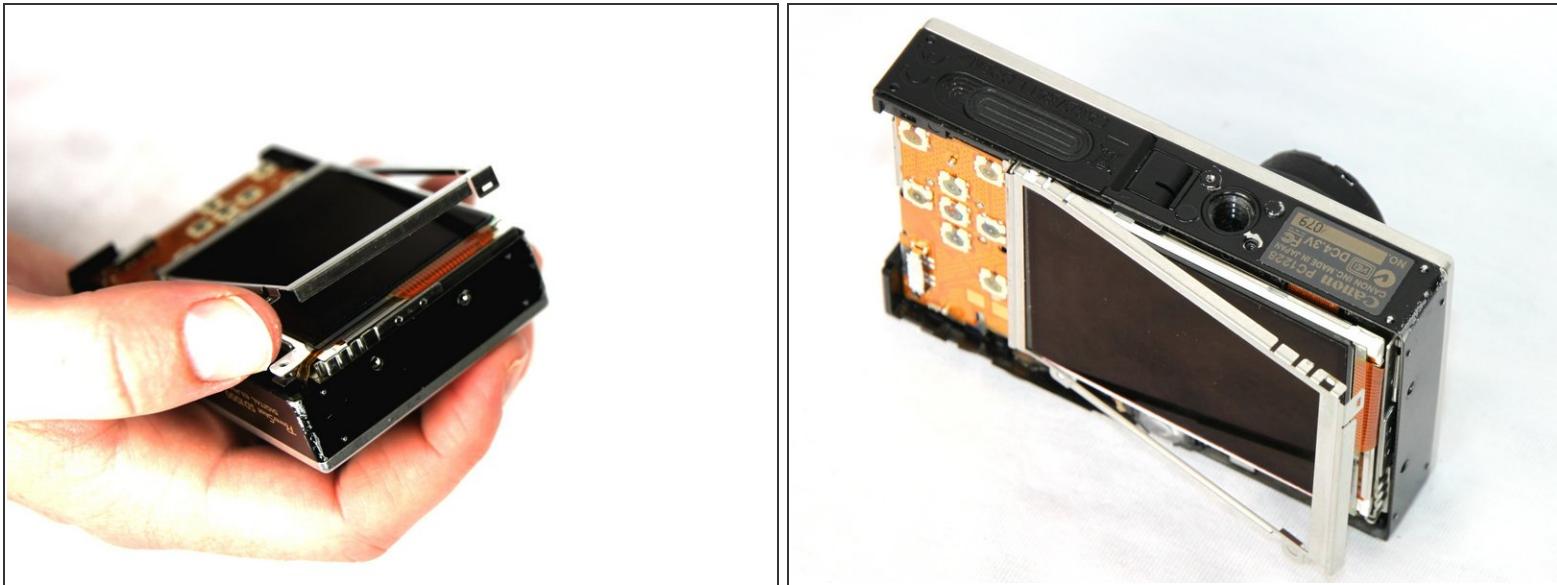

- Pull up the metal frame surrounding LCD screen starting at the side of the camera.


Step 10

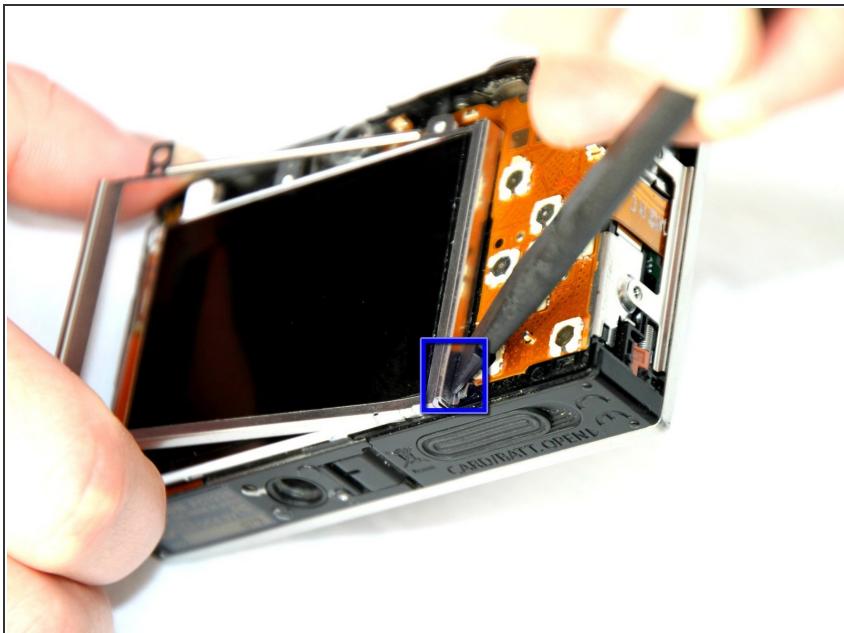

- Push the metal frame away from the metal tab using the spudger, to detach the frame.
- Rotate the metal frame upwards.

i Note: The metal framing should be attached by a metal tab towards the bottom of the camera, near the function buttons.


Step 11

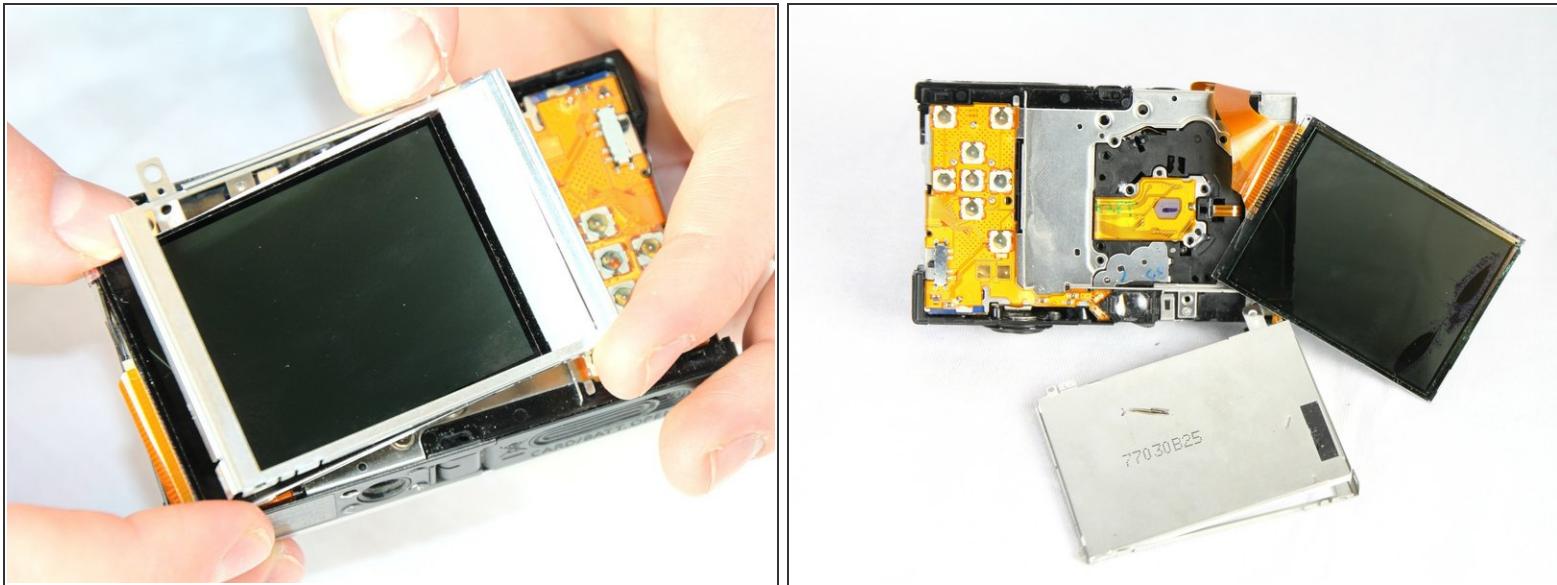

- Carefully lift the metal frame from the camera.
- Remove the black LCD screen, leaving the thin lens pieces in place.

⚠ Note: BE CAREFUL, both components are attached by an orange connector ribbon and cannot be removed yet!

Step 12

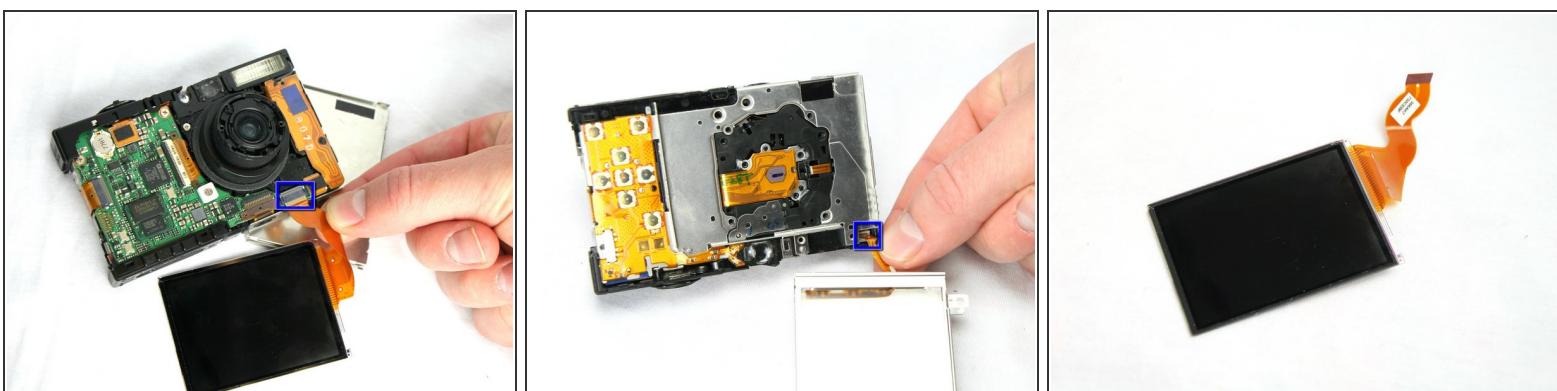

- Carefully pull on the orange connector ribbon to disconnect the LCD screen.
- The LCD screen can be pulled out of the frame before disconnecting its connector ribbon.

(i) Note: Tweezers are helpful to disconnect the ribbon

To reassemble your device, follow these instructions in reverse order.