



Canon PowerShot SD1000 Shutter Button Replacement

This details the removal of the shutter button after the removal of the case surrounding the LCD.


Written By: Phillip Phung



 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Back Panel

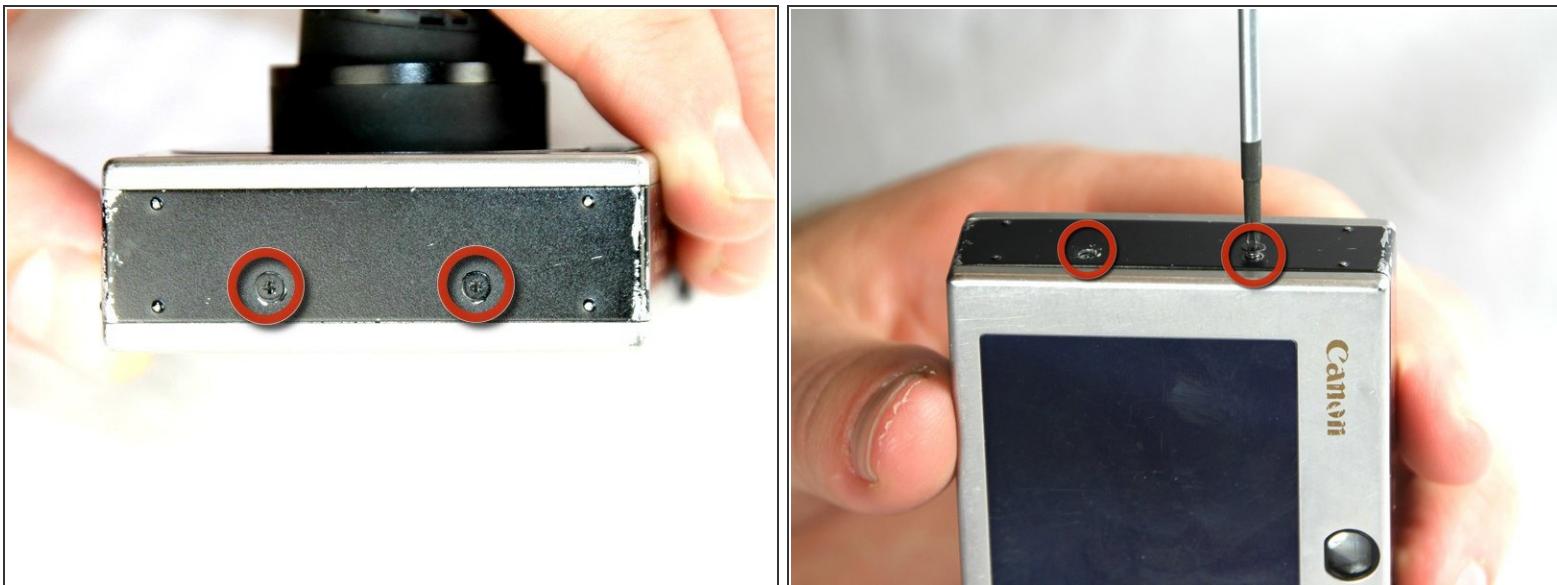

- Remove the two screws from the side panel closest to the camera lens.

(i) Note: These screws are 2.9 mm long.

Step 2



- Remove the two screws from the camera bottom panel.

(i) Note: These screws are 2.9 mm long.


Step 3



- Remove the 2 screws from the side panel farthest from the lens.


(i) Note: These screws are 2.9 mm long.

Step 4

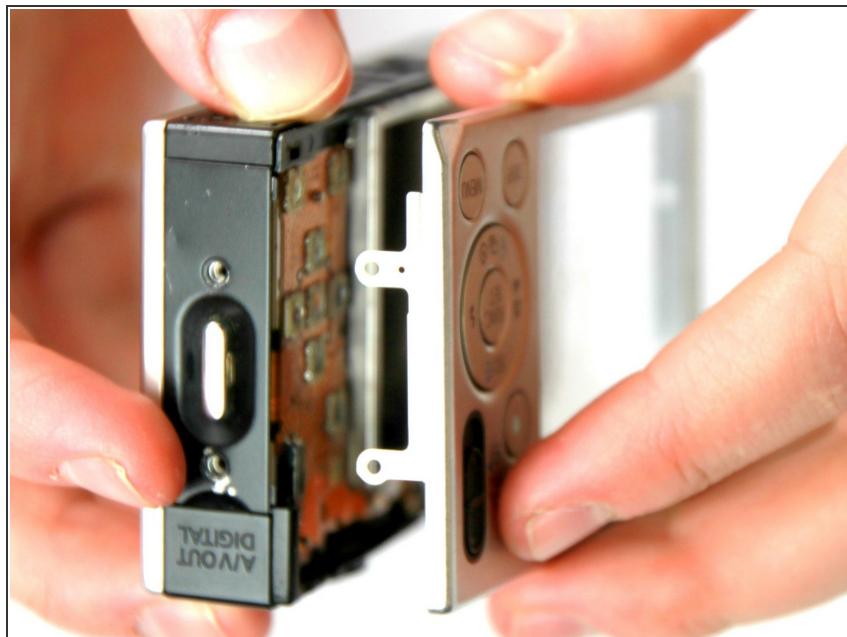


- Pull the back panel away from the camera body, starting at the end with the function buttons.

Step 5

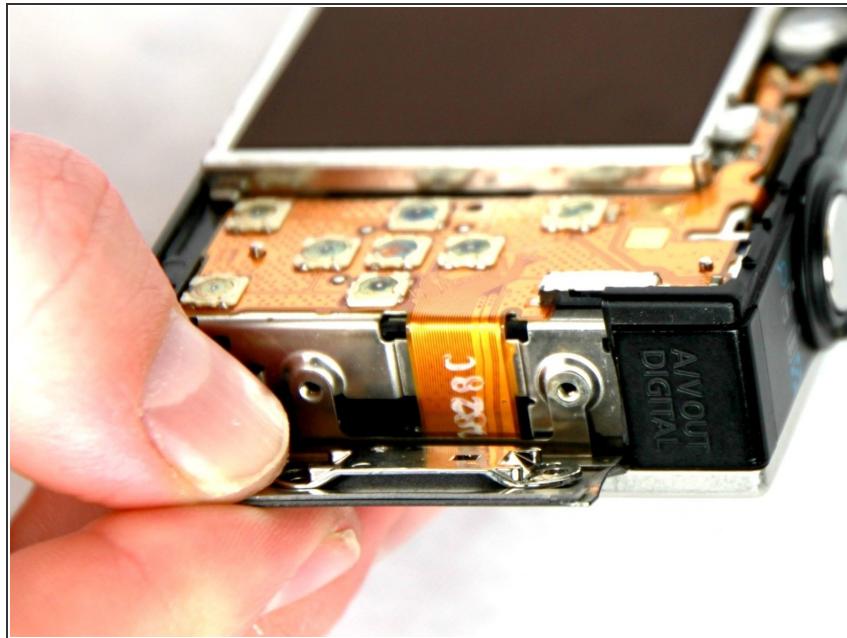

- Remove the small cover panel and attached wrist strap mount.

Step 6 — Front Case of Camera

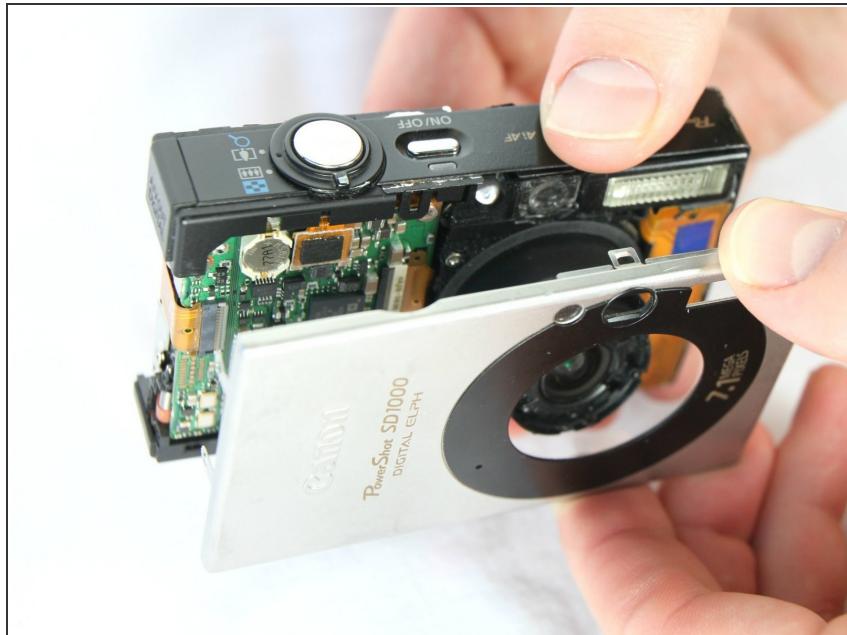


- Remove the front cover by gently pulling it away from the camera body.

Step 7



- Place the front cover, back cover, and wrist strap mount in a safe place until you are ready for reassembly.

Step 8 — Shutter Button

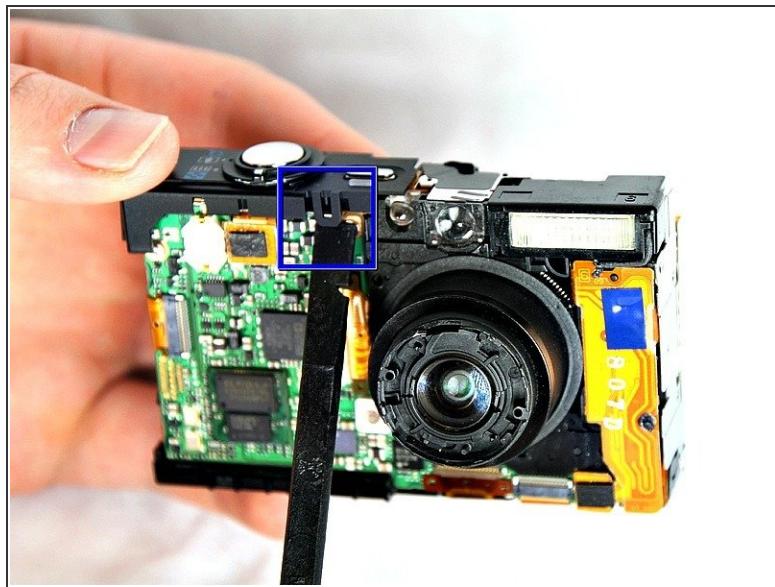

- Using the spudger, take off the shutter button by prying the small tab on the front side of the camera.

To reassemble your device, follow these instructions in reverse order.

