



# Canon PowerShot SD1300 IS Battery Replacement

This replacement guide is for a faulty Canon PowerShot SD1300 IS battery and is step by step on how to replace it.

Written By: Clayton



This document was generated on 2019-09-27 03:47:17 AM (MST).

## INTRODUCTION

This repair guide will show you how to properly replace a faulty battery to get your camera functioning and powering correctly.

## Step 1 — Battery



- Slide cover to open the battery compartment.

## Step 2



- Slide the battery compartment lever away from Canon PowerShot SD1300 IS to release the battery.

## Step 3



- Remove battery for replacement.

To reassemble your device follow steps in reverse order to fully replace your faulty battery. The device should power on and be functioning as normal.