


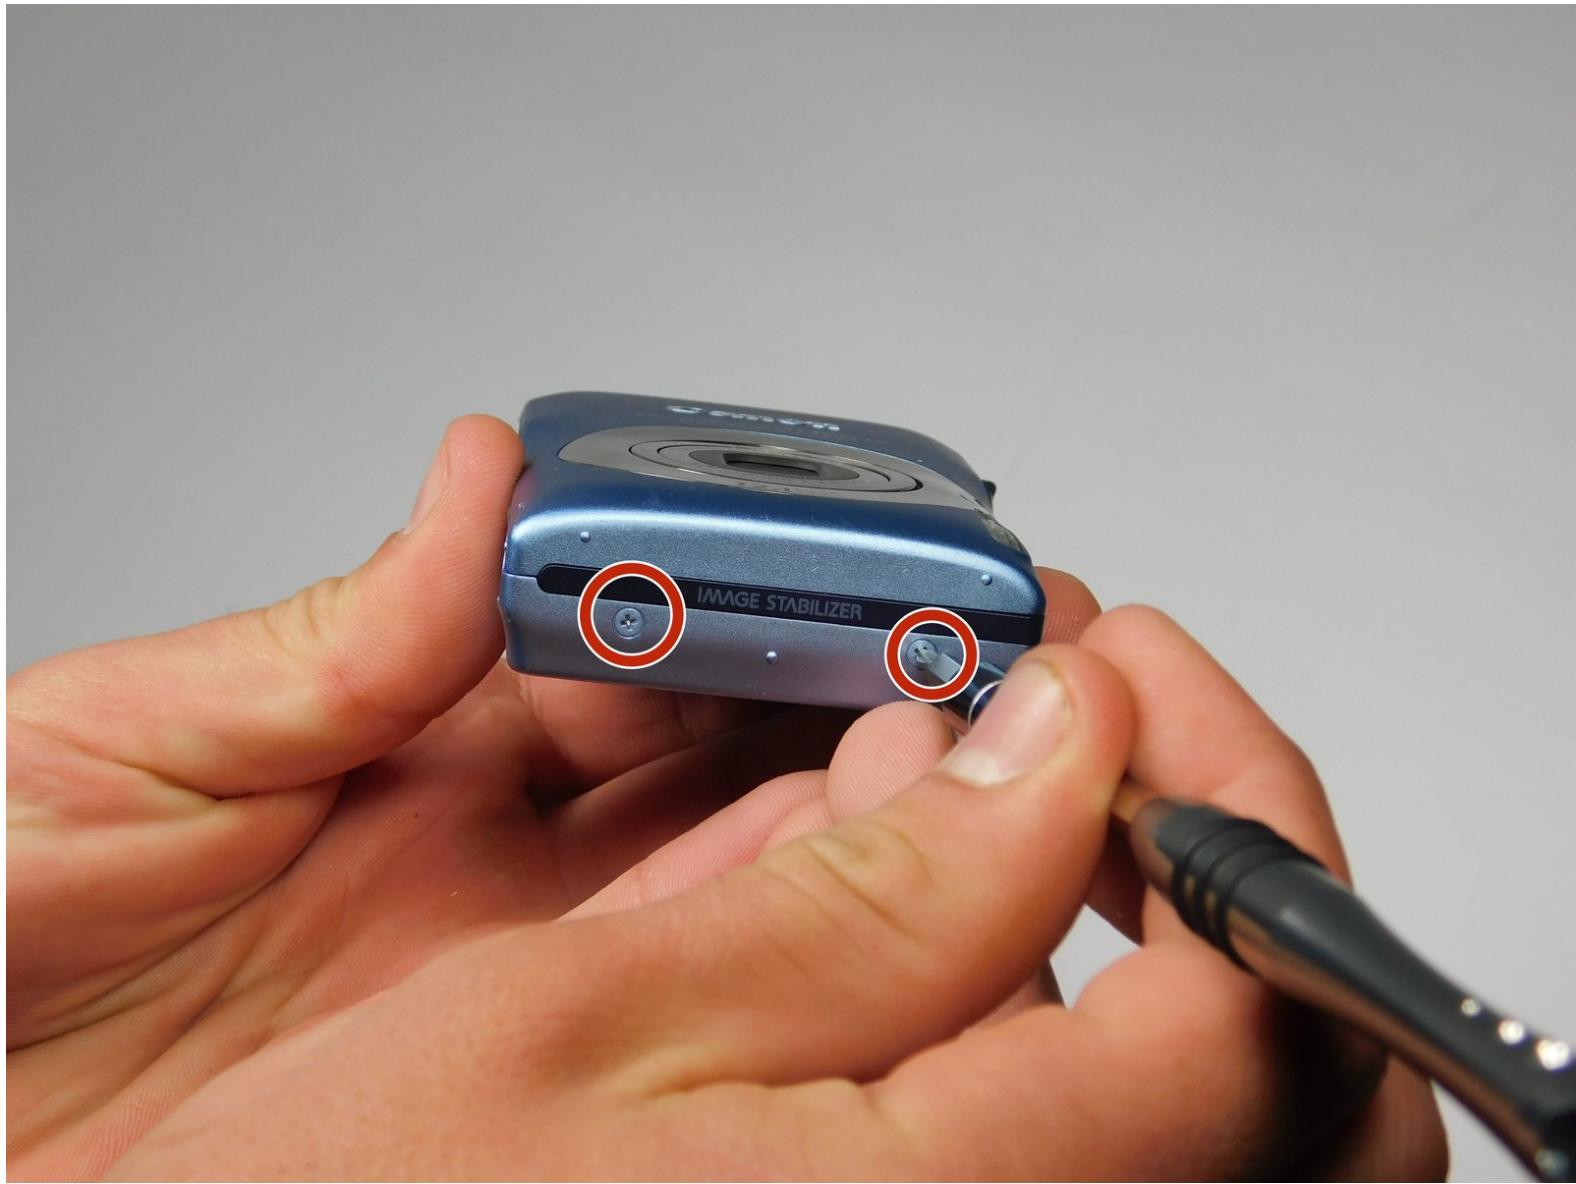

Canon PowerShot SD1300 IS Screen Replacement

In summary this guide will demonstrate how to properly replace a broken or faulty screen on the Canon PowerShot SD1300 IS.

Written By: Clayton



This document was generated on 2019-09-28 08:57:21 PM (MST).

INTRODUCTION

This guide will show you how to properly replace the screen on your Canon Powershot SD1300 IS.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [JIS Driver Set](#) (1)

J00

Step 1 — Screen



- Remove the two 2mm J00 screws on the right exterior.
- Remove a single 4 mm J00 on the bottom exterior.
- Remove a single 3mm J00 on the left exterior.

Step 2




- Once the front shell of the camera is removed the back shell should slide off just the same.

Step 3



- Use one of your plastic opening tools to separate the screen from the main body of your PowerShot.

Step 4

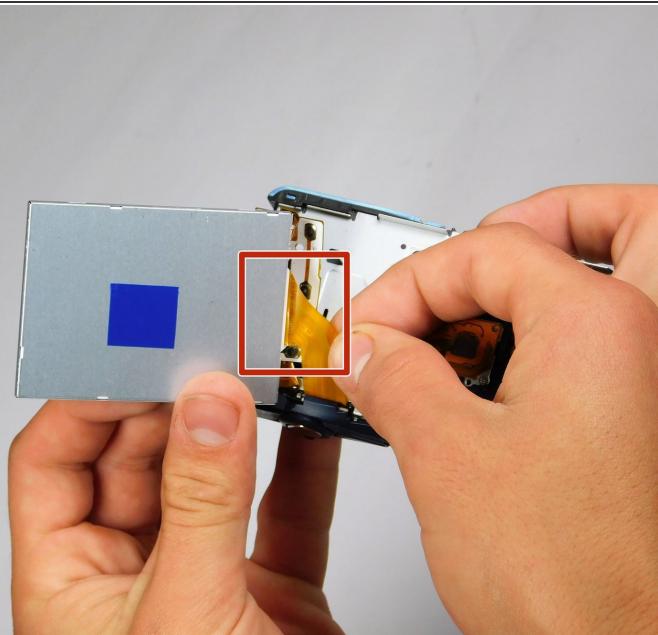

- Hold screen and remove connecting power cord by pulling cord away from the faulty screen.

To reassemble your device, follow these instructions in reverse order.