



Canon PowerShot SD1400 IS User Interface Panel Replacement

Replace your broken or unresponsive button panel in order to use the Canon PowerShot SD1400 IS.

Written By: Braxton Beal



This document was generated on 2019-10-05 04:25:33 AM (MST).

INTRODUCTION

The buttons on the user interface panel can become broken or stuck. This guide will show how to replace the user interface panel on the Canon PowerShot SD1400 IS.

TOOLS:

- Metal Spudger (1)
- iFixit Opening Tools (1)
- 64 Bit Driver Kit (1)

PARTS:

- Canon Powershot SD1400 IS Back Panel Replacement Kit (1)

Step 1 — User Interface Panel



- Remove the four 2.0 mm Phillips screws of the camera using the J00 bit from the 54-bit Driver Kit. There are two screws on both sides.

Step 2



- Remove the 4.0 mm Phillips screw located on the bottom of the camera.

Step 3



- Remove the front face panel of the camera by hand using firm pressure.
- If one point of the face is stuck to the body, check if there is a screw preventing the front face from coming off.

Step 4



- Remove the rear panel of the camera by hand using firm pressure.

Step 5



- Remove the user interface panel by hand. The panel may fall out on its own, this is normal.
- Replace the user interface panel by setting it in position.

To reassemble your device, follow these instructions in reverse order.