




# Canon PowerShot SD200 Memory Card Replacement

This guide will show how to remove the memory card from the Canon PowerShot SD200.


Written By: James Loy

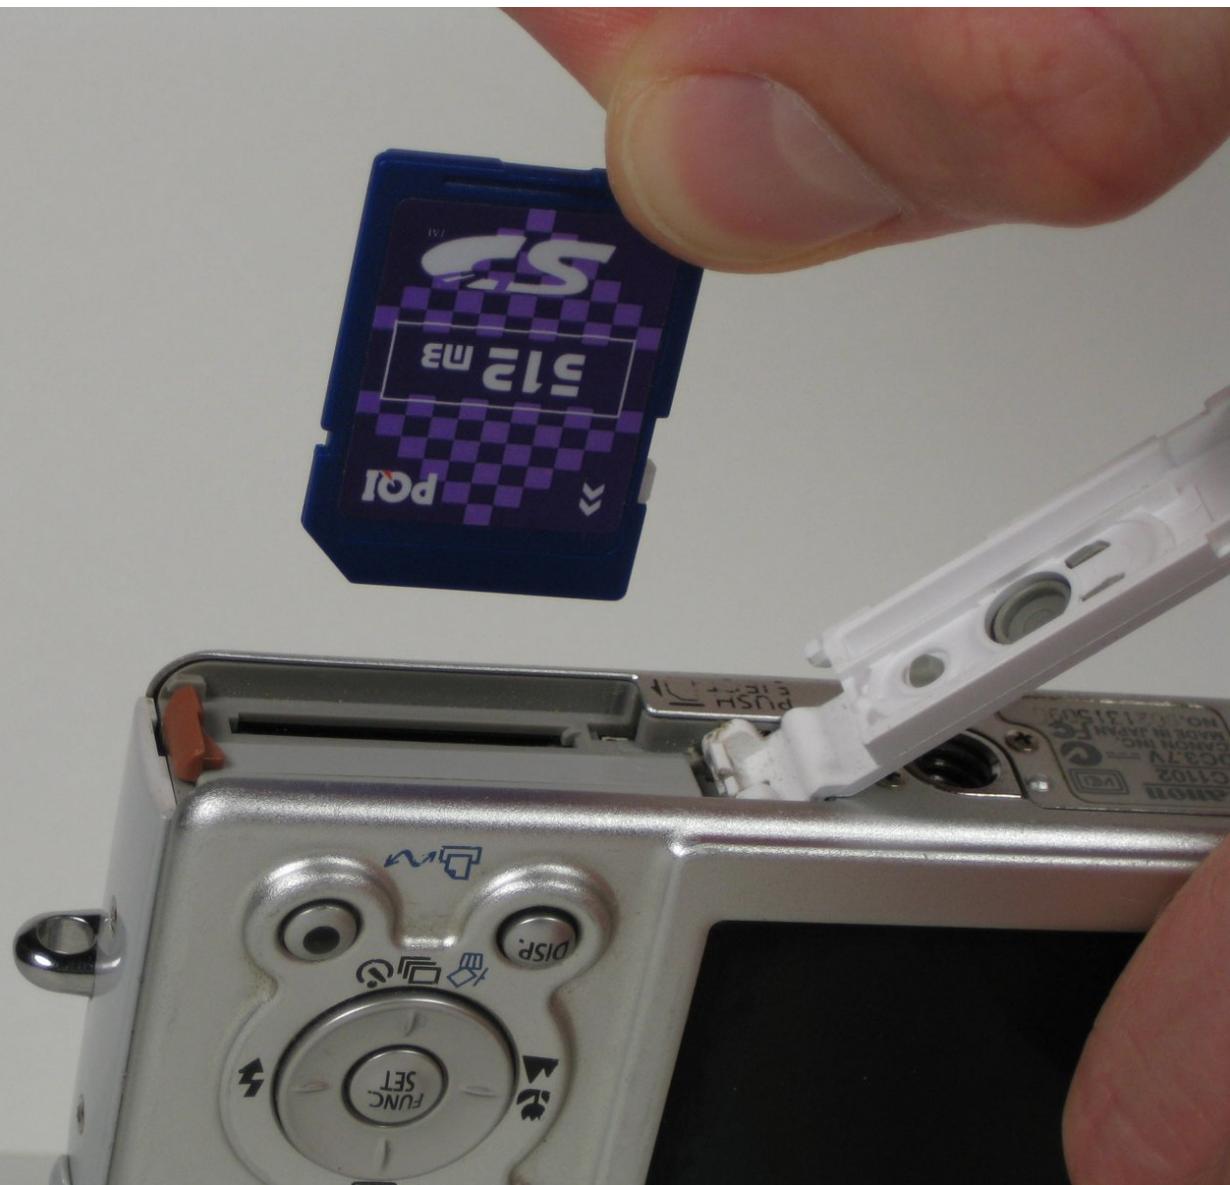

## INTRODUCTION

The Canon PowerShot SD200 has an opening for a SD Memory Card. Removing the memory card might be necessary to obtain pictures from the camera. This guide will show how to easily remove the memory card.

## Step 1 — Memory Card

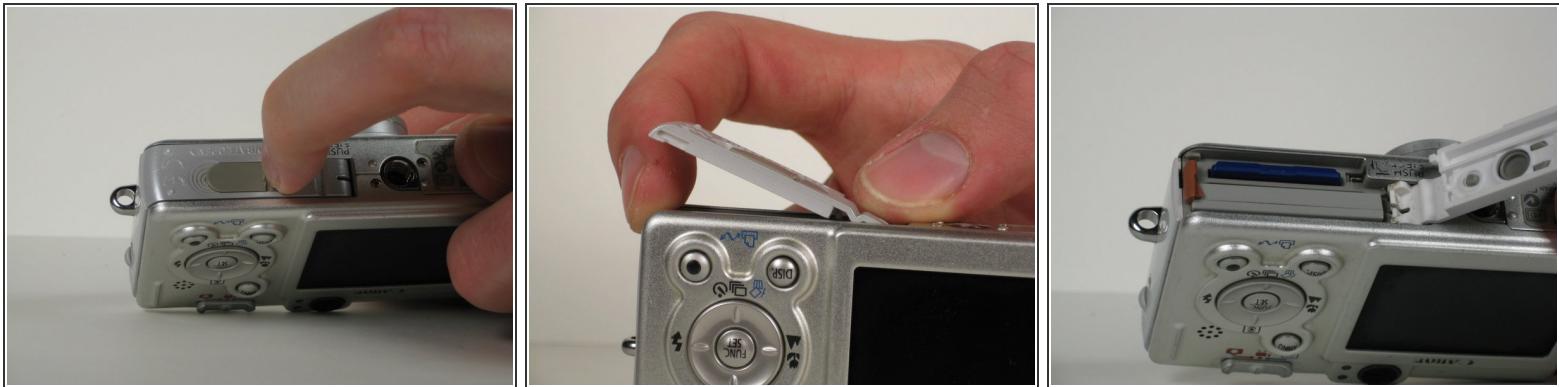

- Use your fingernail to slide the dark gray tab towards the edge of the camera.
- Slide the light gray door away from the LCD screen and pull up to open the door.

***(i)*** The battery and the memory card slots should now be visible.

## Step 2



- Press down on the memory card.
- Memory card should pop out of place.
- Pull the memory card straight out of the slot.

**** When putting the memory card back in, orient the memory card in the same direction when pulling out.

To reassemble your device, follow these instructions in reverse order.