



# Canon PowerShot SD30 Back Cover Replacement

Remove the back cover of the camera to access the deeper components of your Canon PowerShot SD30.

Written By: Ime Ekpo



This document was generated on 2019-09-29 01:20:47 PM (MST).

## INTRODUCTION

This guide is required in order to replace any of the deeper components in the camera. Any component of the camera cannot be reached unless the back cover is removed.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Back Cover



ⓘ Remove the wrist strap and battery before removing the back cover.

- Remove the 2mm screw from the back of the camera.
- Remove two 2mm screws from the bottom of the camera.
- Remove two 2mm screws the left side of camera.

## Step 2



- Gently remove the back cover.

To reassemble your device, follow these instructions in reverse order.

