




# Canon PowerShot SD30 Front Cover Replacement

Remove the front cover of the digital camera to access the deeper components of your Canon PowerShot SD30.

Written By: Ime Ekpo

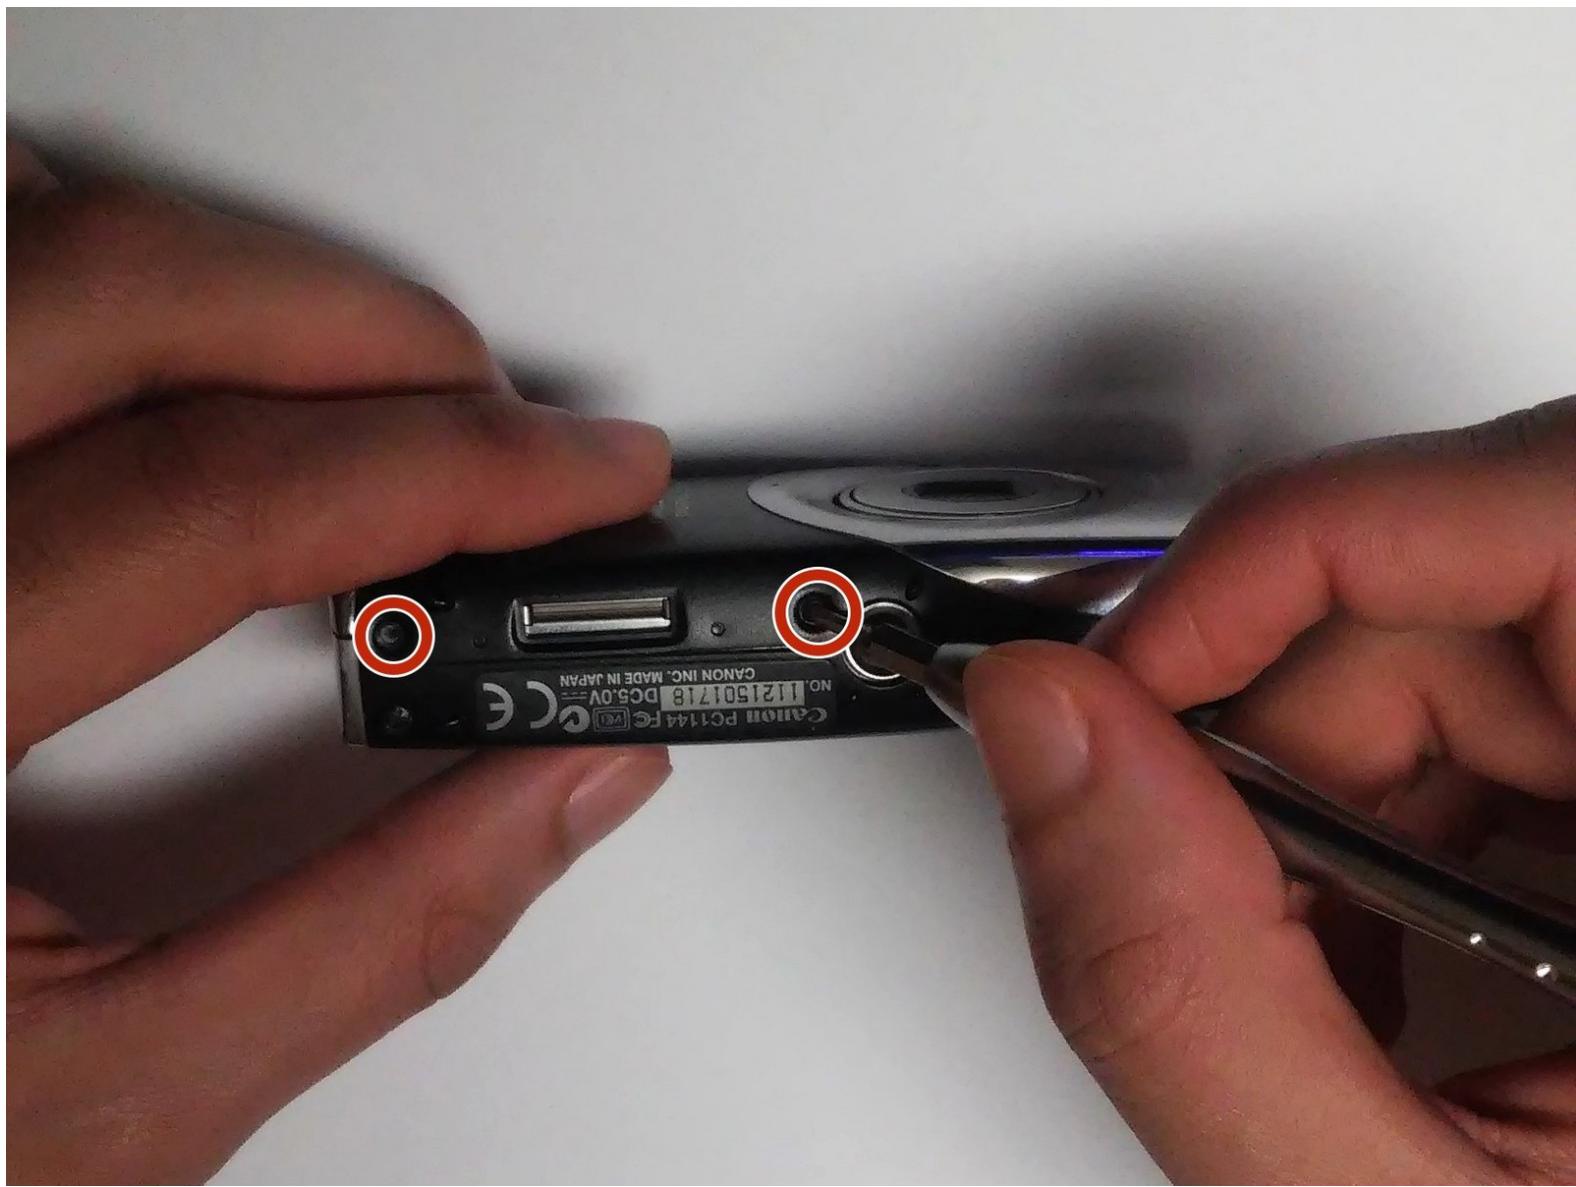

This document was generated on 2020-04-04 05:06:12 AM (MST).



## INTRODUCTION

This guide is required in order to replace any other component that needs replacing. You cannot access any other component if the front cover is attached.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)


## Step 1 — Front Cover

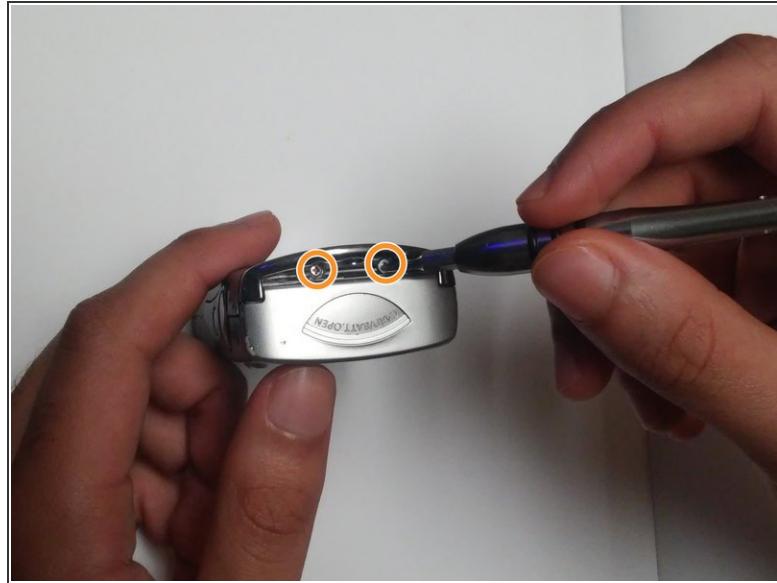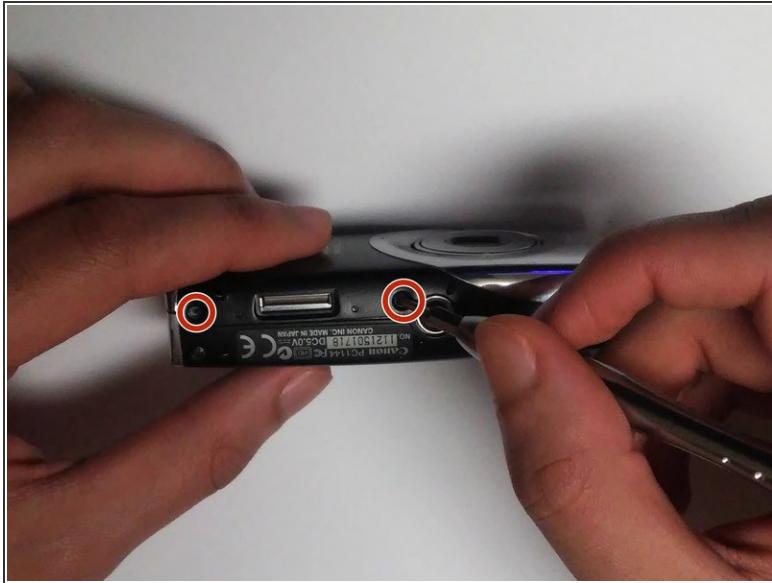

*(i)* Be sure to remove the wrist strap and battery before removing the cover.

- Remove the two 2mm black screws that are located on the underside of the camera.
- Remove the two 3mm silver screws from the right side of camera.

## Step 2

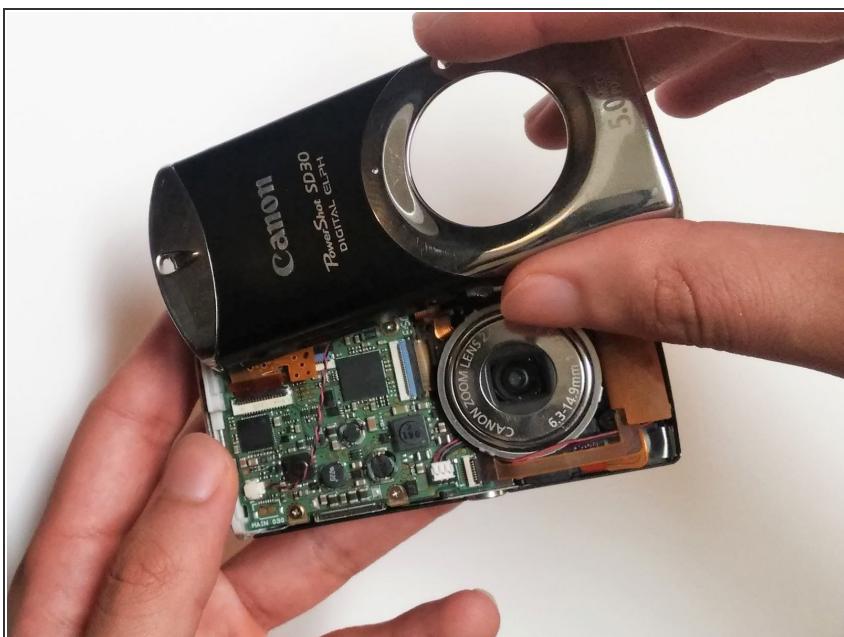

- Gently remove the front cover.

To reassemble your device, follow these instructions in reverse order.