



Canon PowerShot SD400 Battery Replacement

Written By: Yi Huang Ke




Step 1 — Battery




- Slide the battery cover open (indicated by the blue box).

Step 2

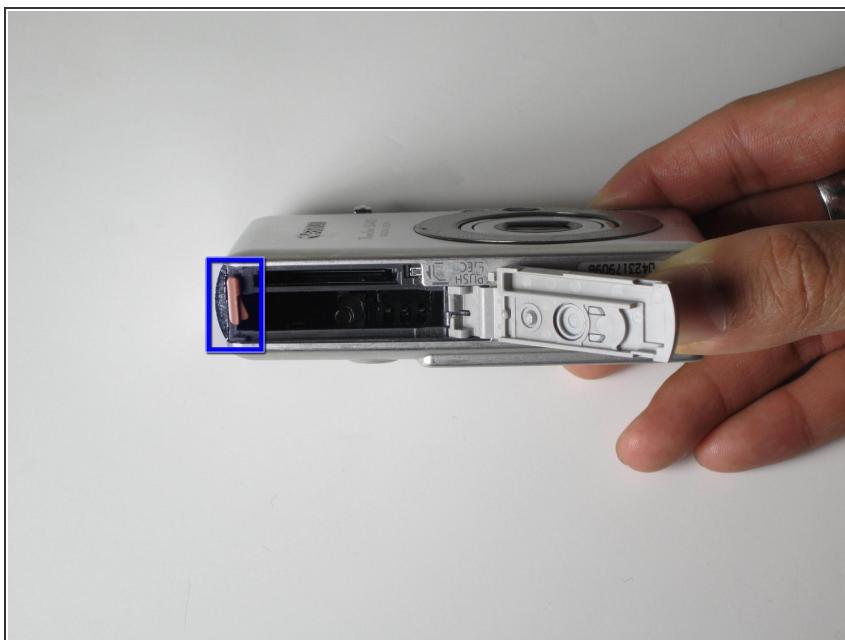

- Push in the orange clip (indicated by the blue box) to eject the battery.

Step 3

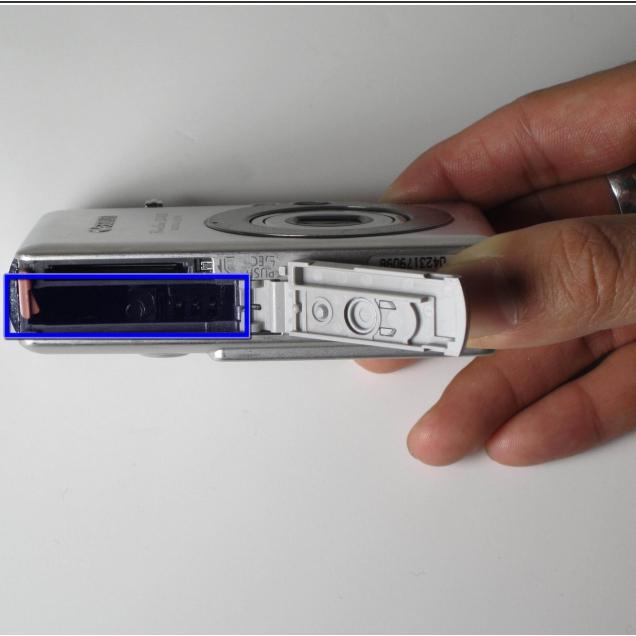

- Insert the charged battery back into the slot (indicated by the blue box).
- Close the cover.

To reassemble your device, follow these instructions in reverse order.