



Canon PowerShot SD400 LCD Replacement

This guide will walk you through replacing the LCD on a Canon PowerShot SD400.

Written By: Yi Huang Ke



 **TOOLS:**

- **Phillips #00 Screwdriver (1)**

Step 1 — LCD




- There are 6 screws total that you need to remove in order to open the case (bottom and both sides, each has 2 screws)

Step 2




- Carefully remove the exterior screws using a screwdriver and put them somewhere safe so they will not get lost.

Step 3

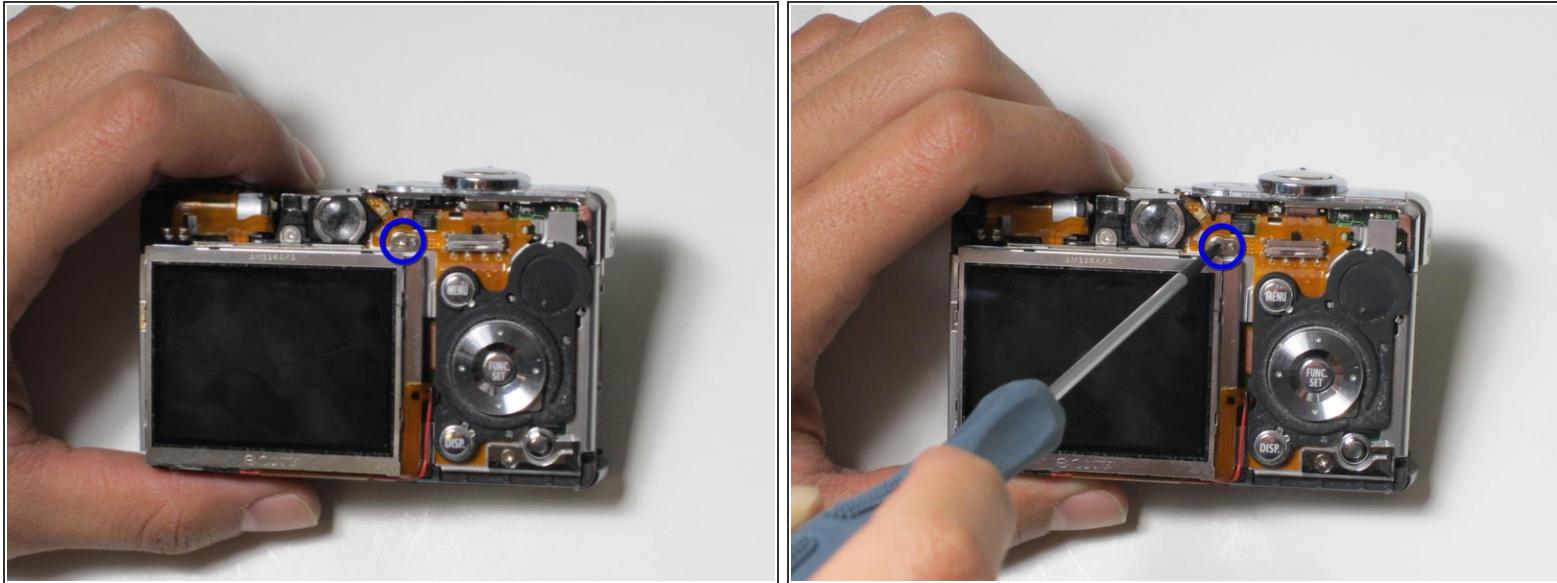

- Remove the interior screws using screwdriver

Step 4

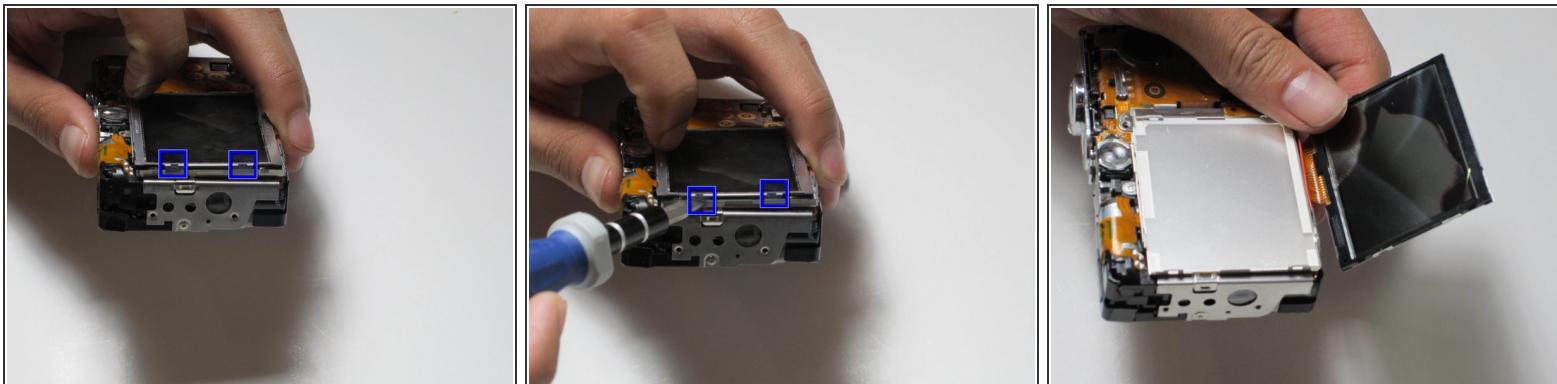

- Insert the flat-head screwdriver under the LCD screen into the two clips.

 Lift up the LCD screen. Be careful not to rip the screen off.

To reassemble your device, follow these instructions in reverse order.