



Canon PowerShot SD500 Digital ELPH LCD Replacement

This guide shows how to disassemble the Powershot SD500 Digital ELPH camera and replace the LCD screen.

Written By: Taylor Shields



This document was generated on 2019-09-23 08:45:39 AM (MST).


INTRODUCTION

Many companies sell only LCD screens, not complete screen assemblies. When replacing your broken LCD screen, it may be necessary to tear down the screen even further.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Battery

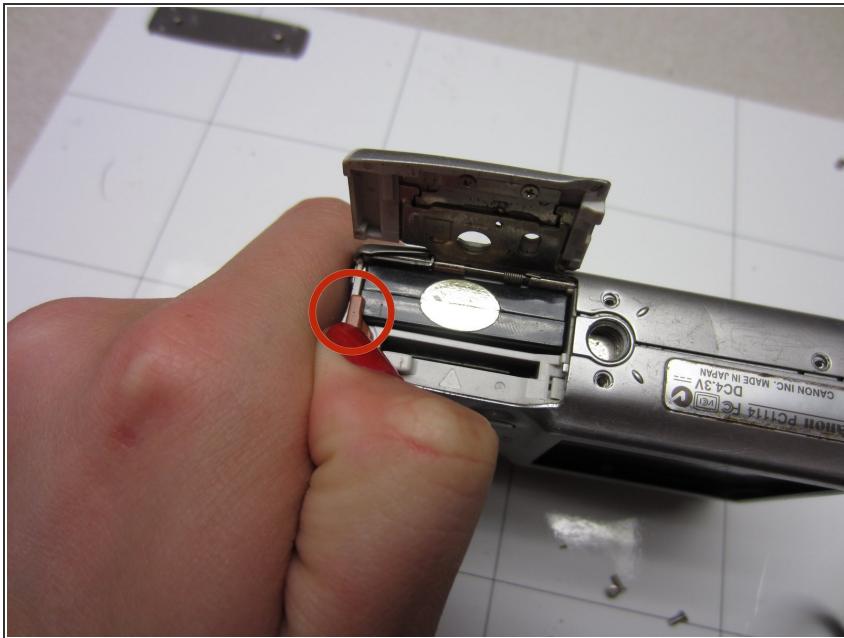

- Slide open the battery cover.
- Push the small orange tab to the side so the battery can be removed.

Step 2




- Slide the battery out of the battery compartment.

Step 3 — Front and Rear Casing



- Two Phillips screws need to be removed using a #00 Phillips screwdriver. The upper screw is under the USB port cover, which can simply be pulled away gently from the casing. the lower screw is visible on the panel.
 - The screws are different sizes. The .125 inch screw is located under the USB port cover. The 0.85 inch screw goes in the lower hole on the panel.
- i*** When looking at the back of the camera, these two screws are on the right panel of the camera.

Step 4

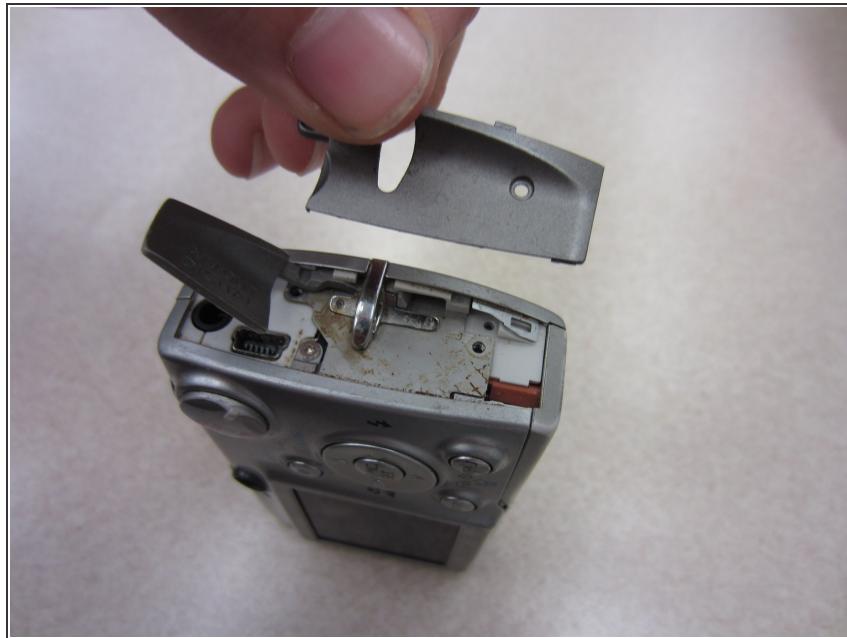

- Remove the right side cover from the camera casing.

Step 5



- Remove a .07 inch Phillips screw using a #00 Phillips screwdriver.

Step 6



- Remove two .085 inch Phillips screws from the left side of the camera using a #00 Philips screwdriver.

Step 7



- Remove the left side cover from the camera.

Step 8



- Remove three .15 inch Phillips screws from the bottom of the camera using a #00 Phillips screwdriver.

Step 9



- Once the casing is unscrewed, hold the camera with one side facing down, and lift the opposite face of the casing to open it.
 - Remove the internal camera components and layout out all pieces on a clean surface.
- (i)* The front and back cover may require gentle rocking to remove.

This document was generated on 2019-09-23 08:45:39 AM (MST).

Step 10 — Button Contact Panel



- Carefully wedge the pry tool under the ribbon in the ribbon gate.
- Gently remove the ribbon from the ribbon gate by pulling it away from the gate with the pry tool.

 Be careful not to damage the ribbon.

Step 11



- Gently press the ribbon back to get access to a Phillips screw behind it.
- Be careful not to damage the ribbon.
- Unscrew two .125 inch long Phillips screws using a #00 Philips screwdriver.

Step 12



- Remove the ribbon with a pry tool by gently pulling it out of the ribbon gate tab.

 Be careful not to damage the ribbon.


- Pull the button board away from the rest of the camera.

Step 13 — LCD




- Unscrew one .113 inch Phillips screw using a #00 Phillips screwdriver.

Step 14

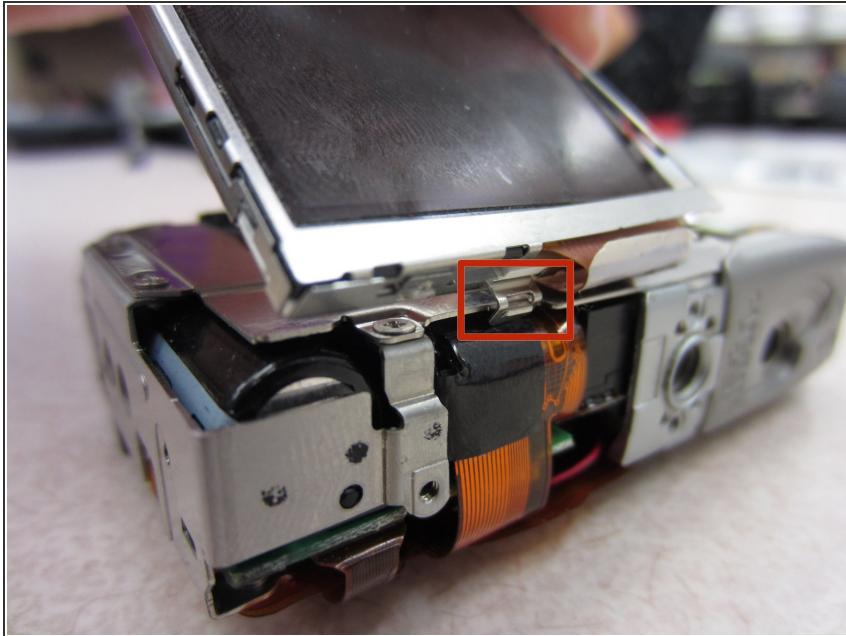

- Lift the LCD screen up and away from the tab that holds it in place on the face of the camera.
- ⚠** Be careful, the LCD screen is still connect to the camera by a ribbon cable.

Step 15

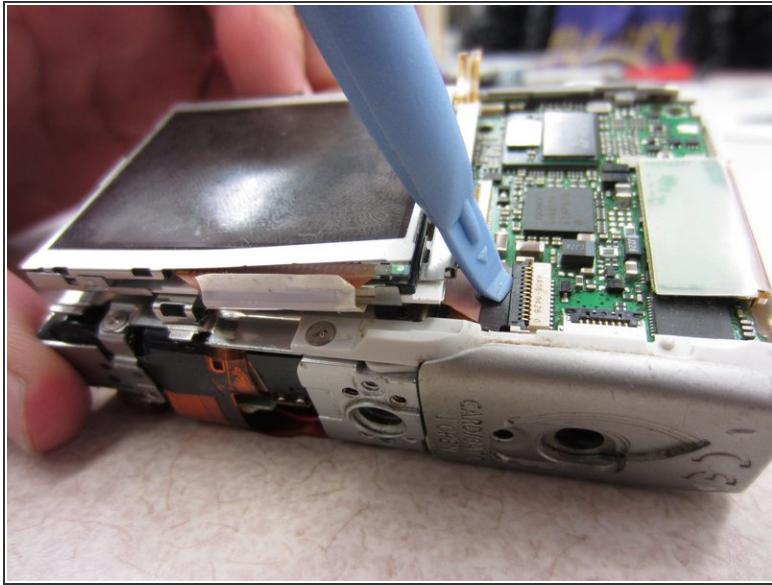

- Gently press the pry tool under the ribbon gate and lift up to free the ribbon connecting the LCD to the circuit board.
- ⚠** Be careful not to damage the ribbon.
- The LCD can now be completely removed from the camera.

This document was generated on 2019-09-23 08:45:39 AM (MST).

To reassemble your device, follow these instructions in reverse order.